## DR005 Installation Instructio

Please be sure to use a manual screwdriver and refrain from using an electric drill.





one. Product accessories and quantity

(It is recommended to put more spare screws)

4*40 self-tapping screws	4*16 handle screw	3	3.5*12 self-tapping screws		Gas weighing rod
B4*20 (includes spare plus 2)	B8*3 (includes spare plus 2)	(i	A1*18 (includes spare plus 2)		S2*1
+					
Eccentric rod + eccentric wheel	Iron partition pin	Gold	Golden round table handle		Square hinge
D14*16 (includes spare plus 2)	K0*3 (includes spare plus 2)		J15*2		F0*2
Power supply cord (included only for models with lights)			screwdriver		
1			1		

### Kind tips:


1. Please distinguish the boards according to the drawings when installing.

The color of the product is not subject to the instruction


manual; 2. Tighten the screws 70%, and then tighten them after all is completed;

- 3. Some boards have a red side, and the red side faces down or inward;
- 4. Please read all the drawings before proceeding with installation;
- 5. If there are extra screw accessories, they are spare screws provided by the manufacturer!


### 2. Installation steps of eccentric parts

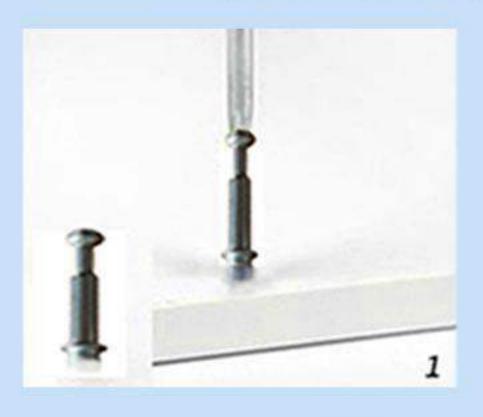


Screw the eccentric rod to the board

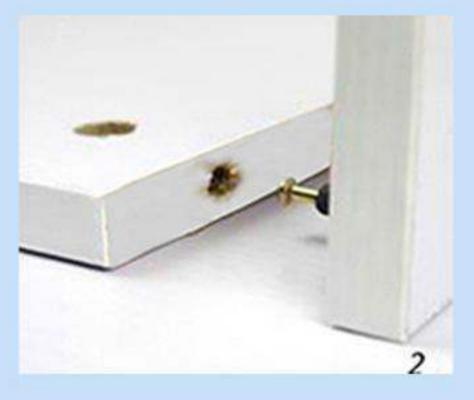


Find the corresponding board and insert it

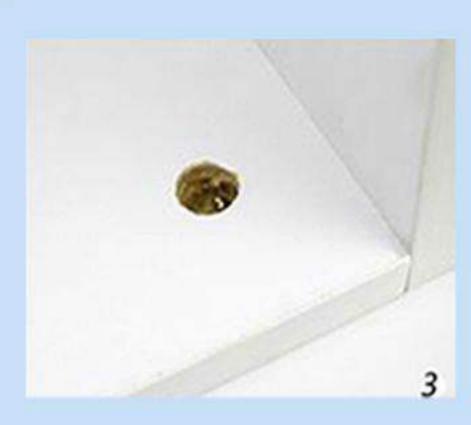

find round hole

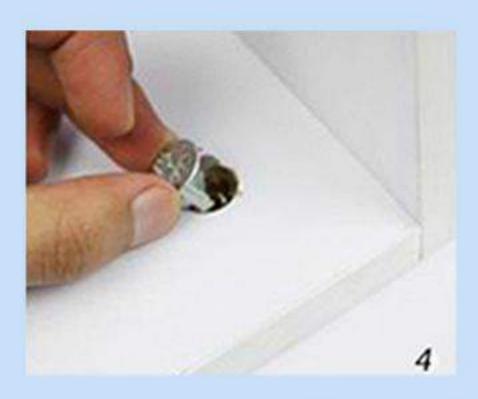

Insert the eccentric wheel into the round hole

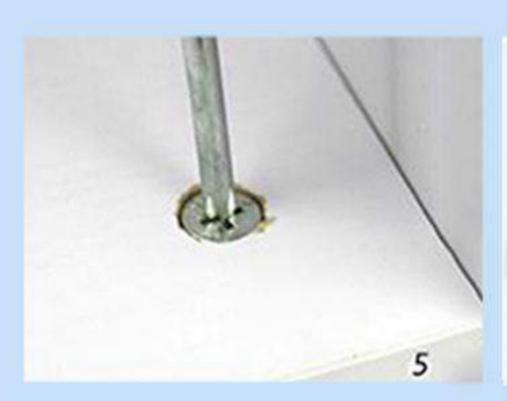



Rotate 180° clockwise to lock



#### 3. Hinge installation steps:

 Door gap is too big



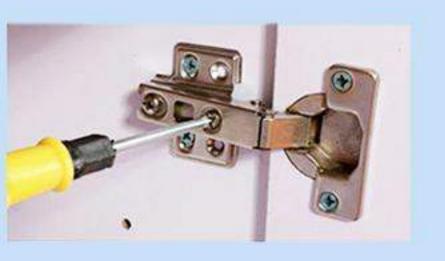

As shown in the picture, the screw pointed by the screwdriver is used to adjust the cabinet door gap. Turning it clockwise will adjust the door panel gap to become smaller.




As shown in the picture, the screw pointed by
the screwdriver is used to adjust the front and rear
position of the door panel. First loosen the
screw counterclockwise, and then adjust the position
of the door panel front and back. After the position
adjustment is completed, tighten the screw clockwise.

#### Door panels are uneven






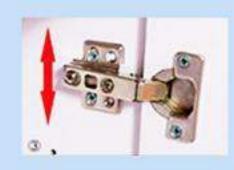


As shown in the picture, the screw pointed by
the screwdriver fixes the door panel to the side
panel. First loosen the screw clockwise, then adjust
the position of the door panel up and down.


After adjusting the door panel to be flush, tighten
the screw clockwise.




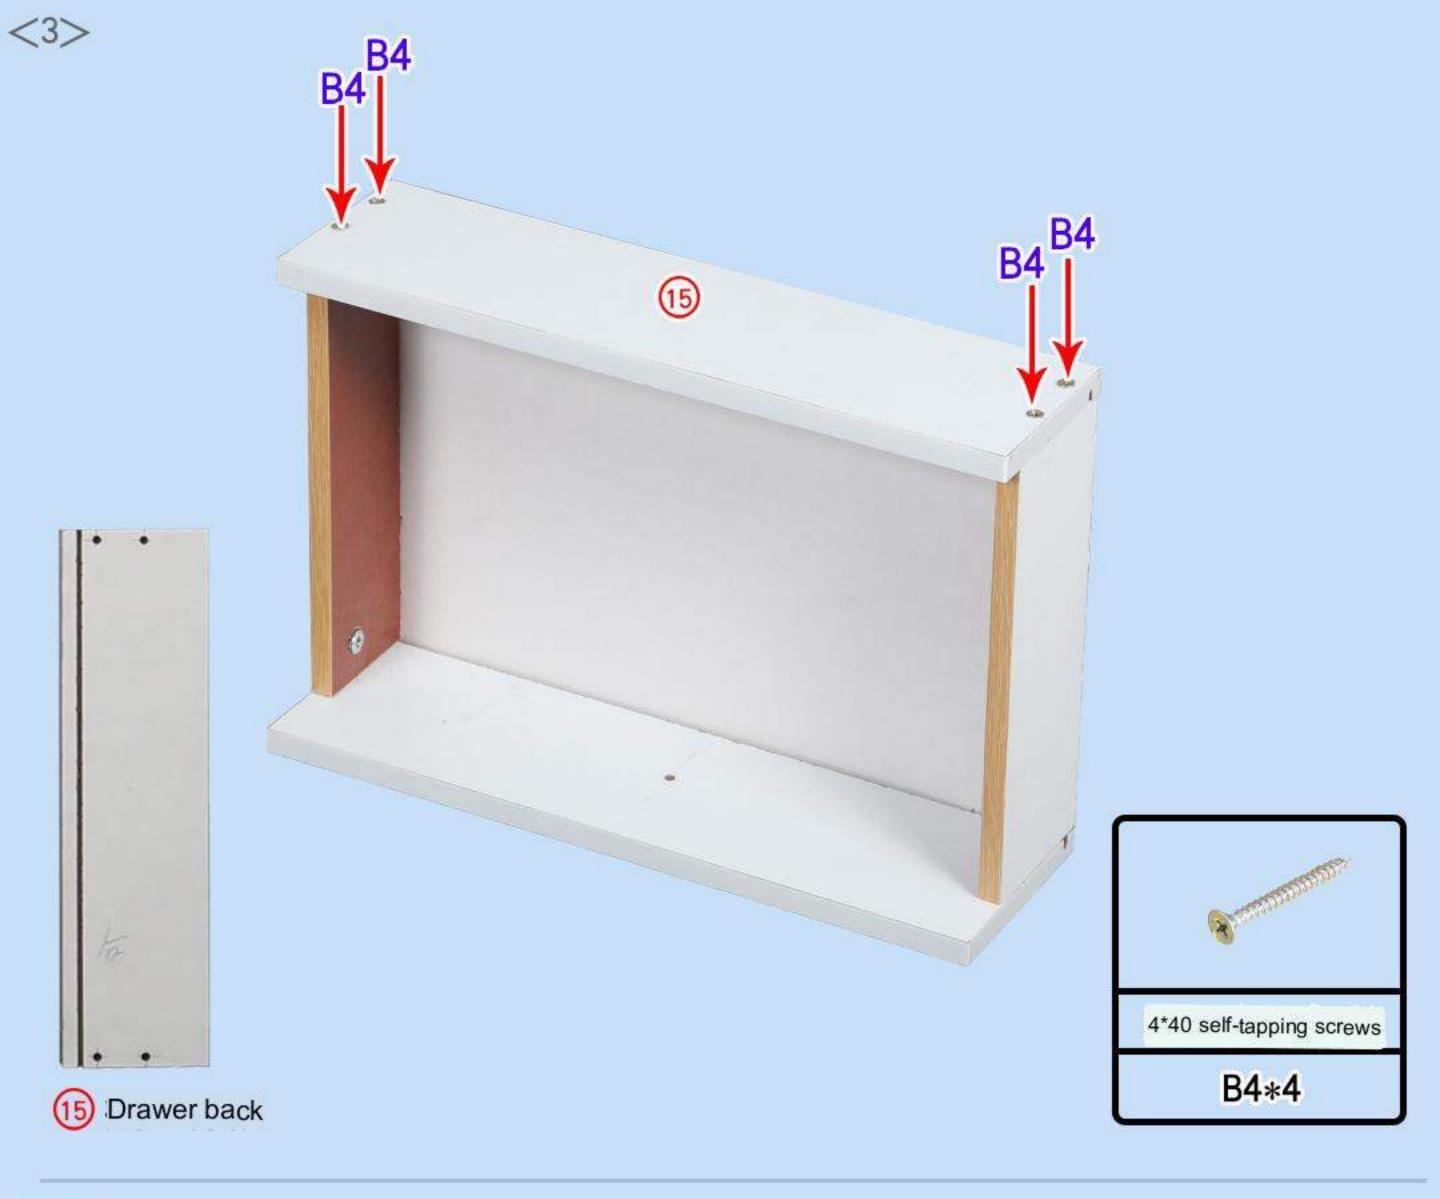



<4>

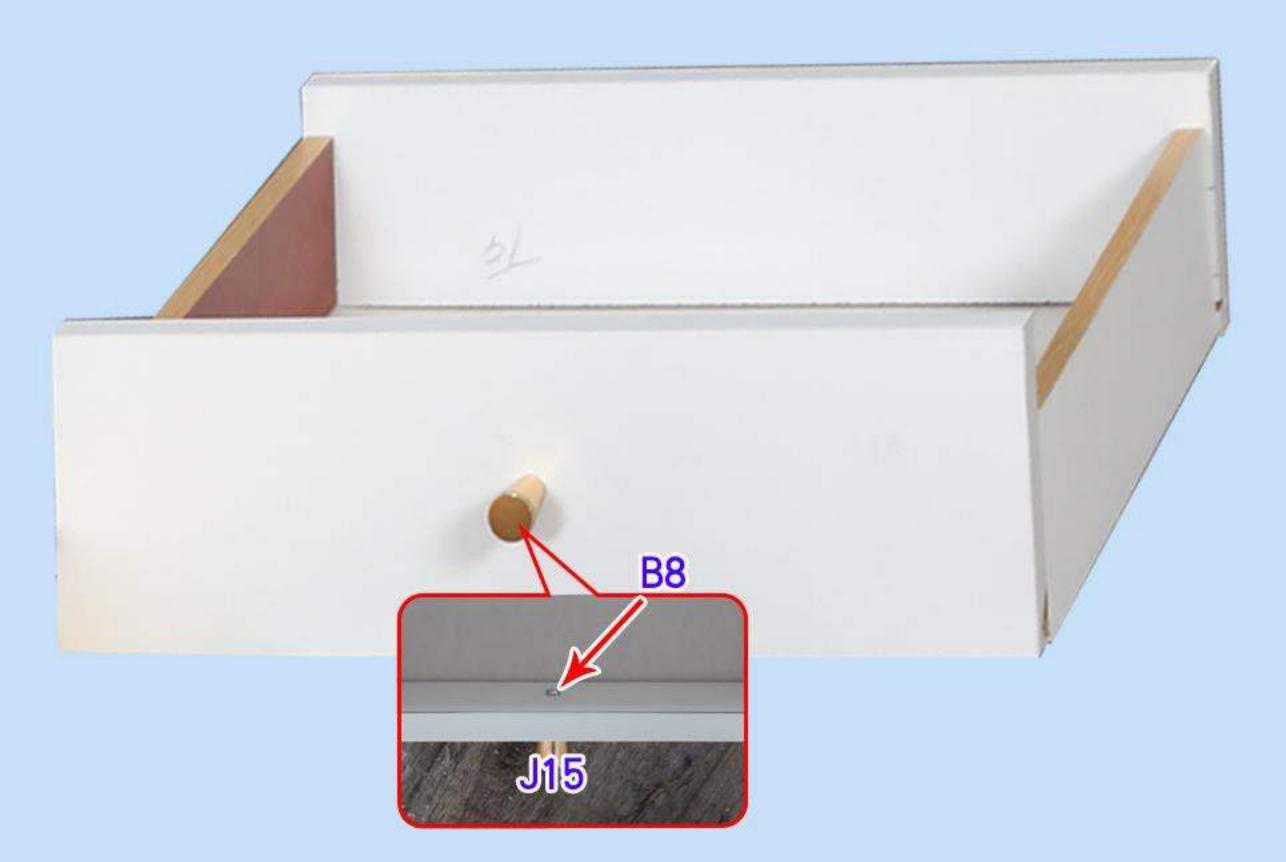

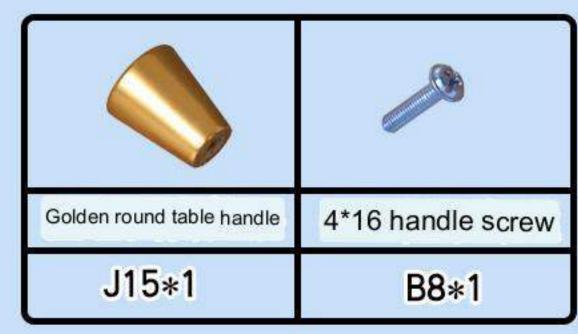

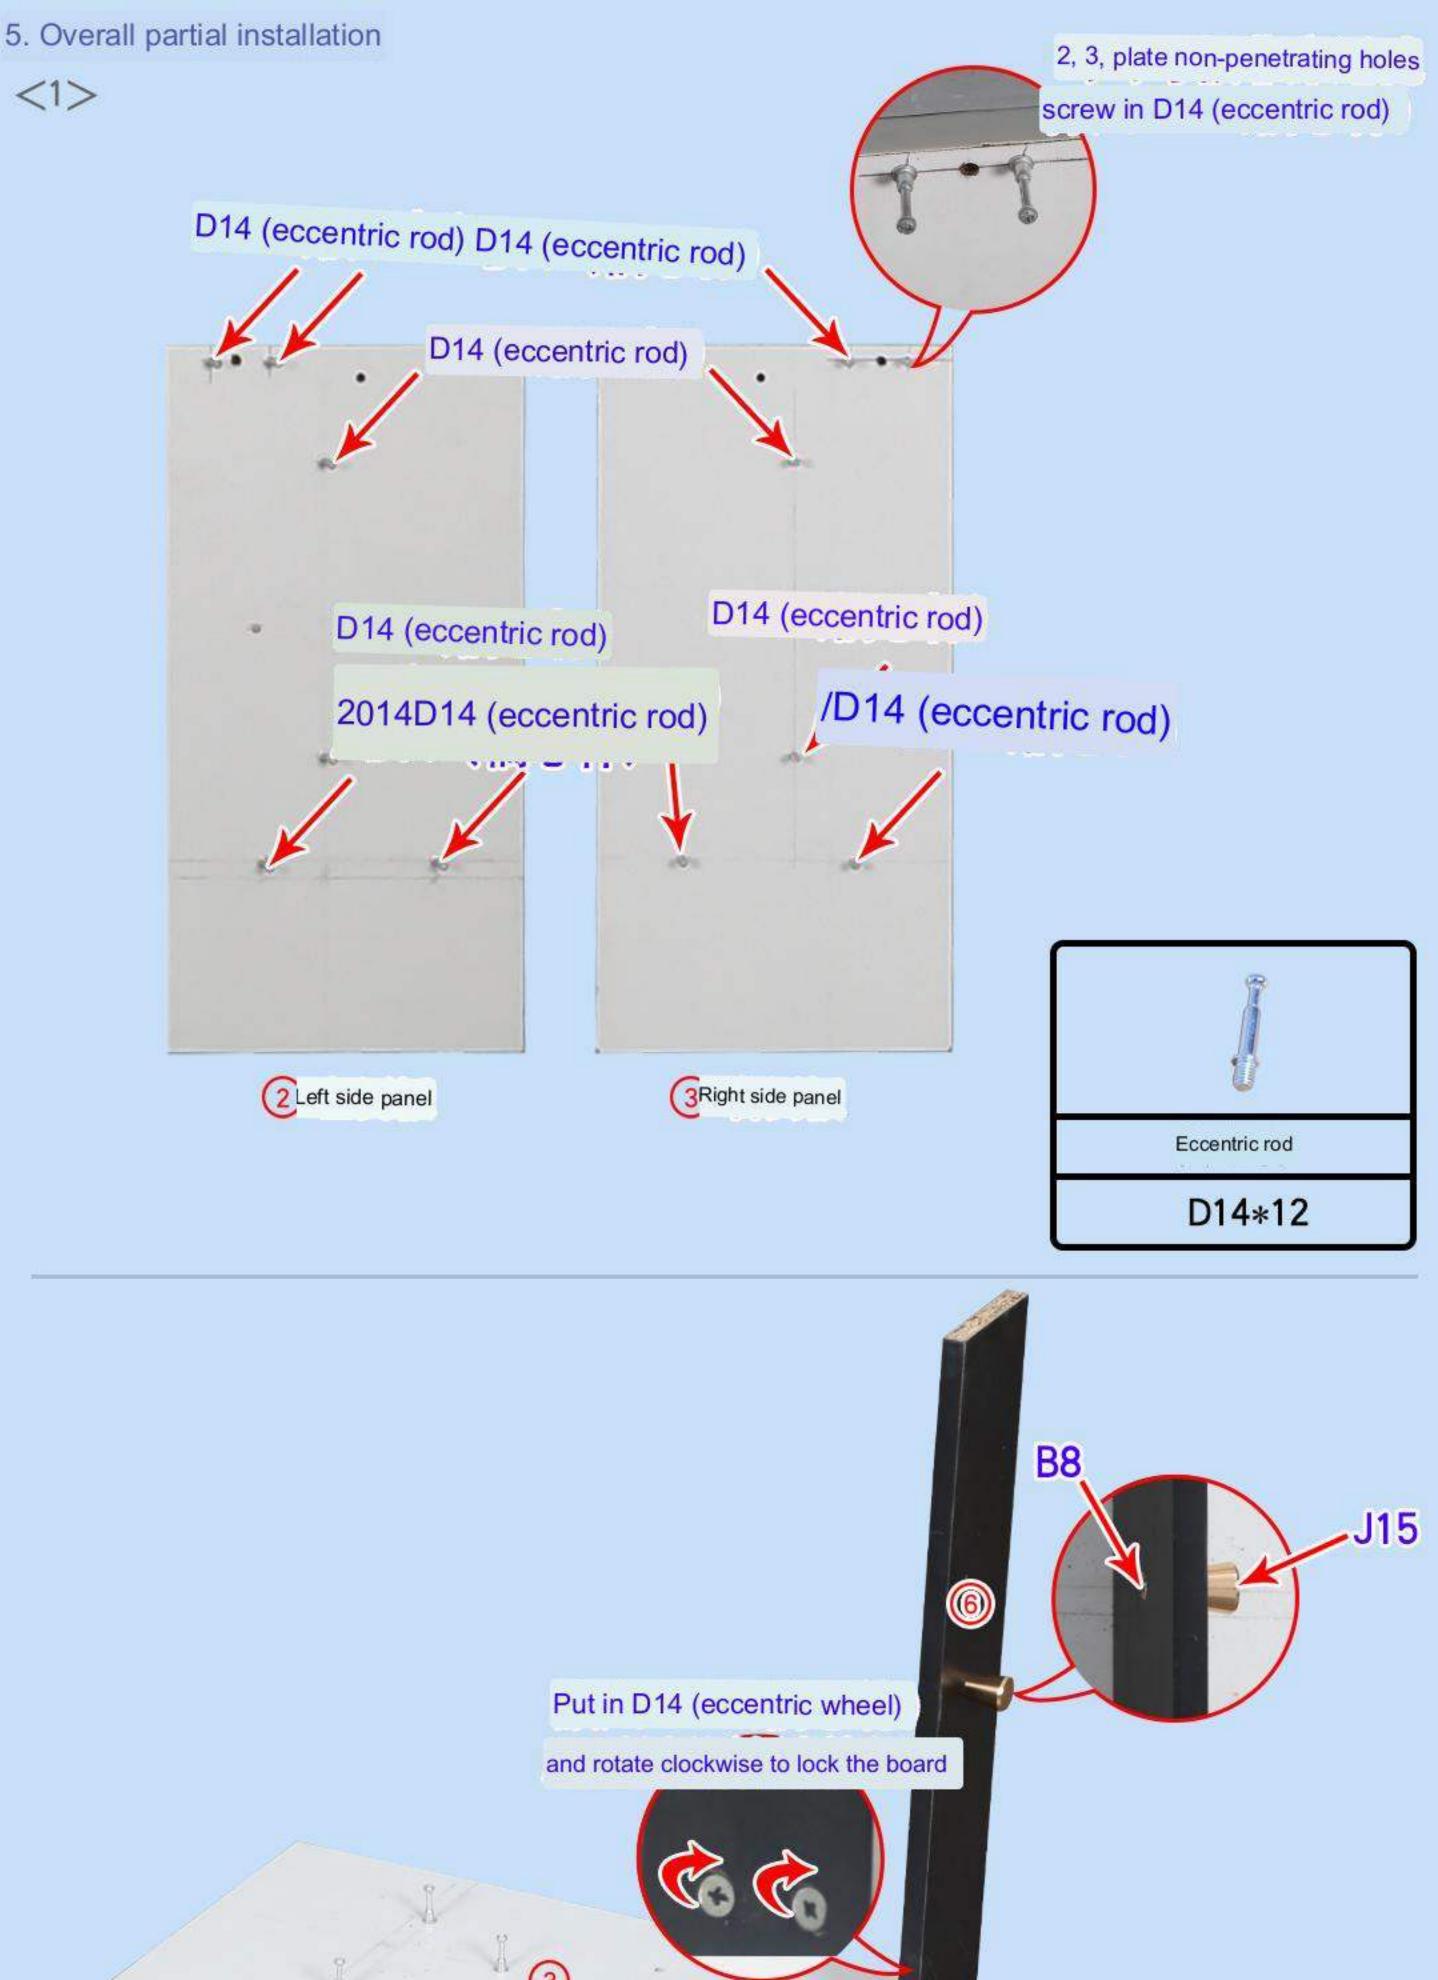

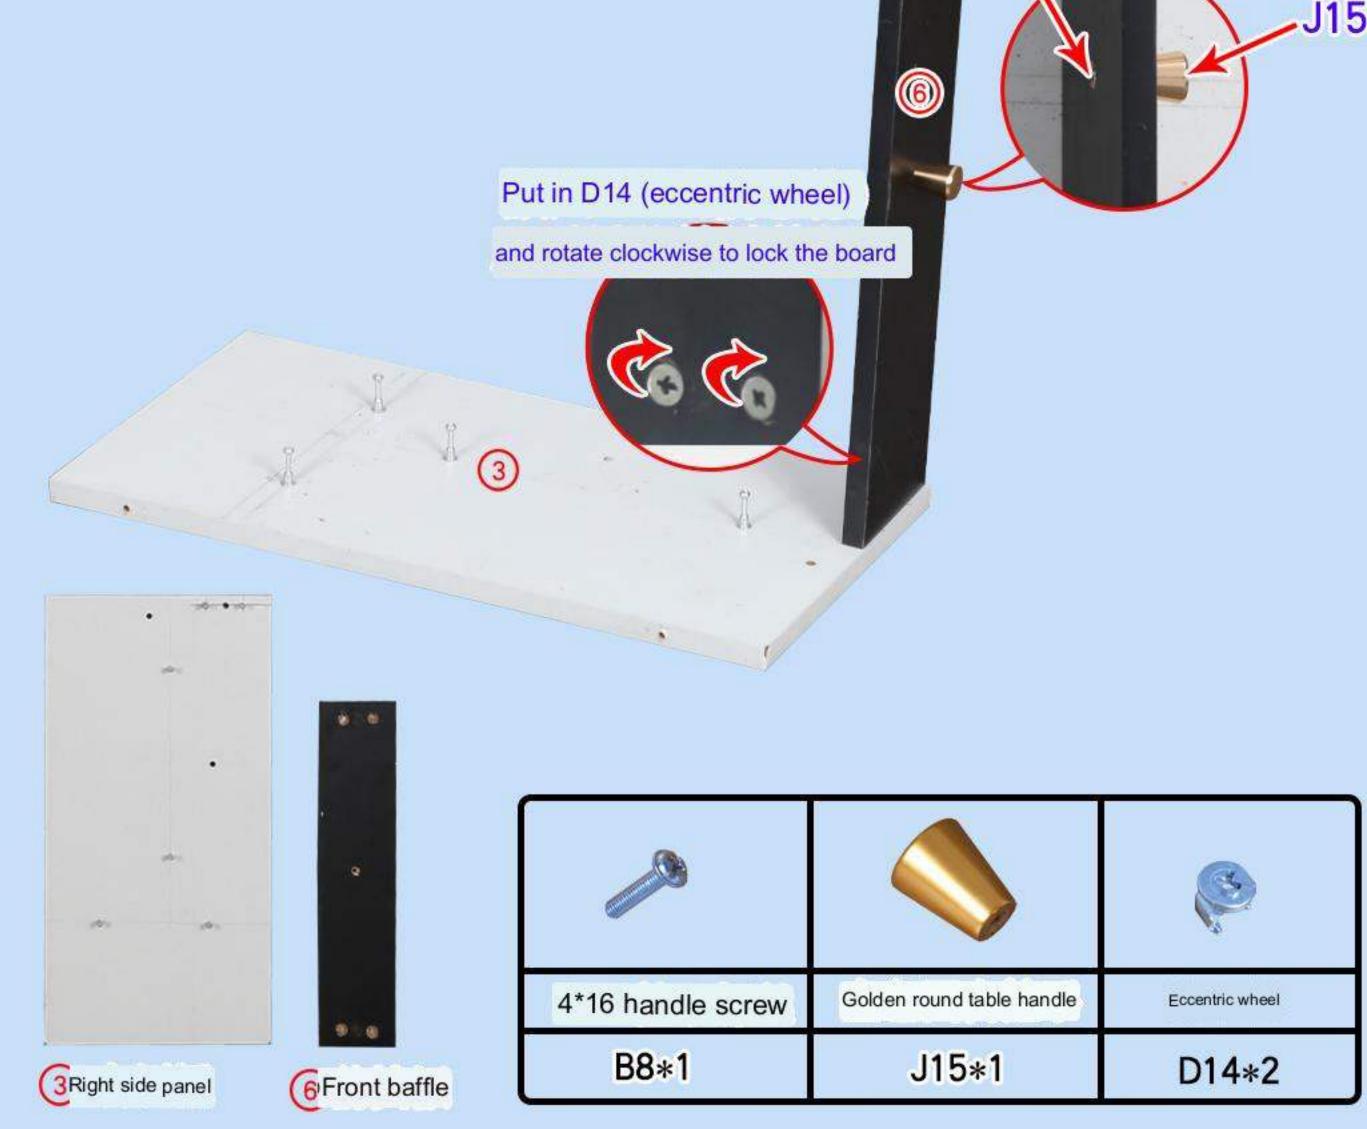

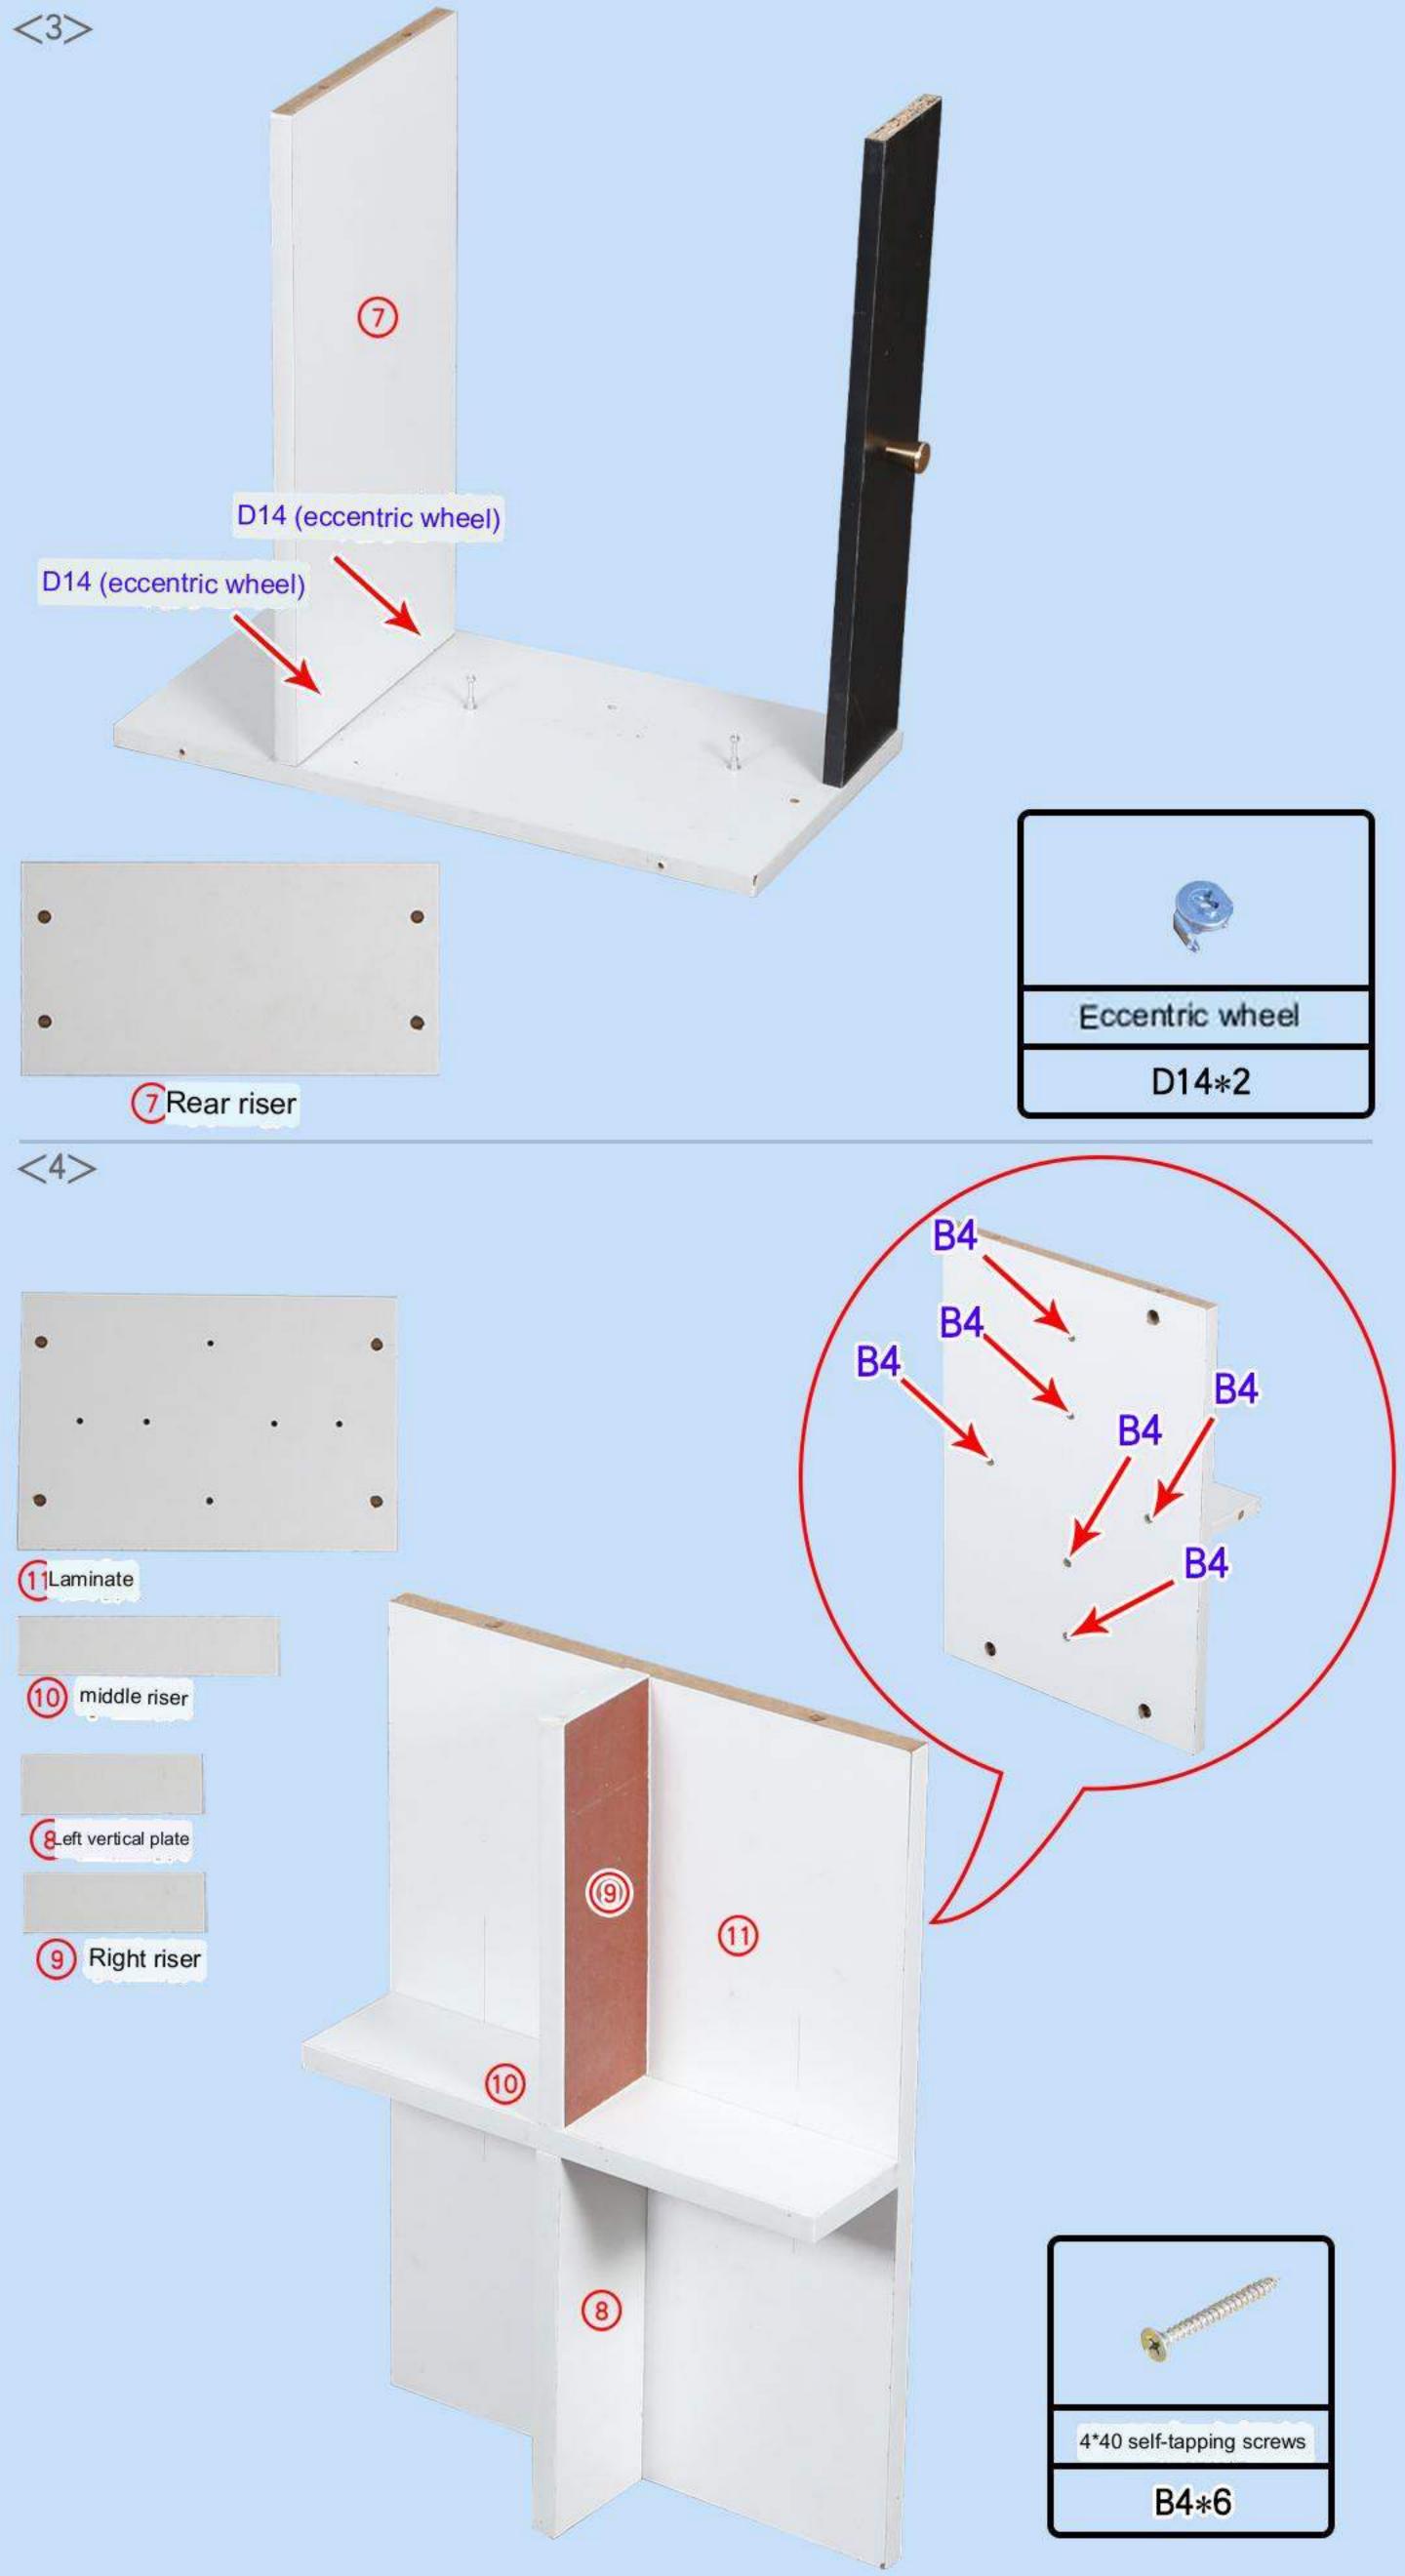







Eccentric wheel

D14\*2




left side panel




Eccentric wheel

D14\*6




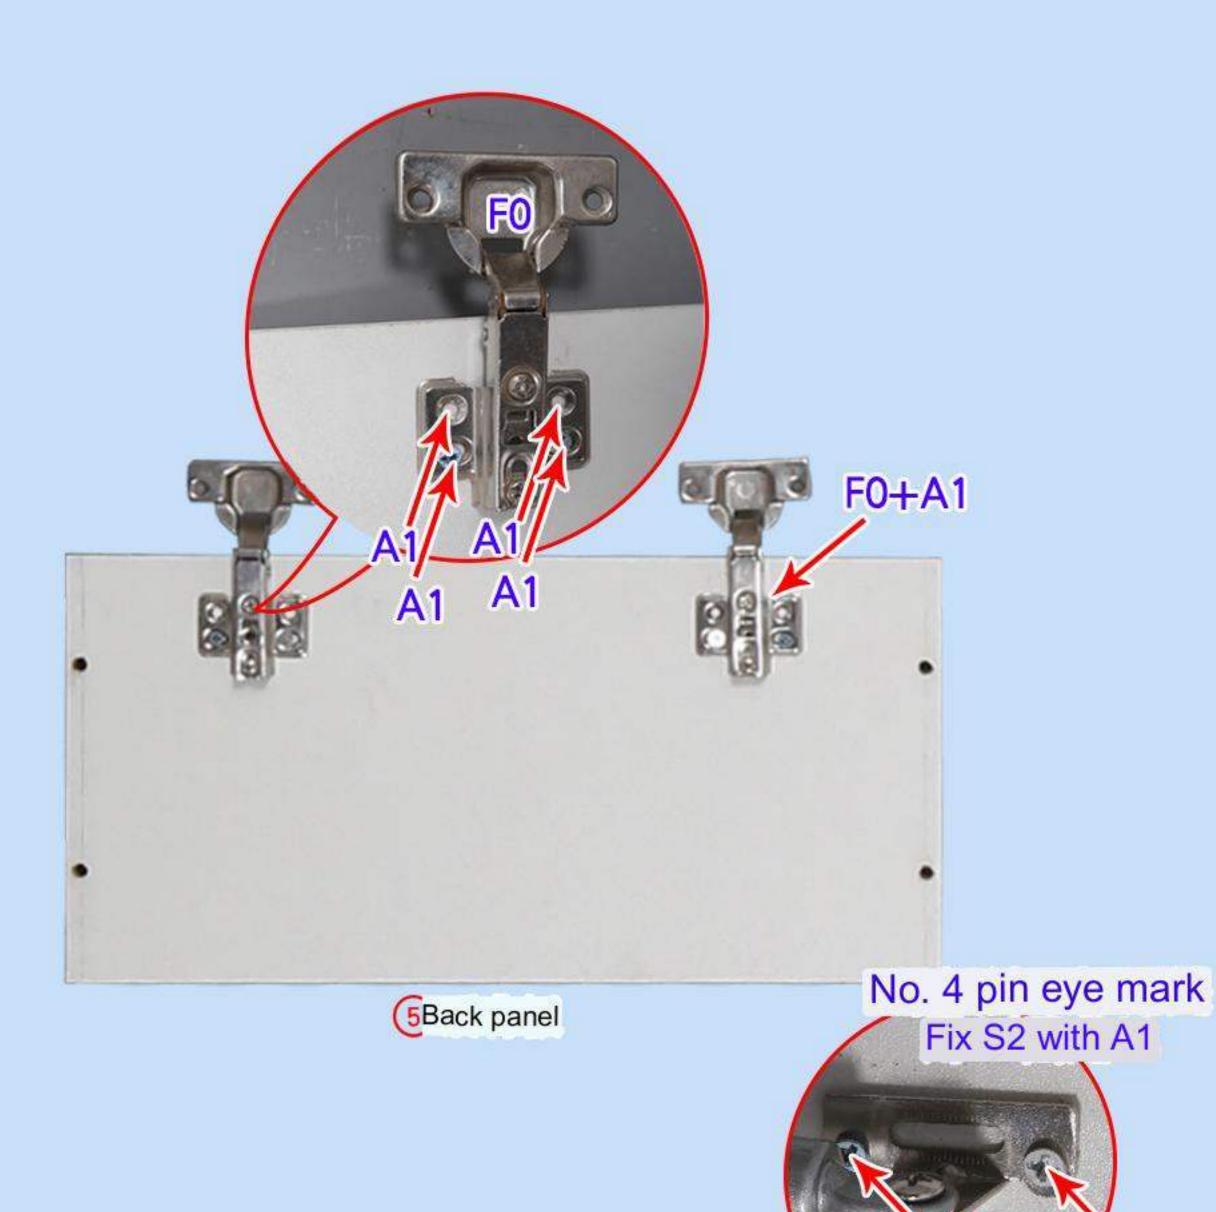


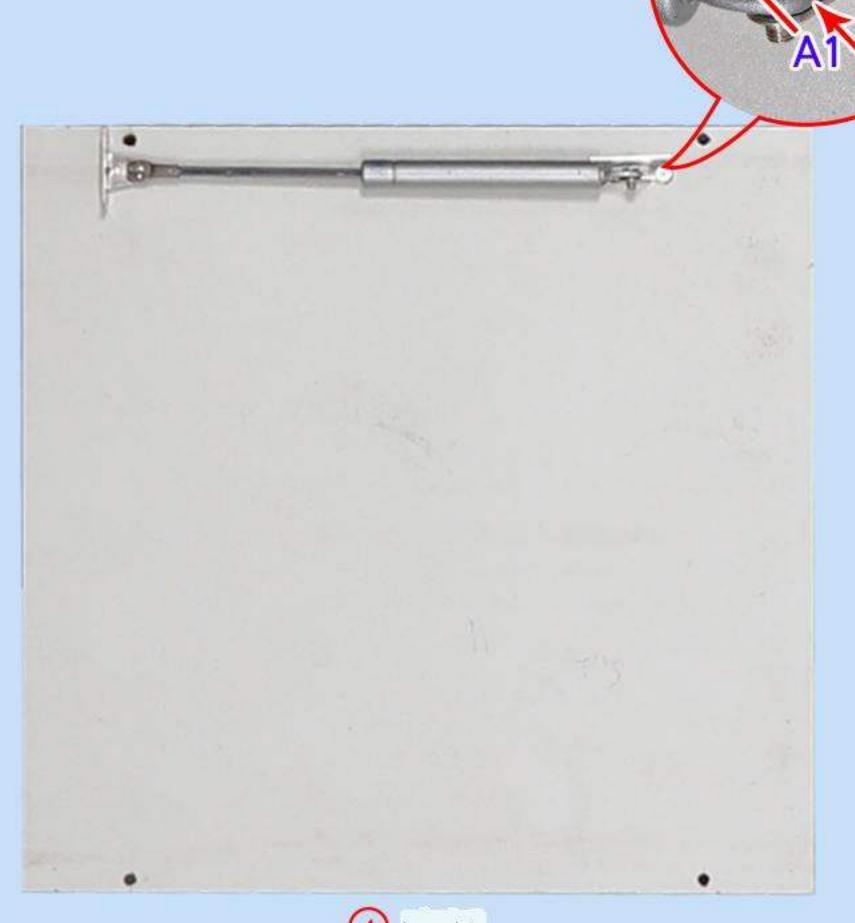


base plate

Square hinge	3.5*12 self-tapping screws	Gas weighing
F0*2	A1*10	S2*1

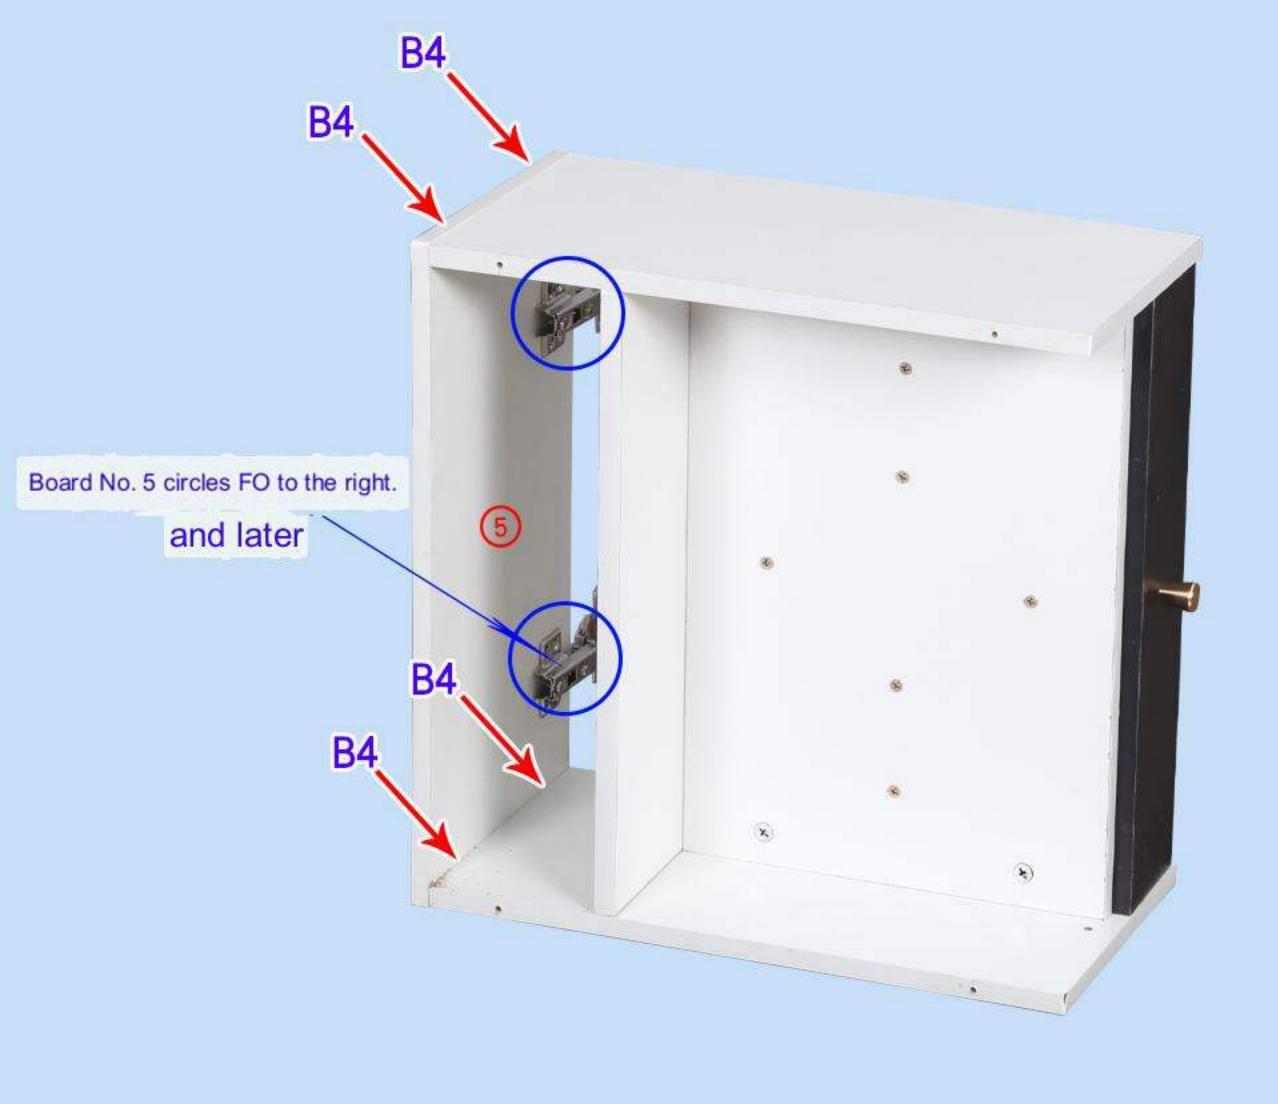


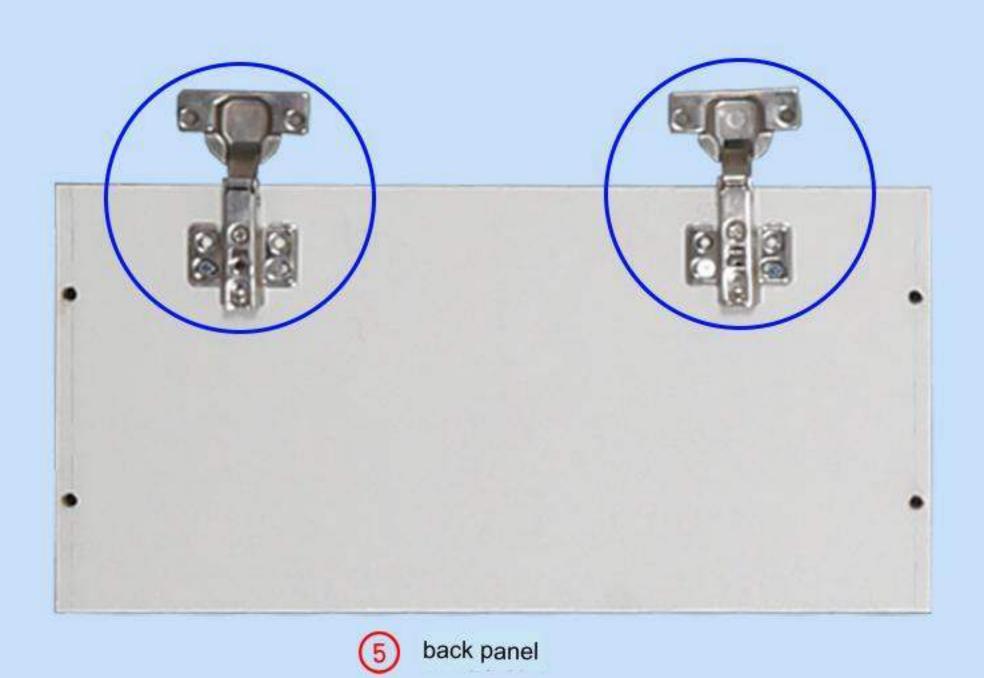

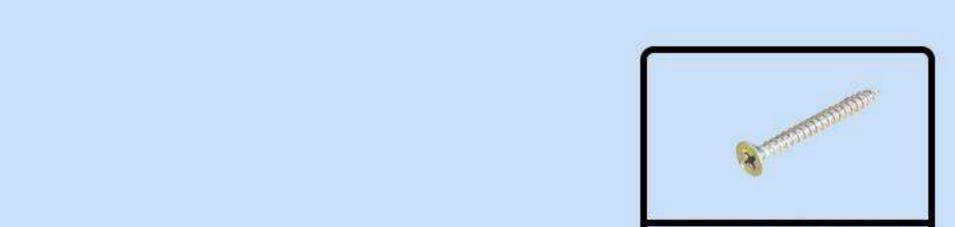

4\*40 self-tapping screws

B4\*4

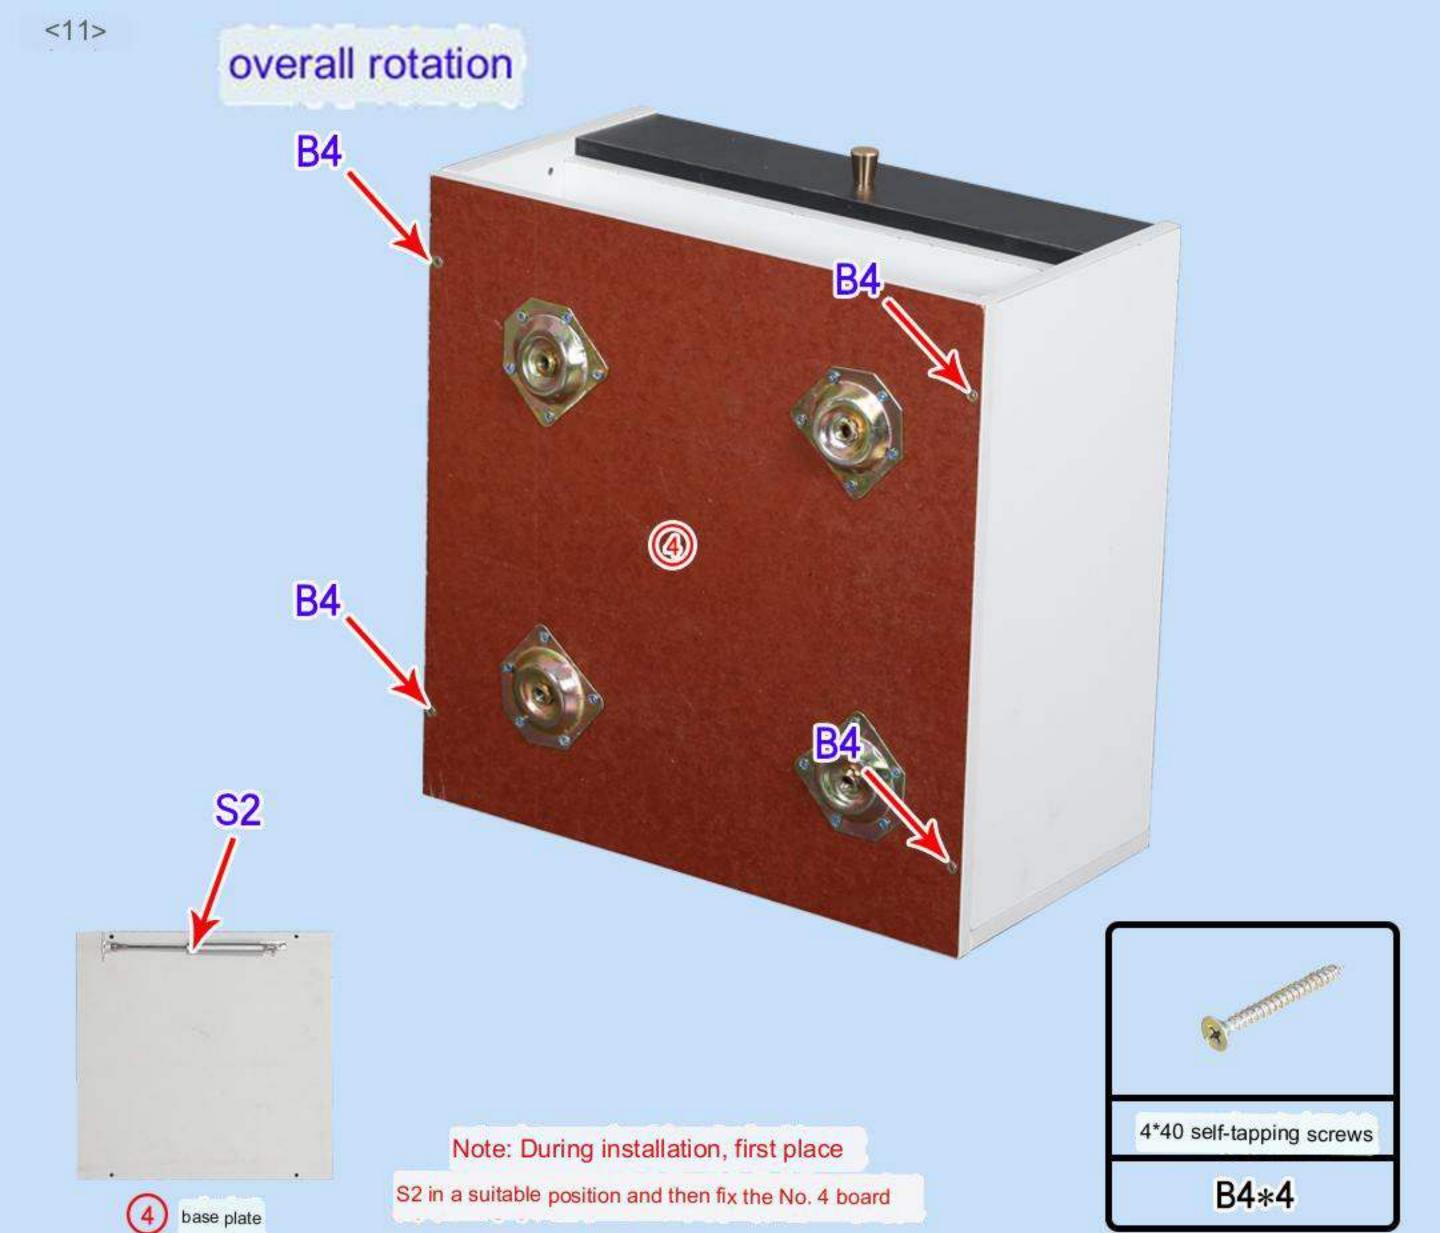


<12>





If you purchased the model with lights, after installation is complete, insert

 
the (power cord) into the interface on the rear

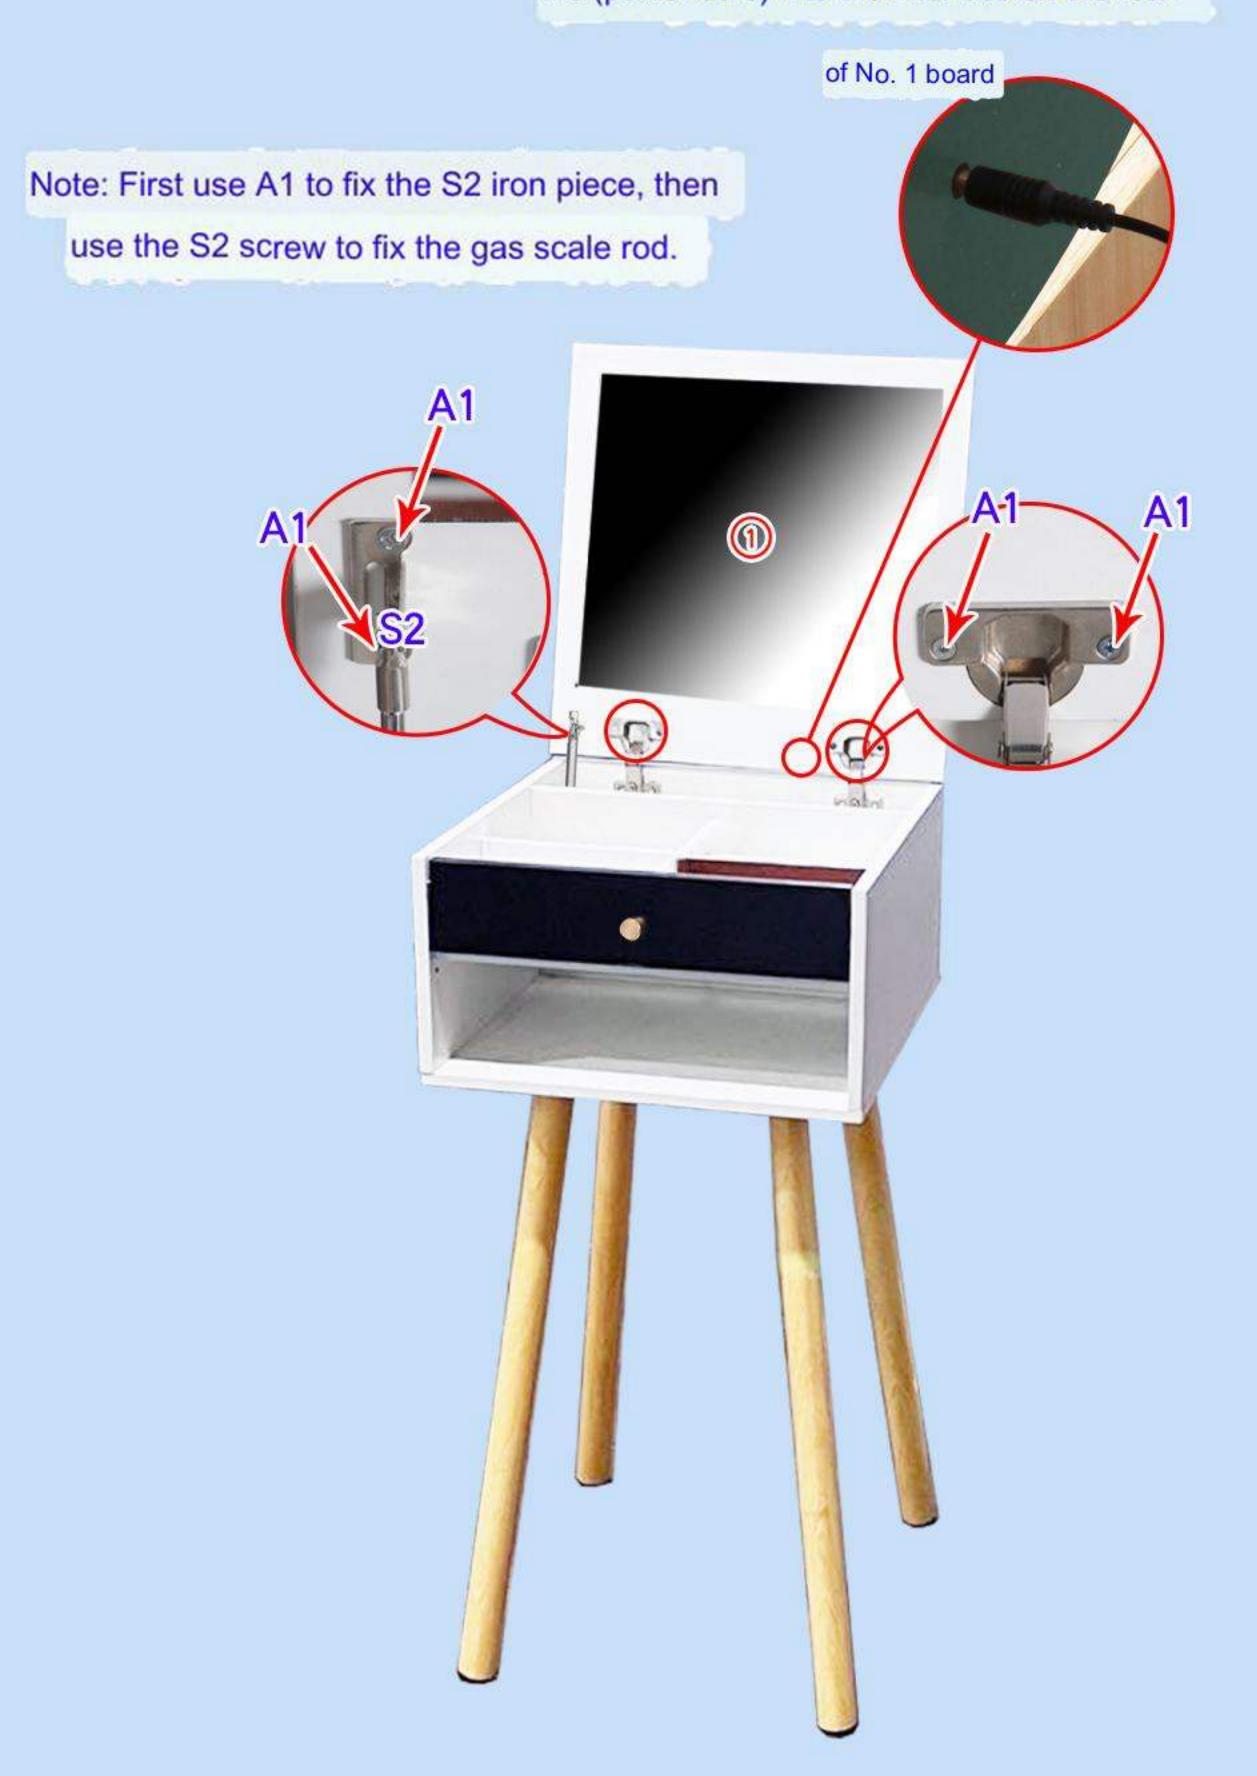





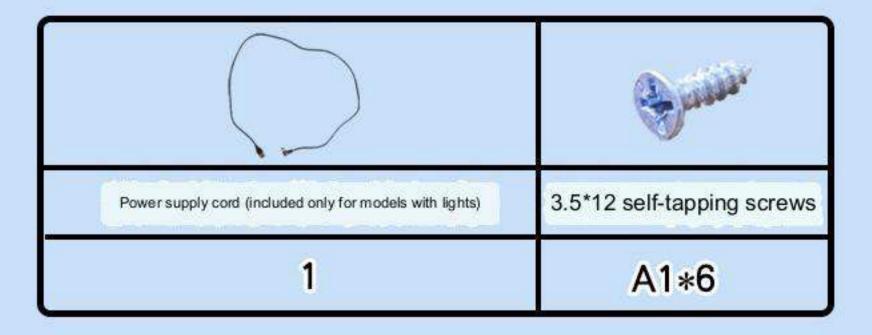

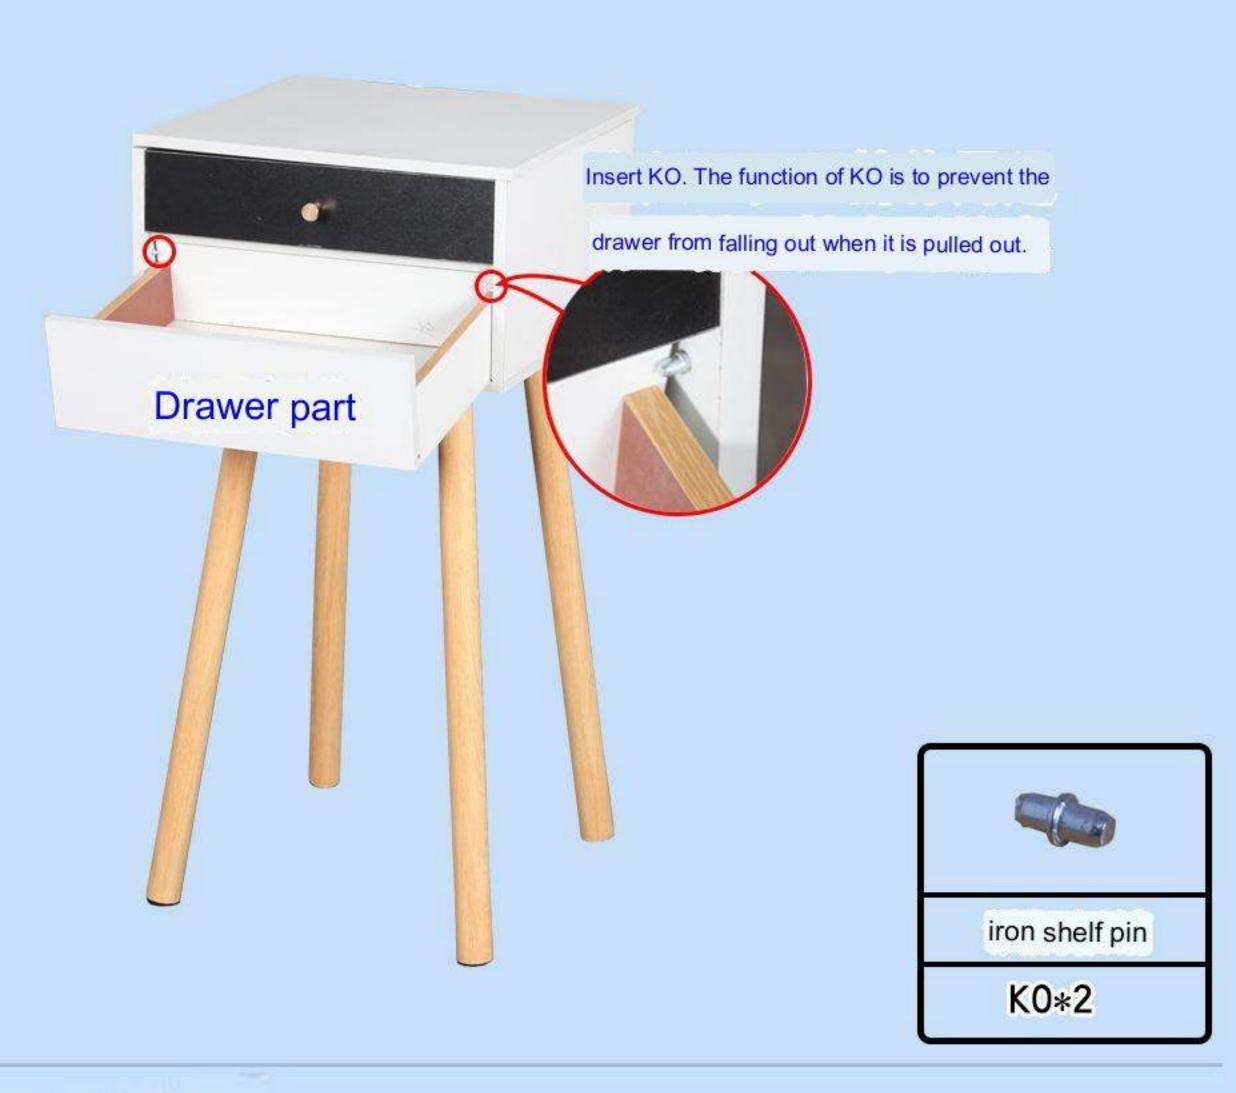

# <14> Completed picture

