

## BS031 - 4T Installation Instruction

Please be sure to use a manual screwdriver and refrain from

using an electric drill.

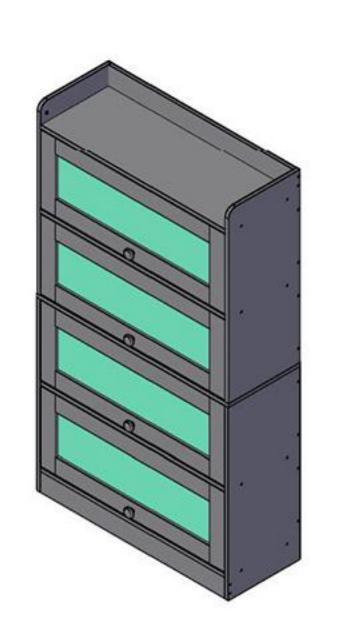

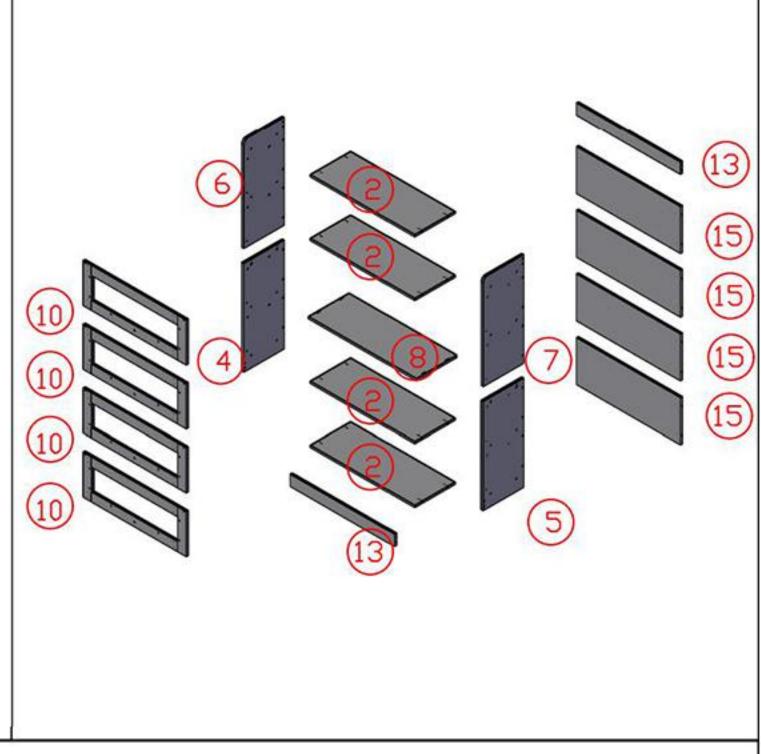

Operations

Must See

1. Since the nuts and screws are not connected, please read the instructions carefully before installation and distinguish each kind of nuts and screws.

₩.

During installation, please tighten the screws in seven categories first, and then tighten all the screws after all installation is completed.



B4\*46 4 x 40PCS Screws




K0\*9
Iron Shelf Pin



B8\*5 6 x 18 Drawer handle screws



J11\*5
Handles

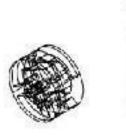

D14\*5
Eccentric wheel +
Eccentric rod

combination



 
A1\*58
3.5×12 self-tapping

screws



A17\*26
3.5×18 self-tapping

screws




N27\*34

White buckle x 2



 G8\*8
Flip-up track + buckle




4 Acrylic Door





1 Screwdriver



## Installation method of eccentric wheel + eccentric rod combination:

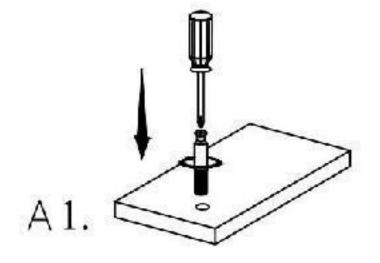

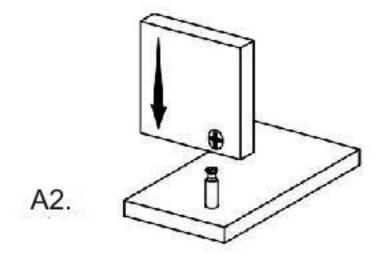

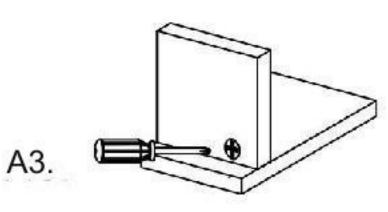

Screw on the eccentric rod clockwise

Insert the eccentric into the reserved hole and lock the eccentric clockwise. Align

the notch with the side hole and

insert the eccentric rod.

