

Please be sure to use a manual screwdriver and refrain from using an electric drill.

Furniture installation

Shoe ark installation process

SOCE025





D14*14
Eccentric Wheel &
Eccentric Rod



A1*70



K0*30



K11*2



F1*4



B4*36



D7*6





Screwdriver



M24*5




F2*4

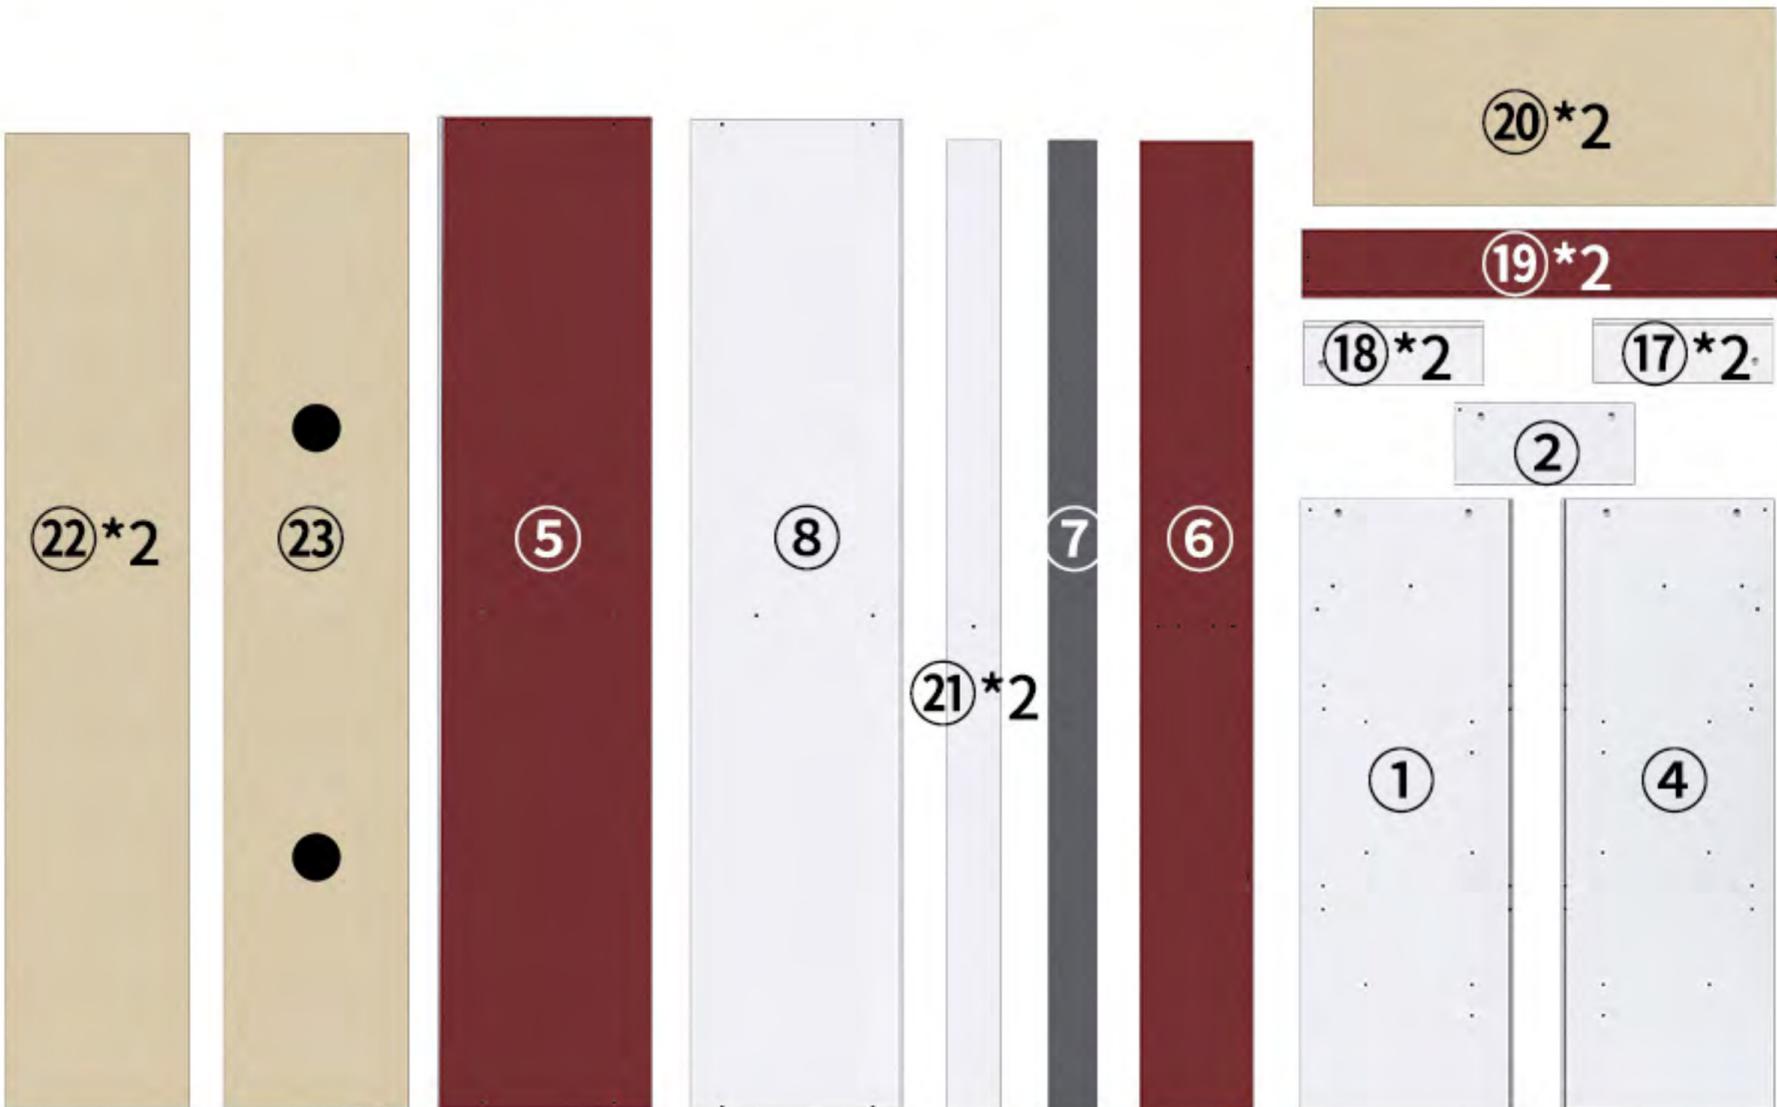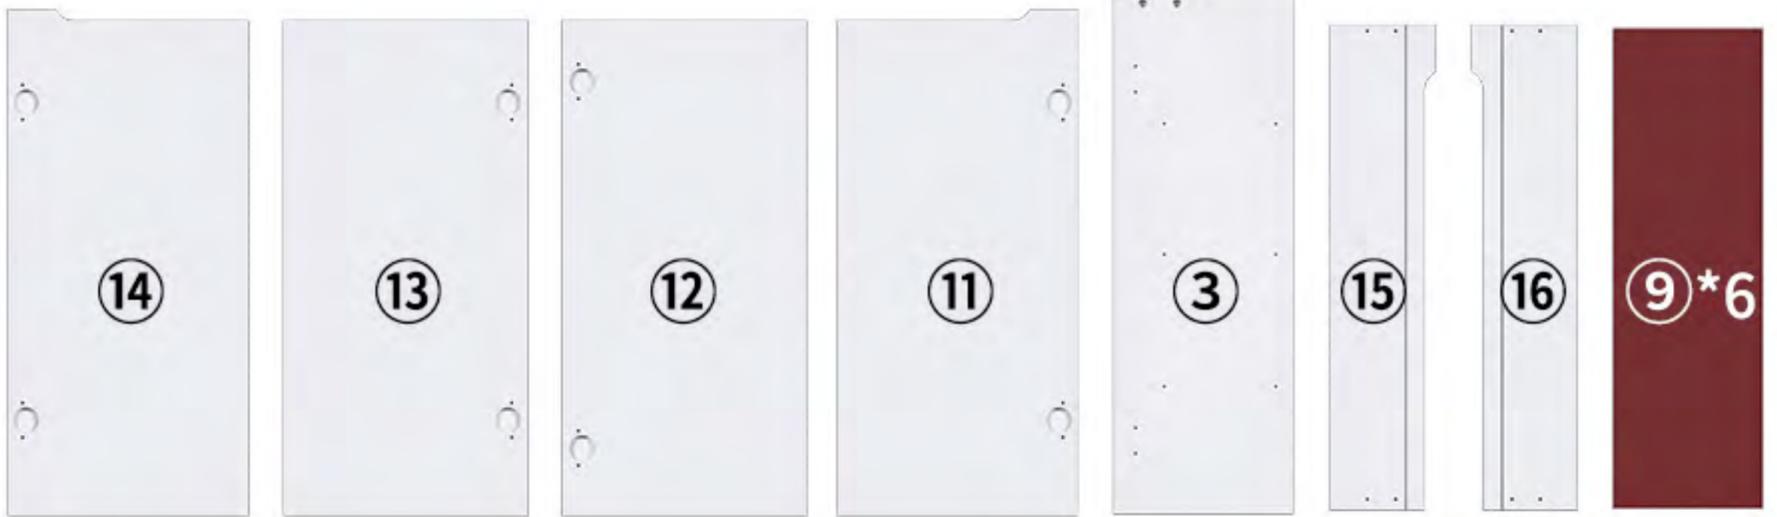


Presentation of finished product






Product Split Diagram

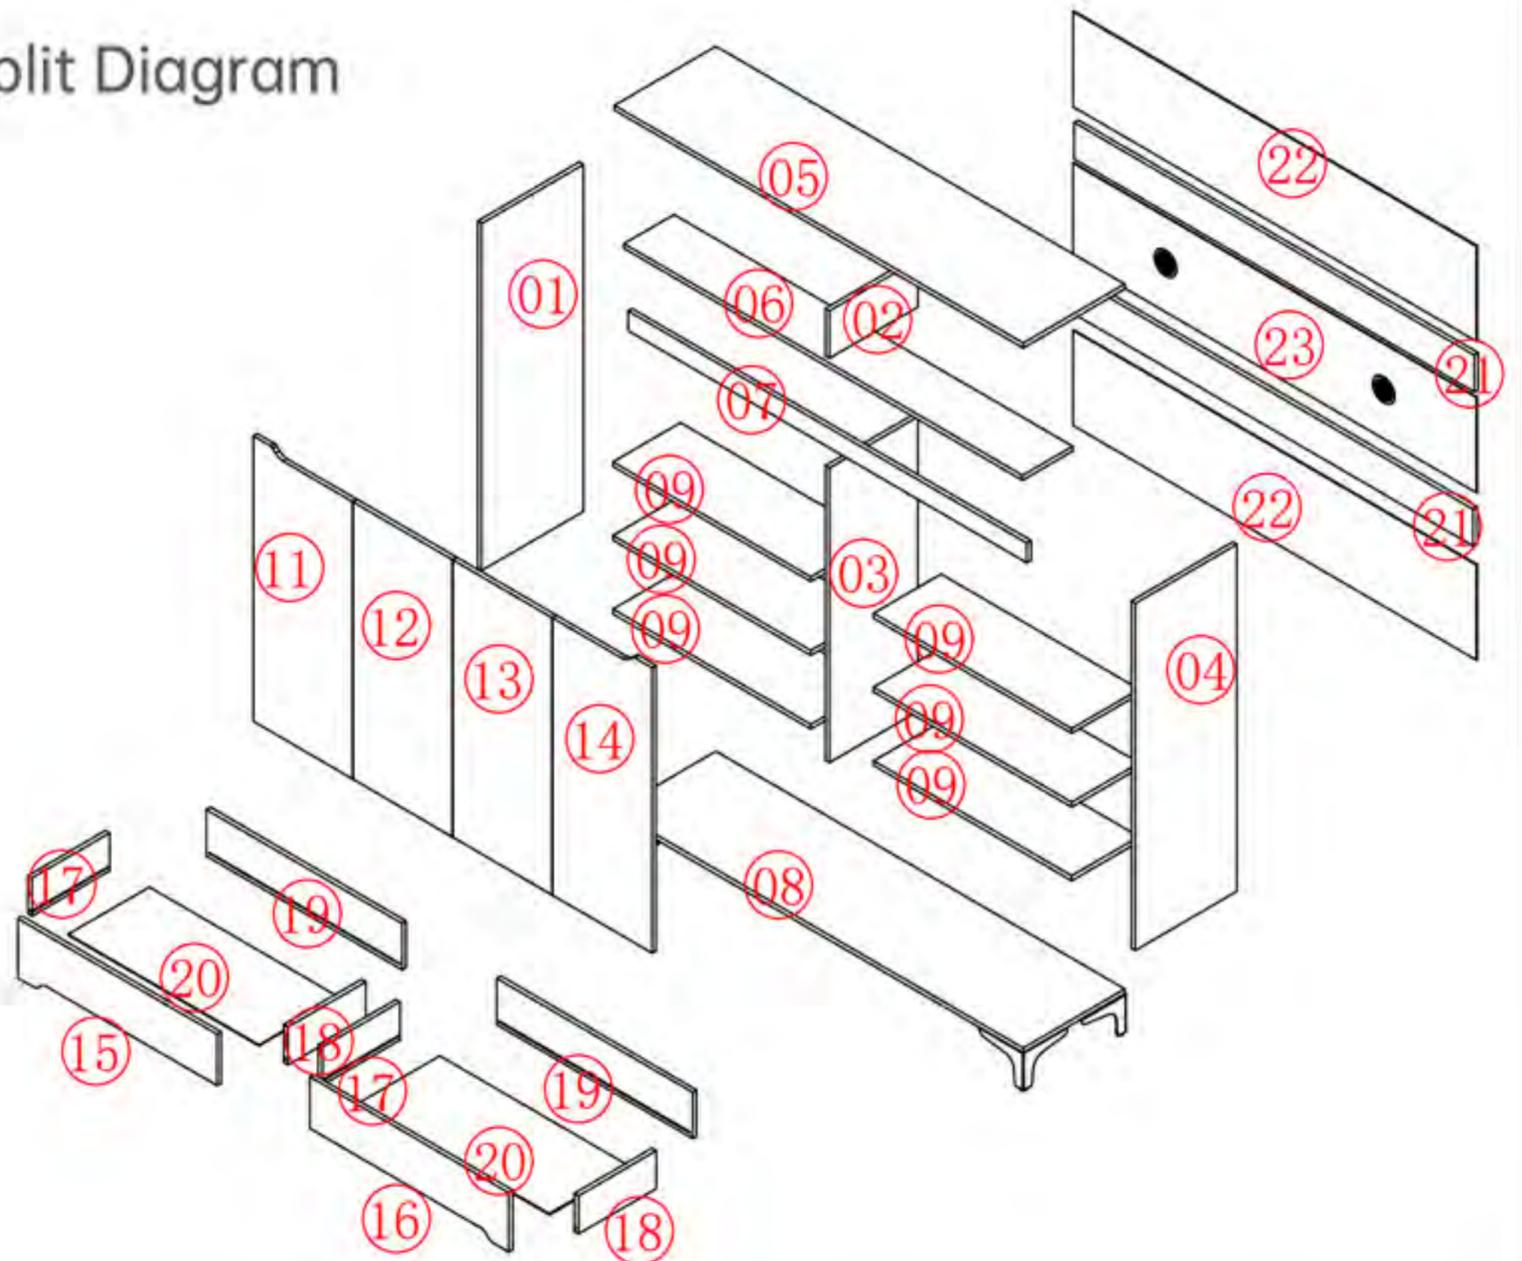



Installation method of eccentric screw

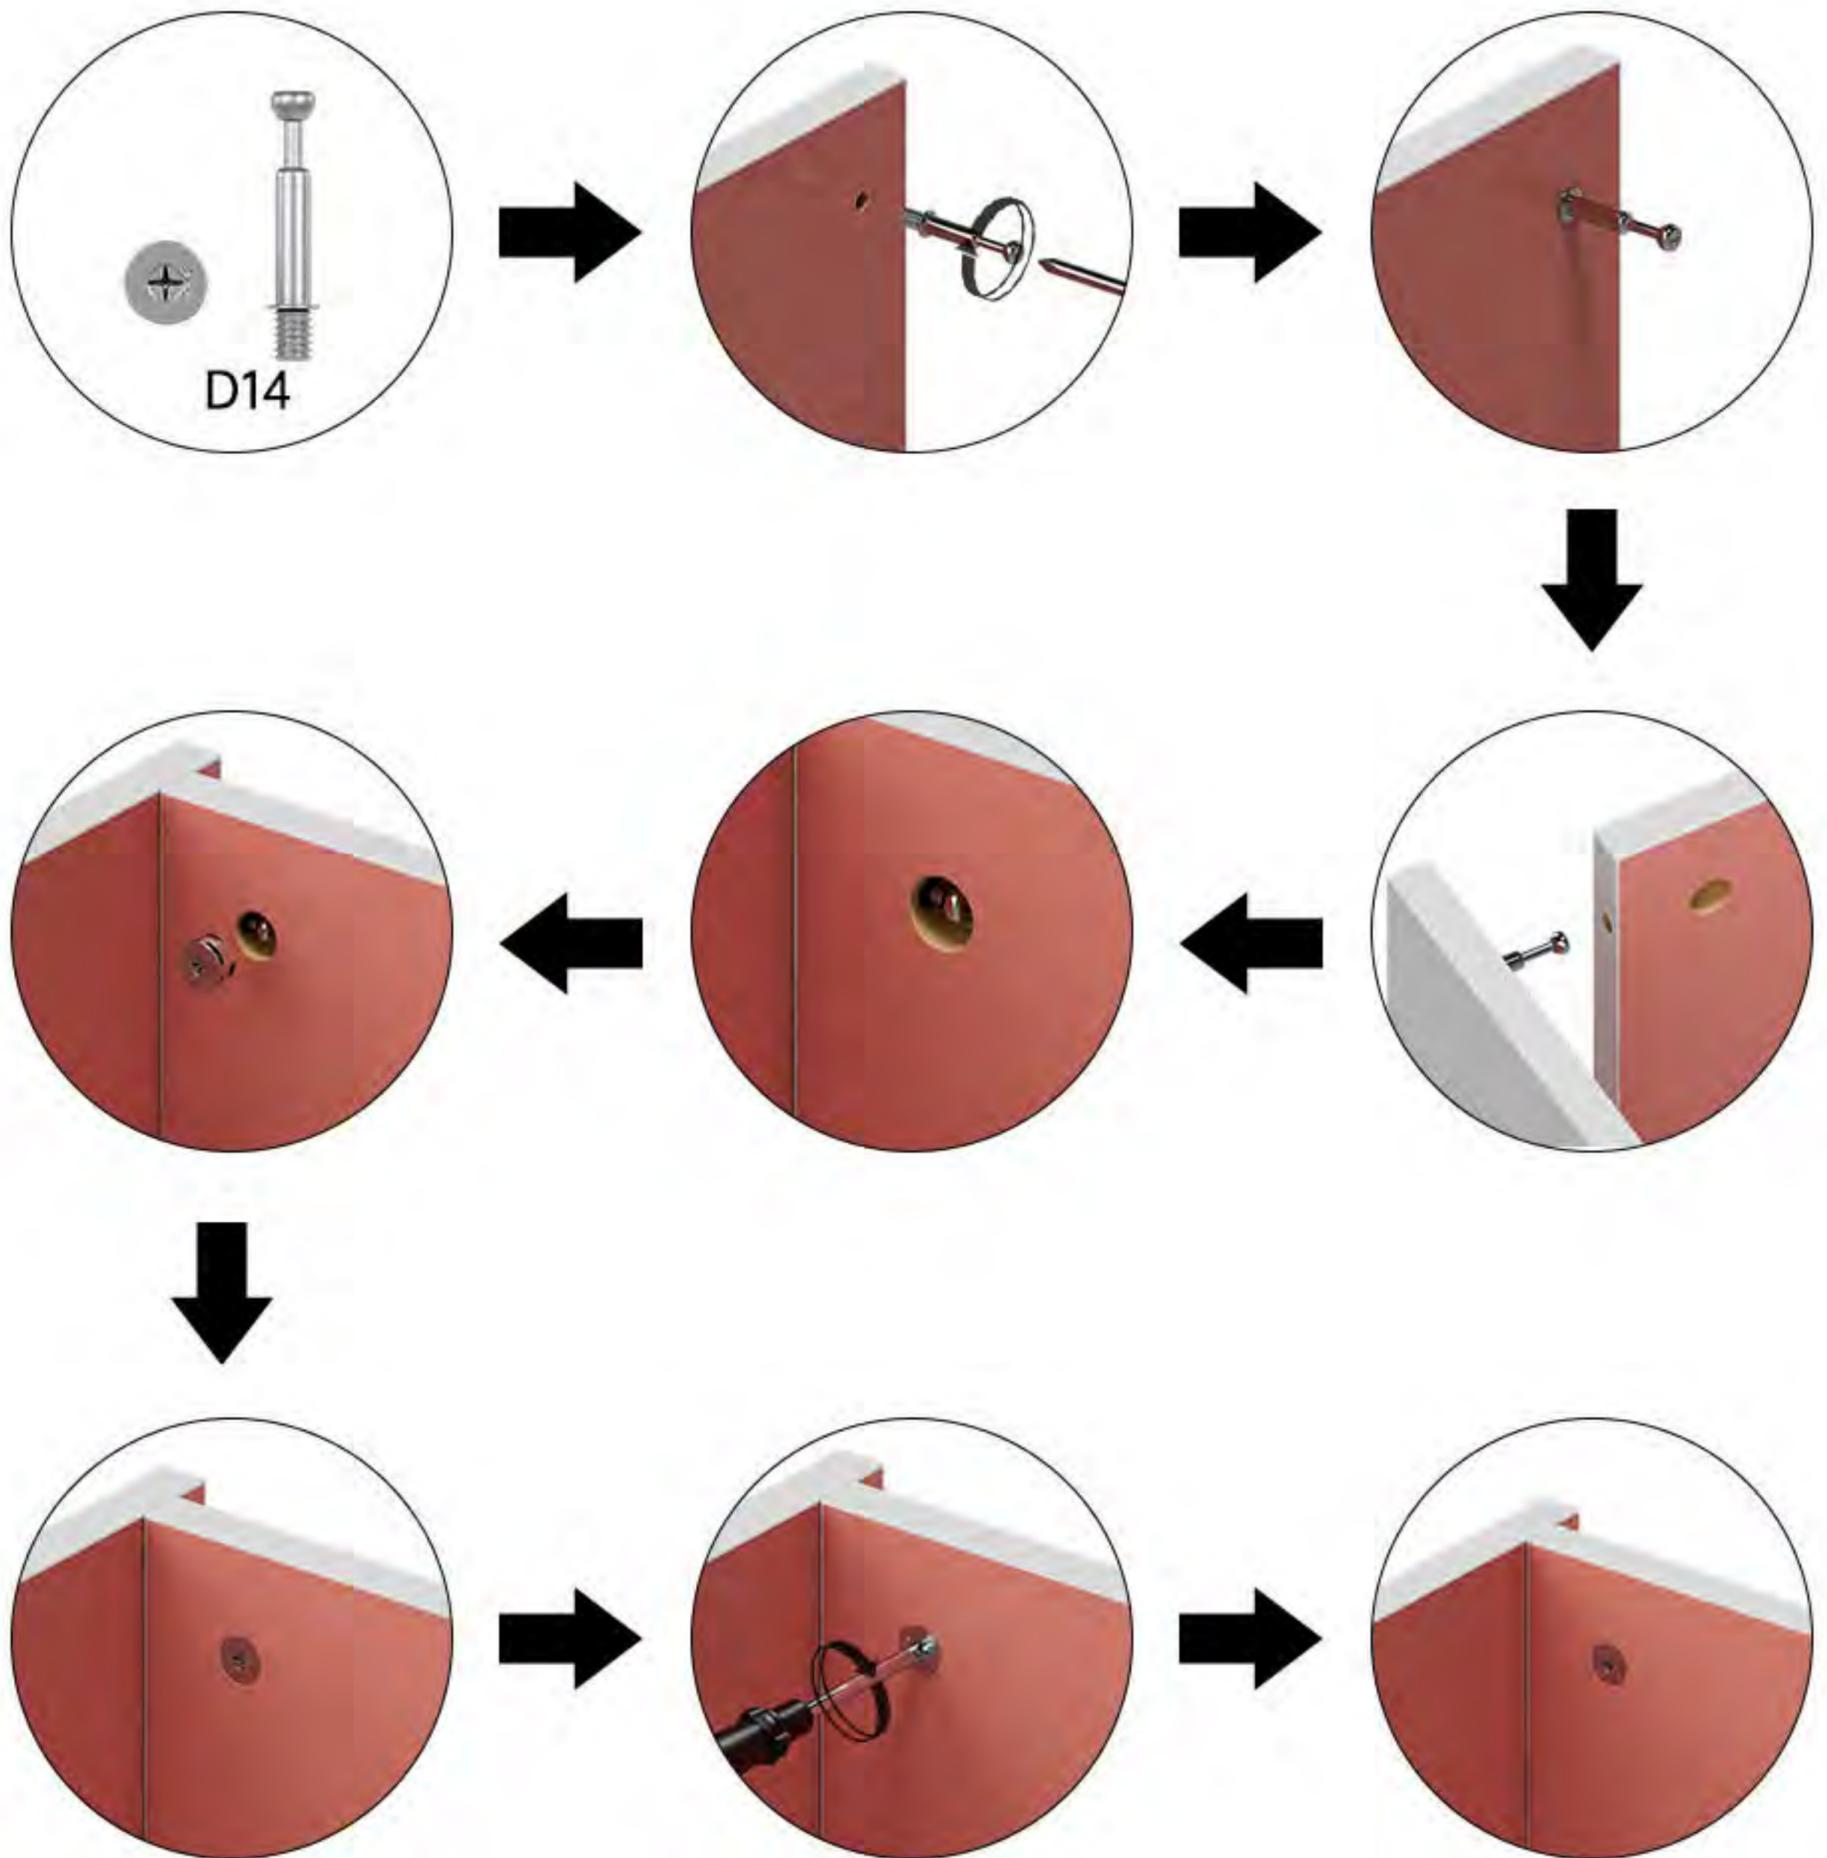


1

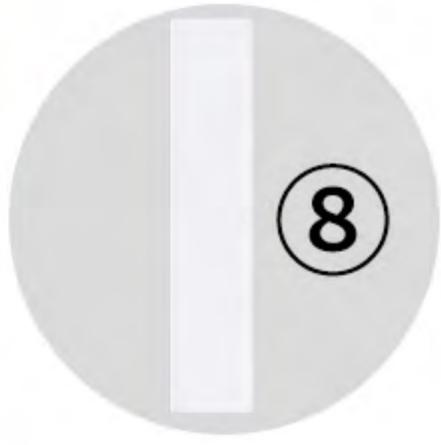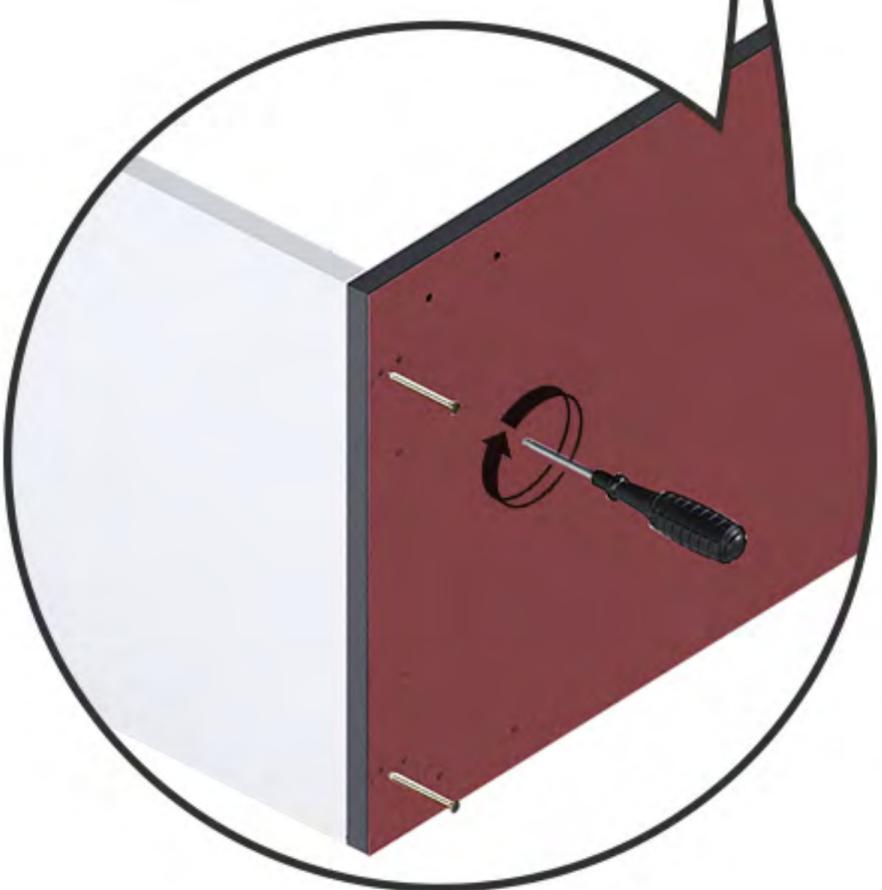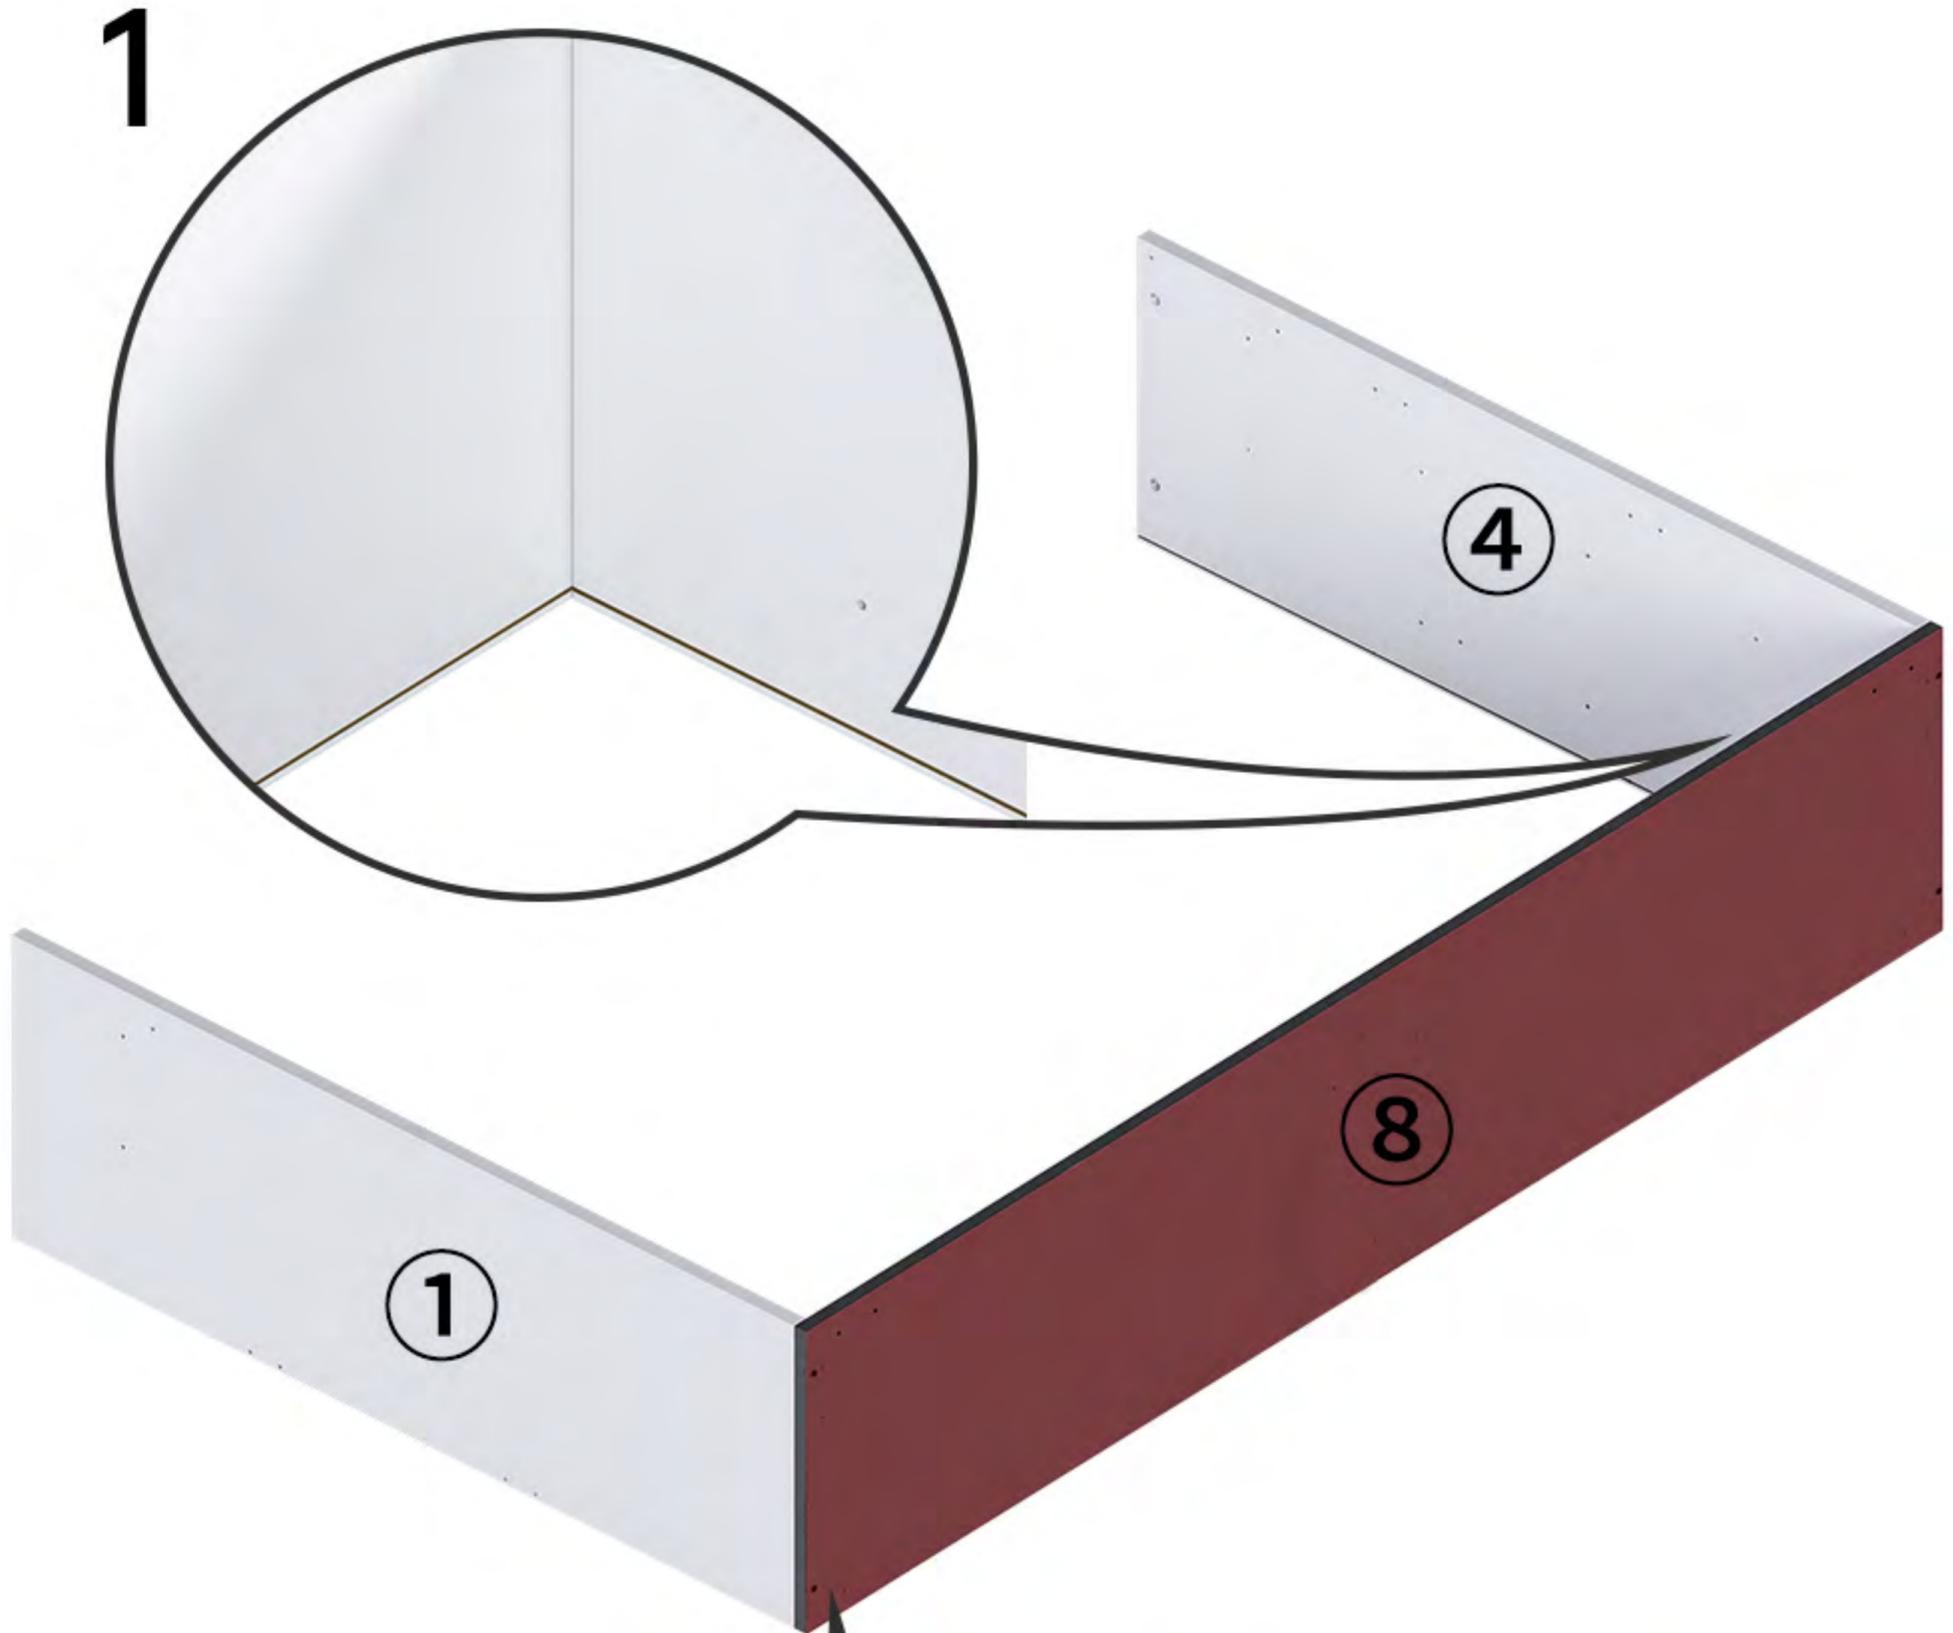


2

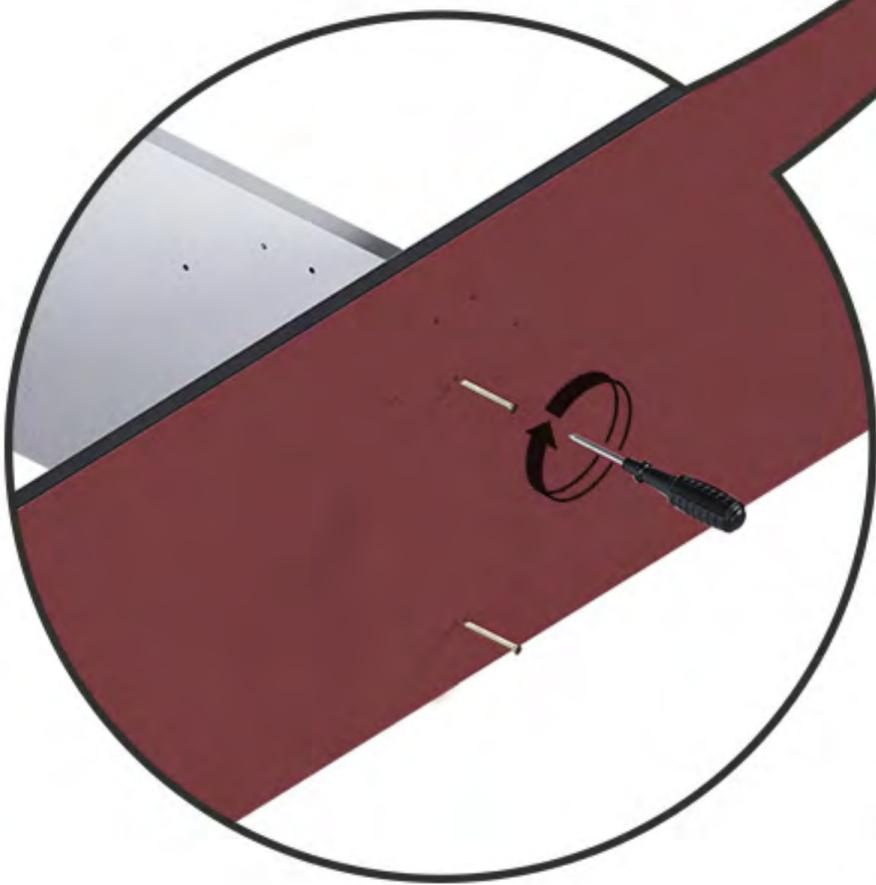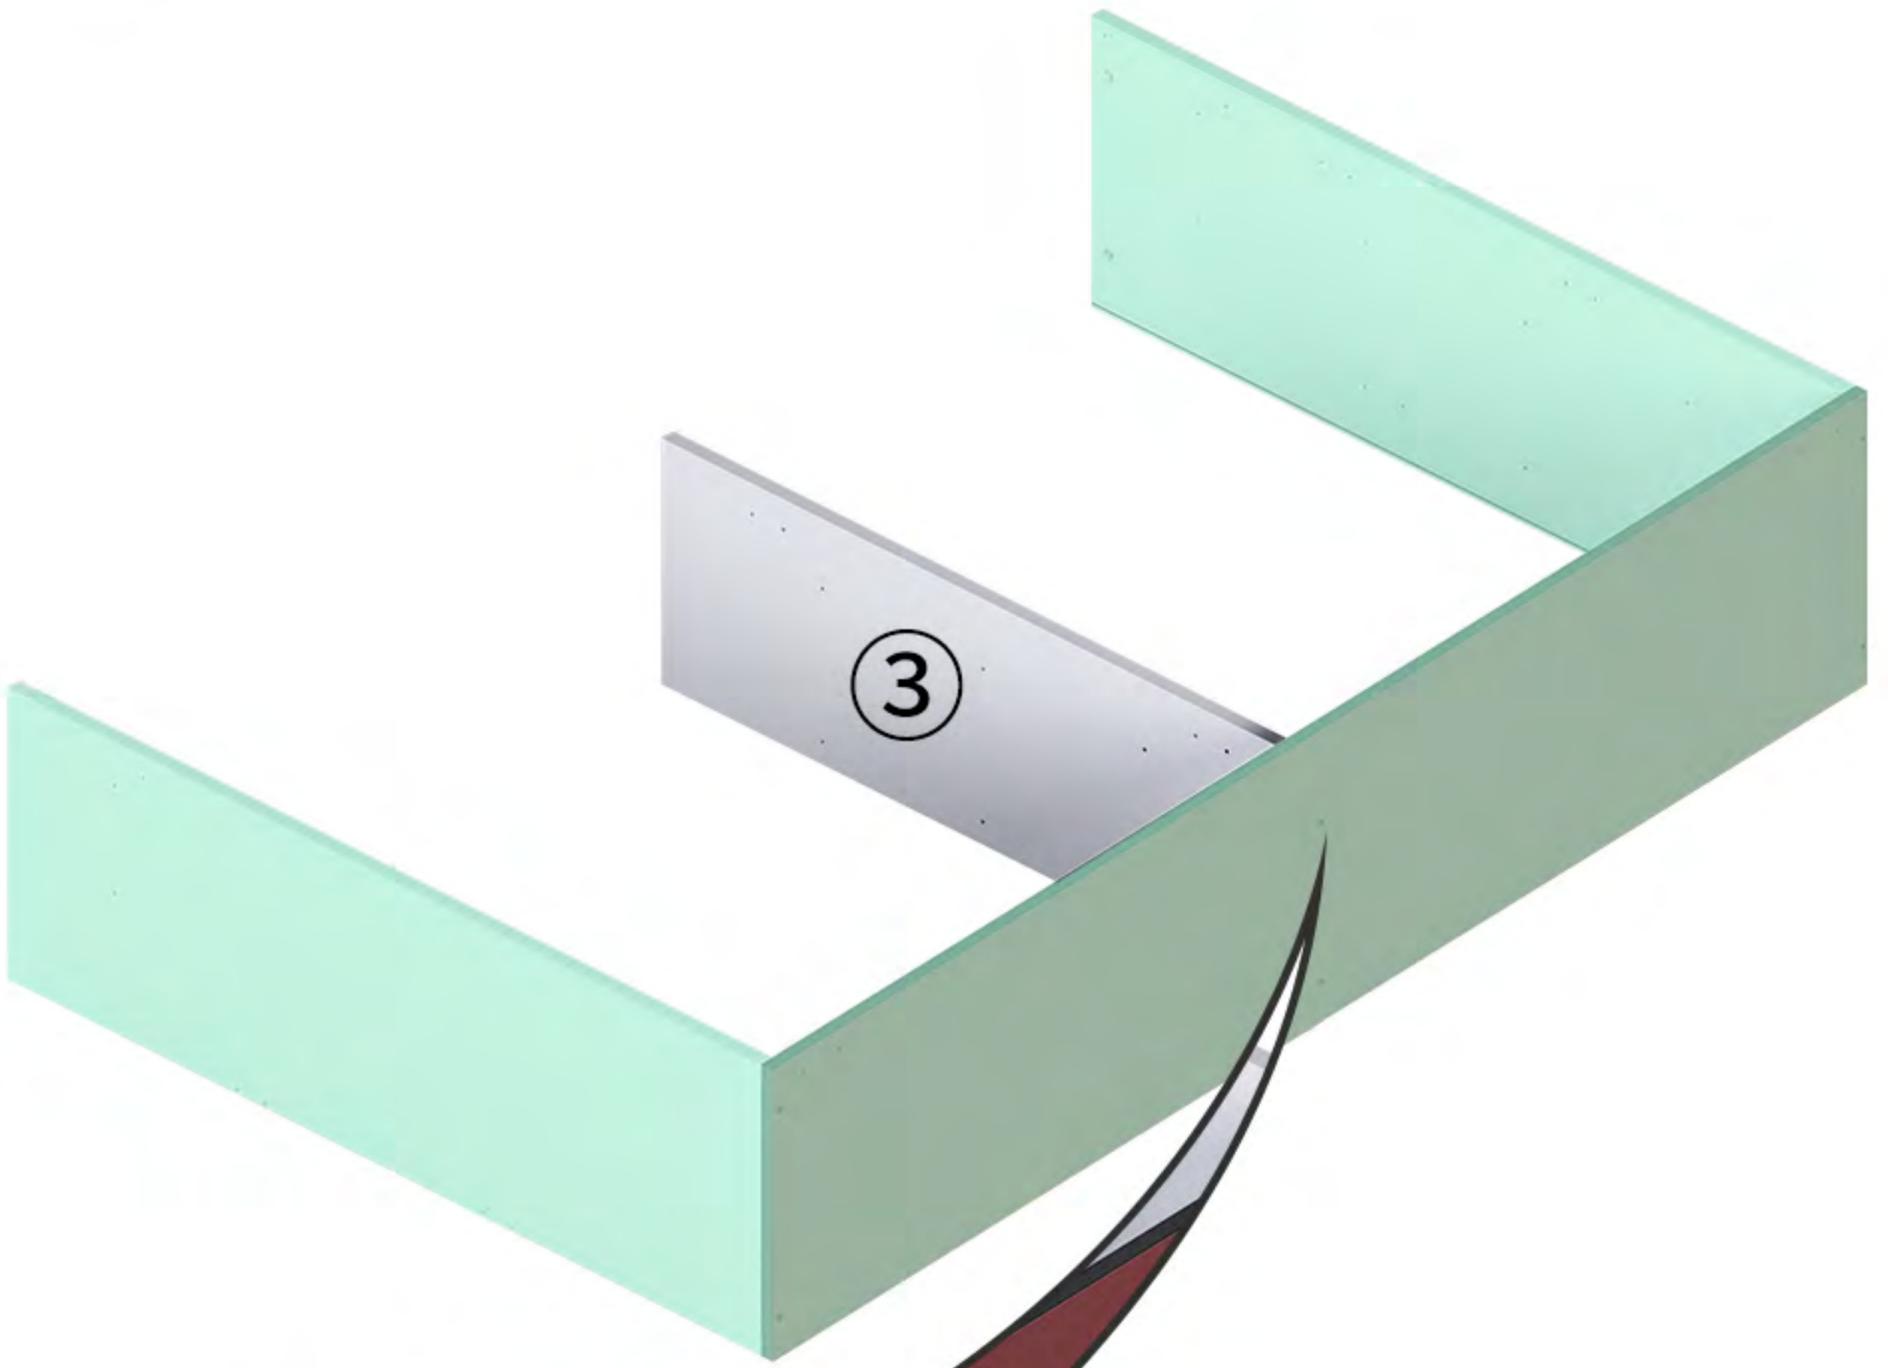


3

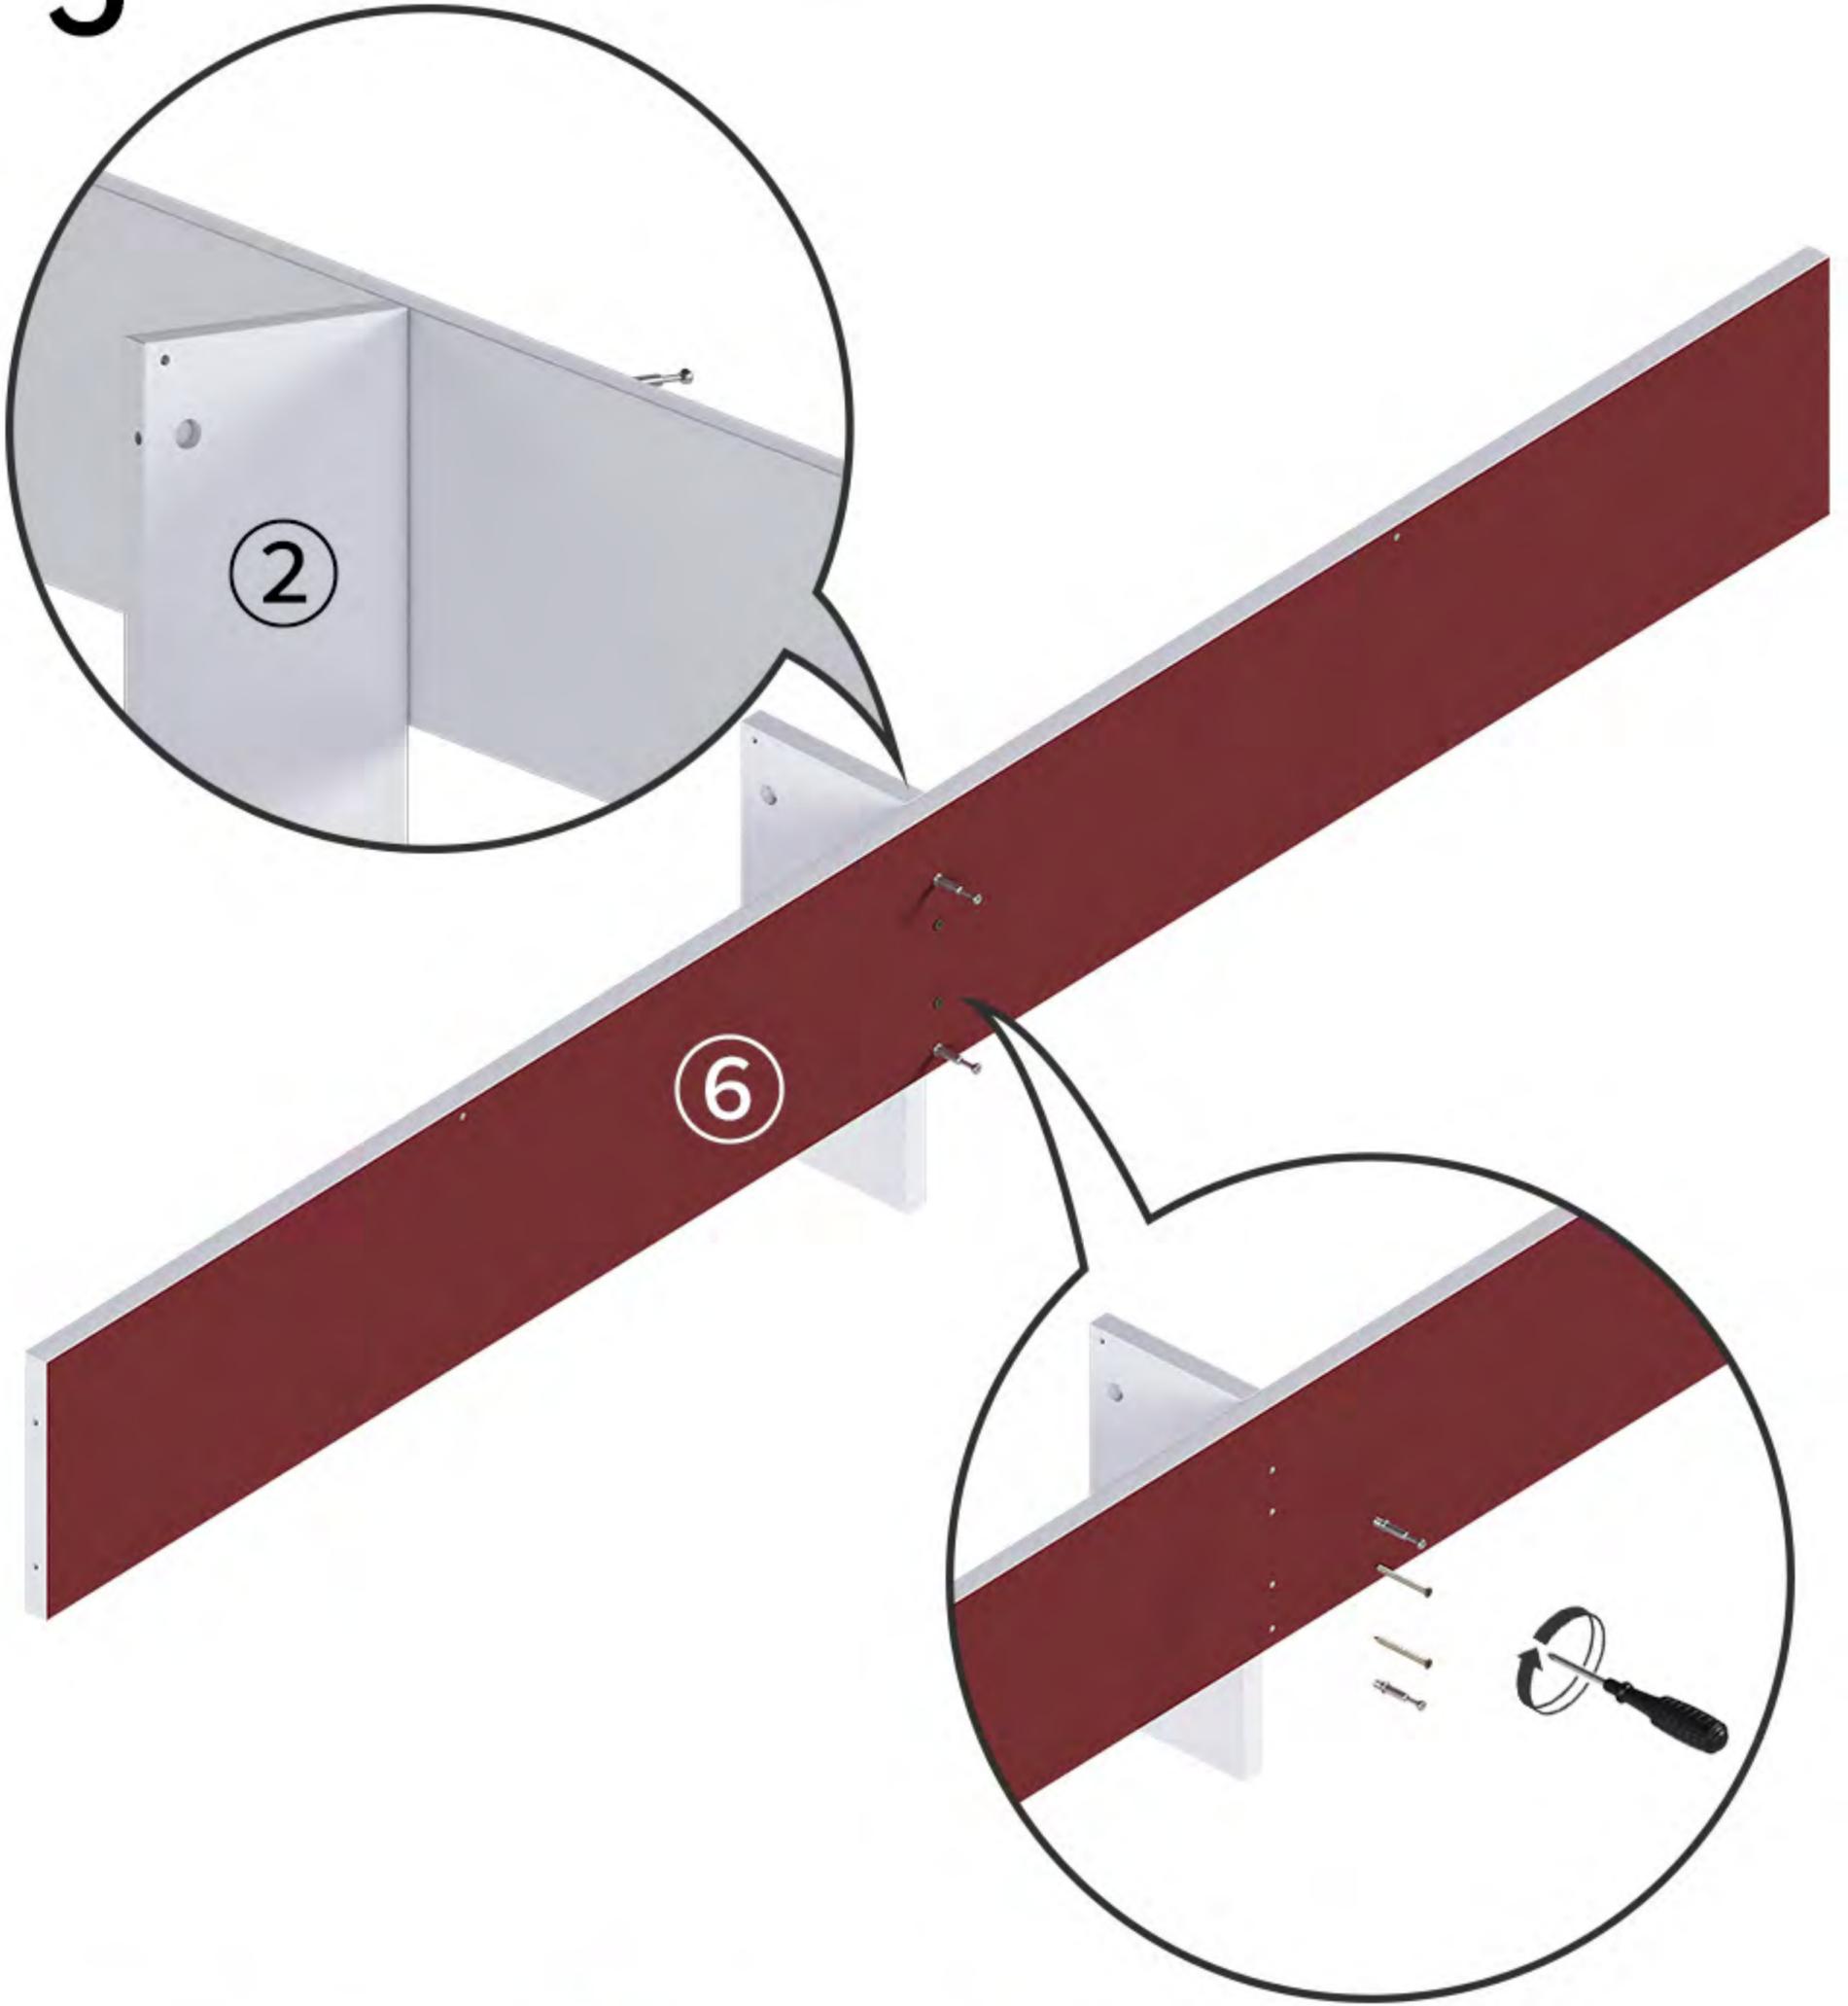

4

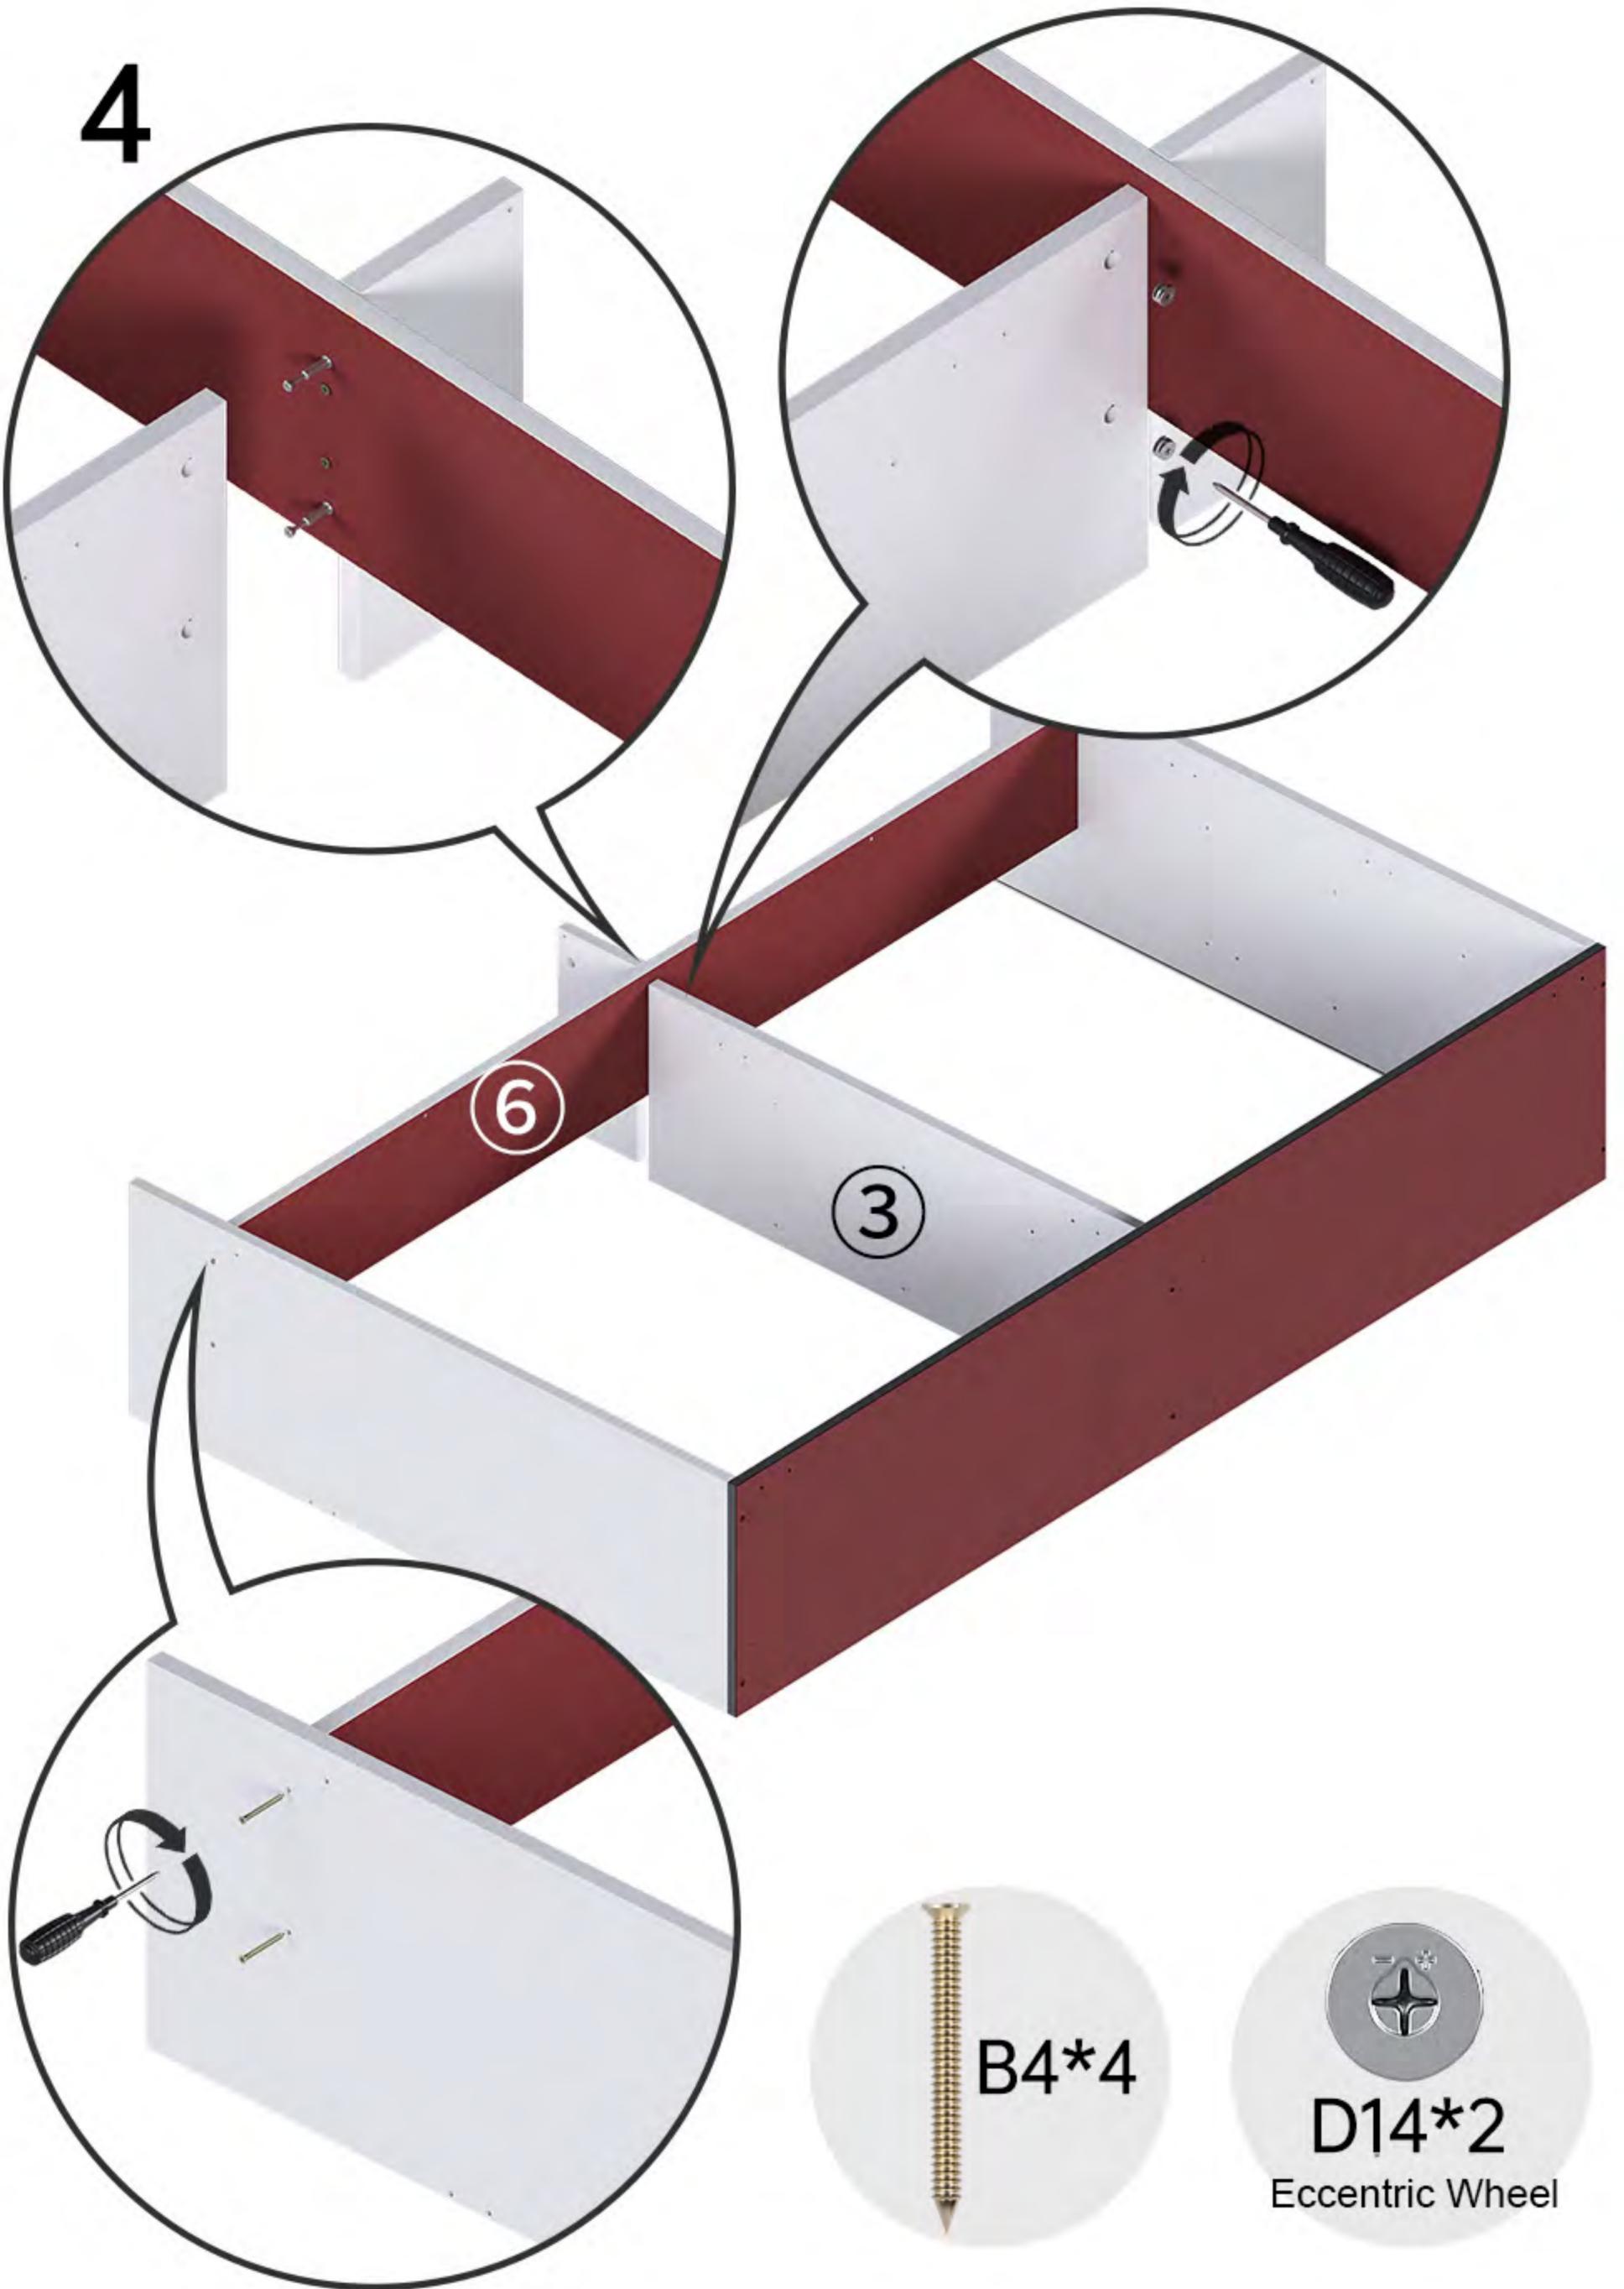

5

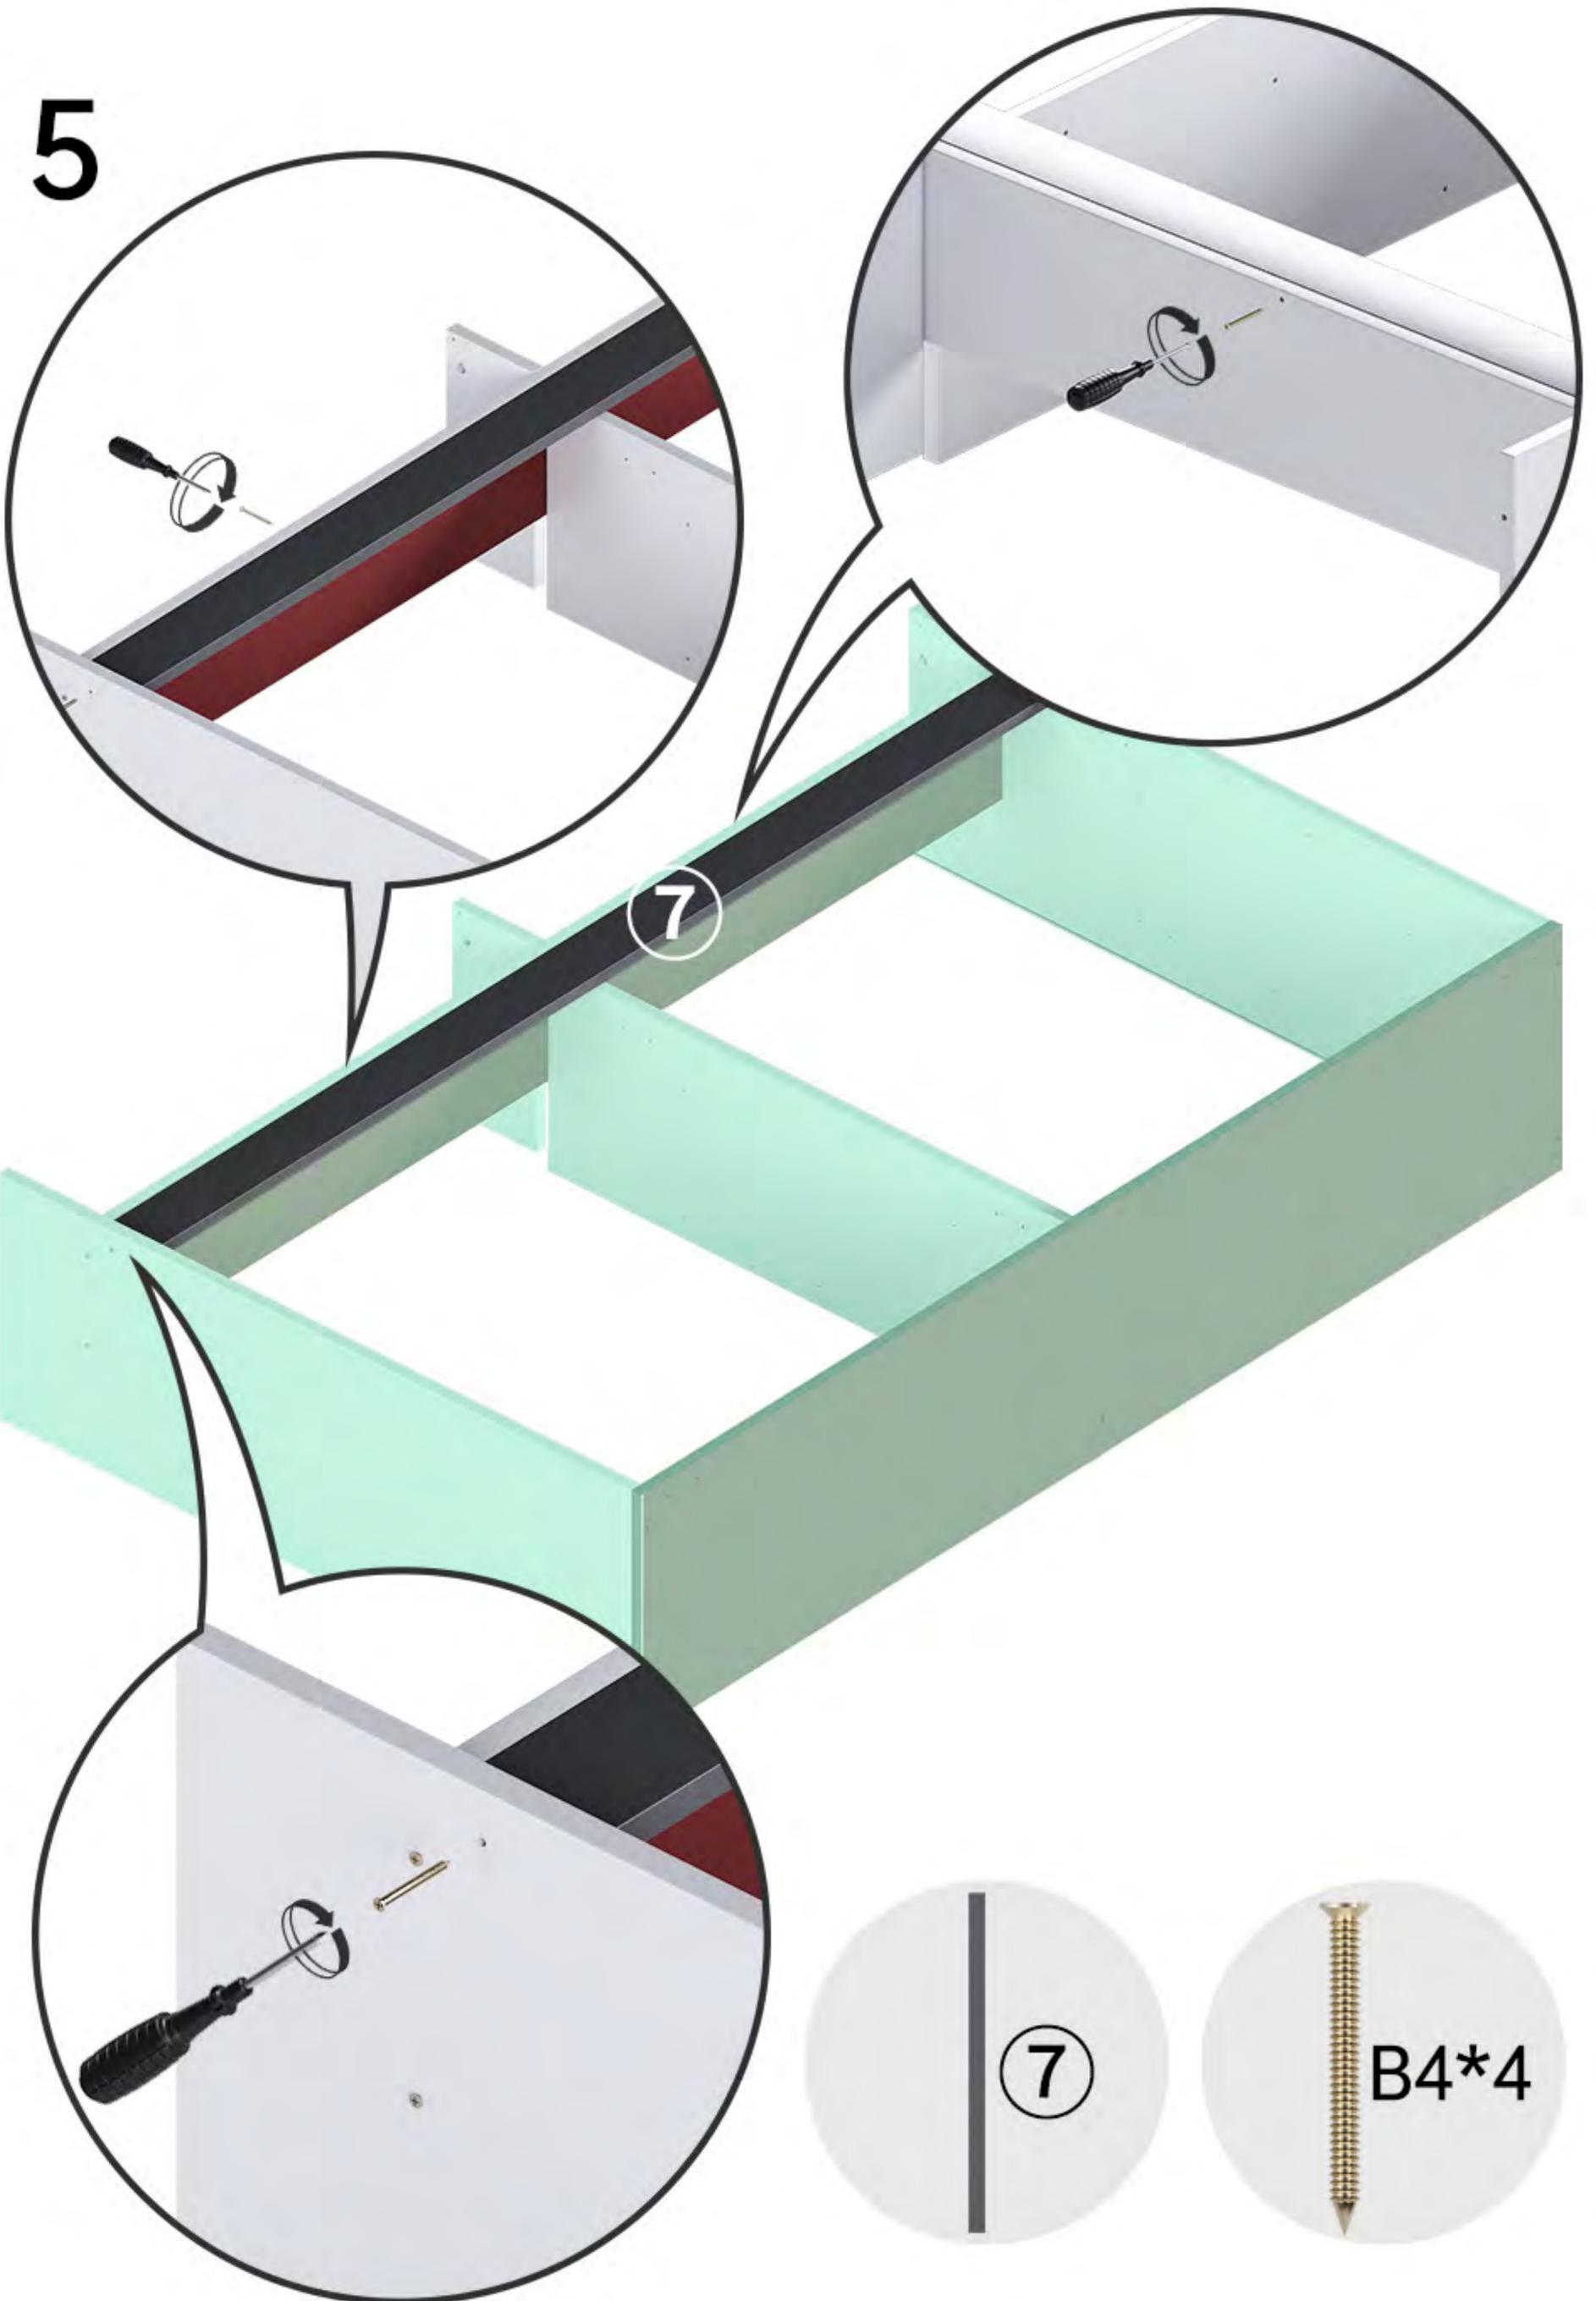


7


7

B4*4

6

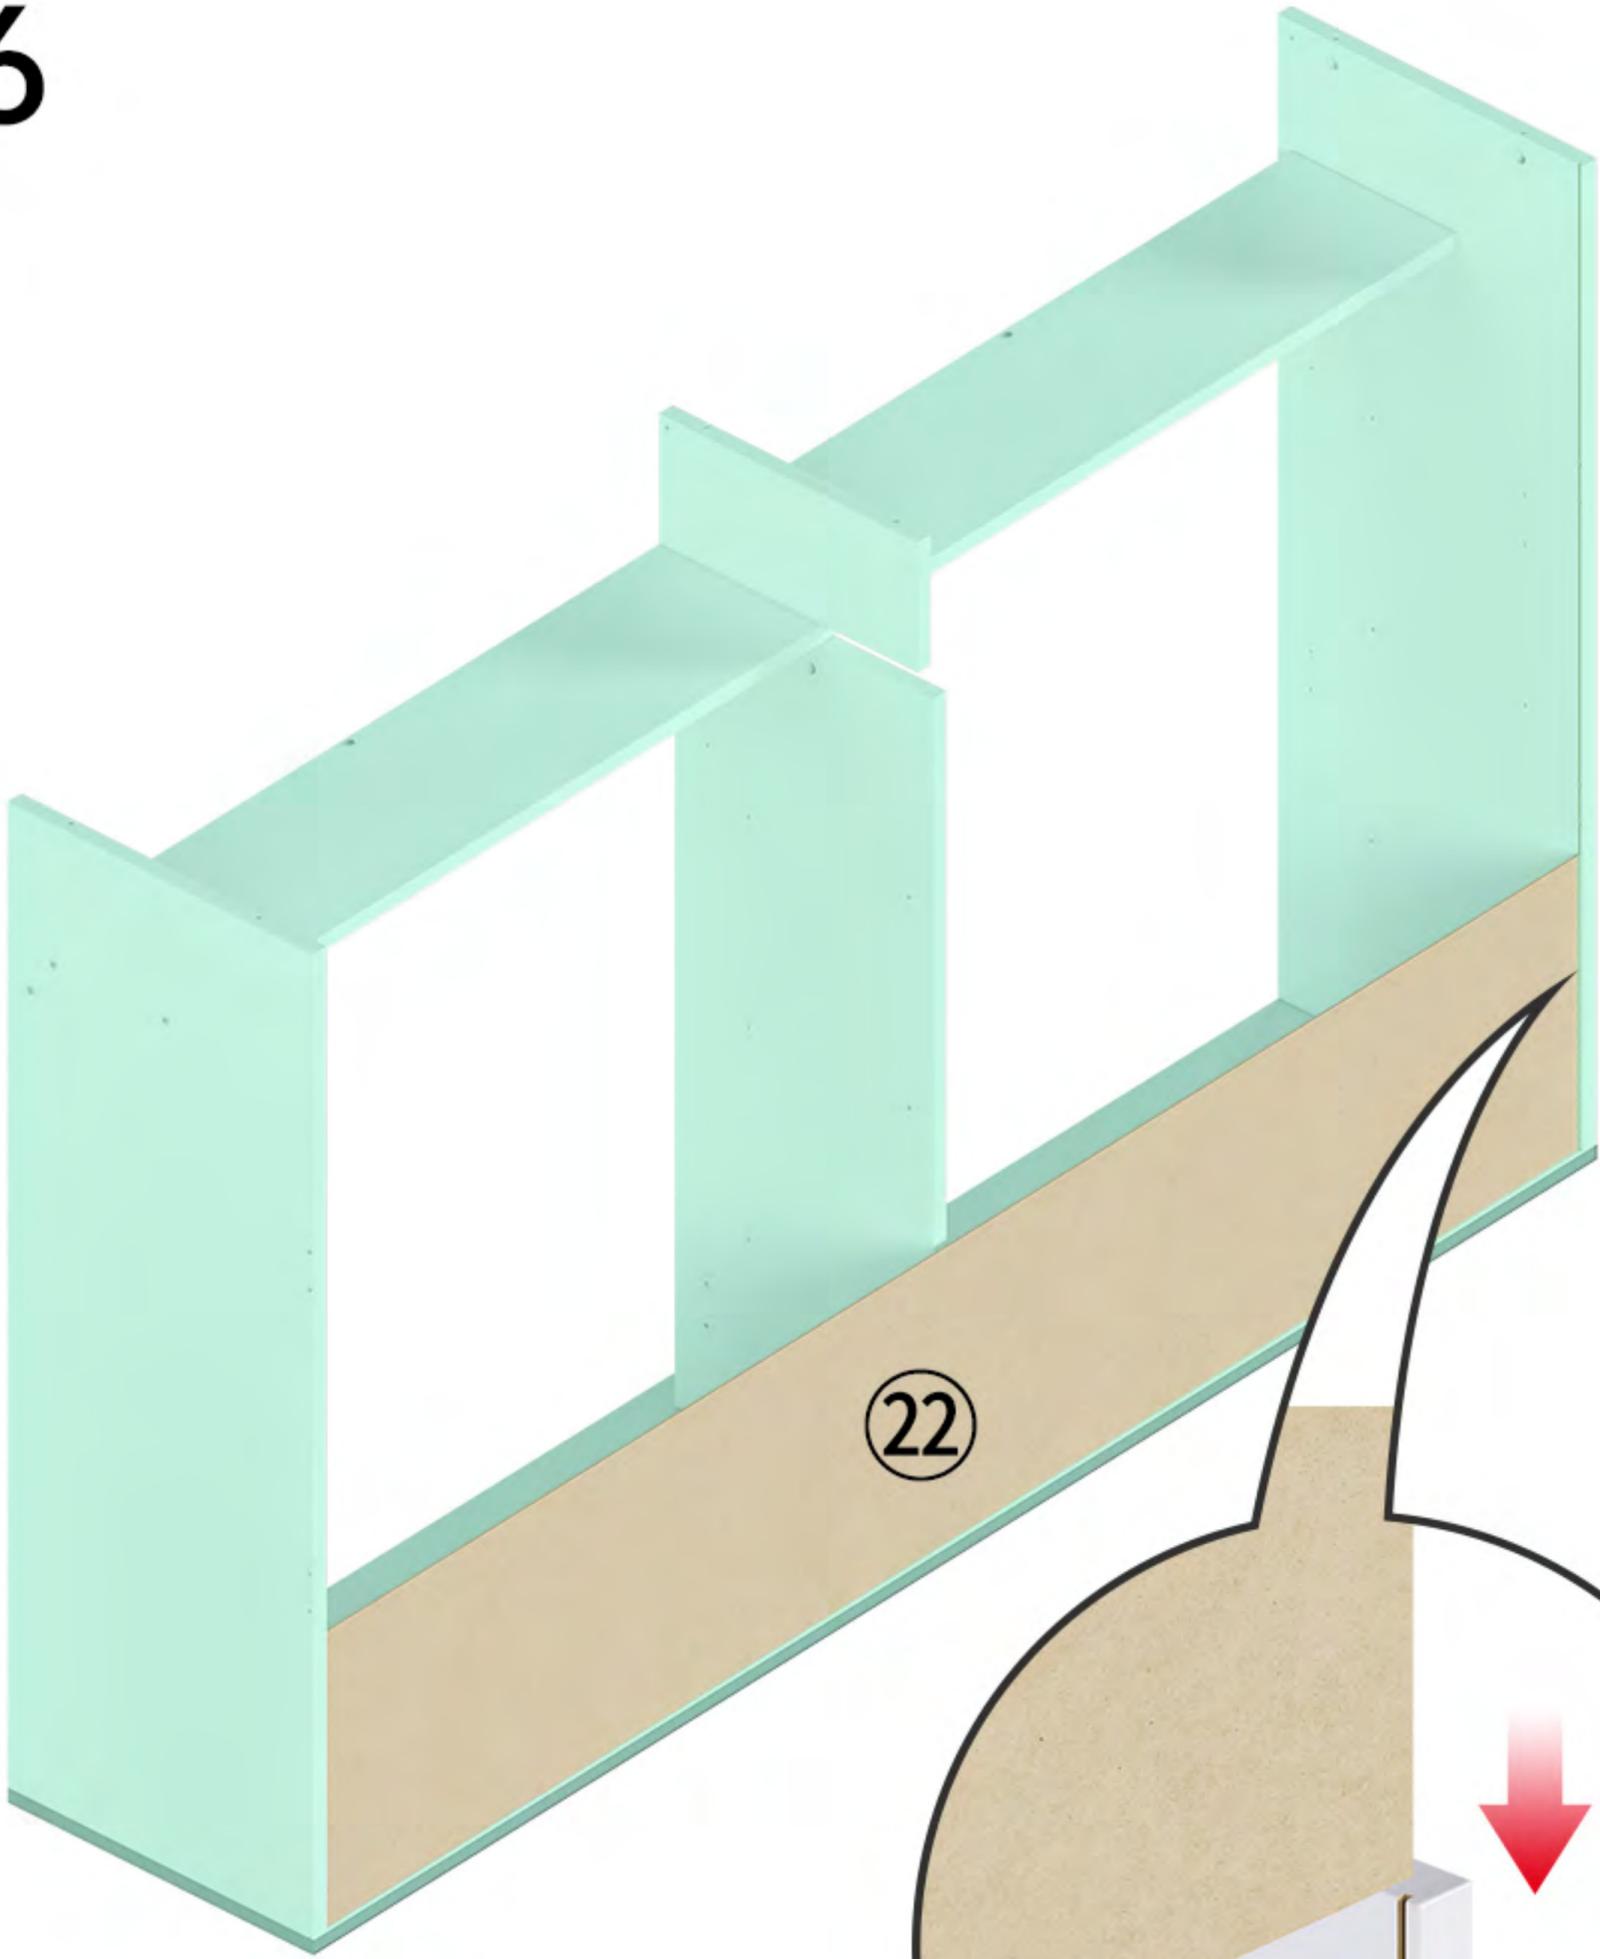


22


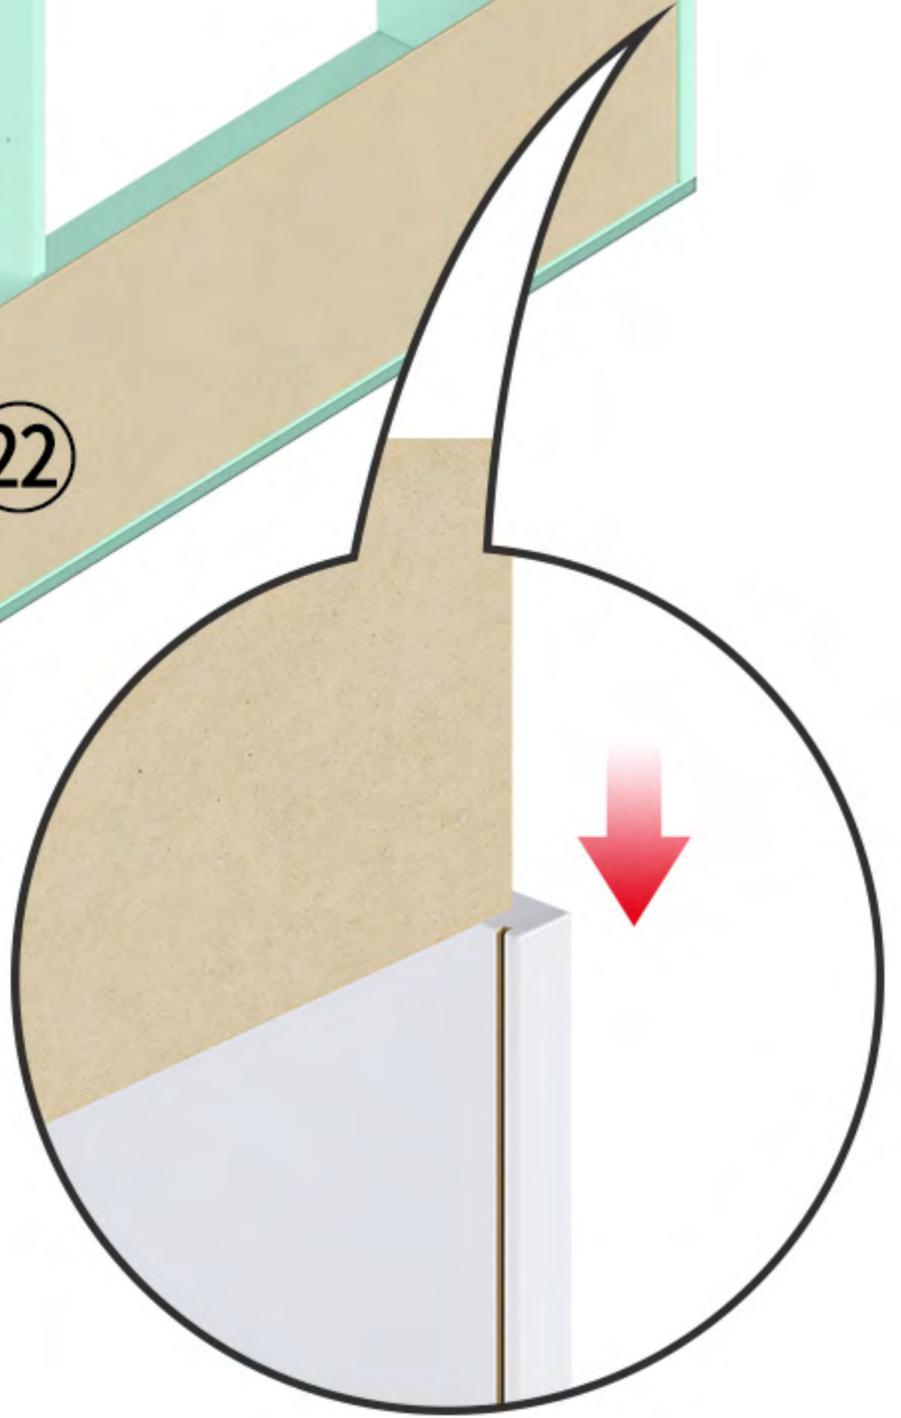


22

7

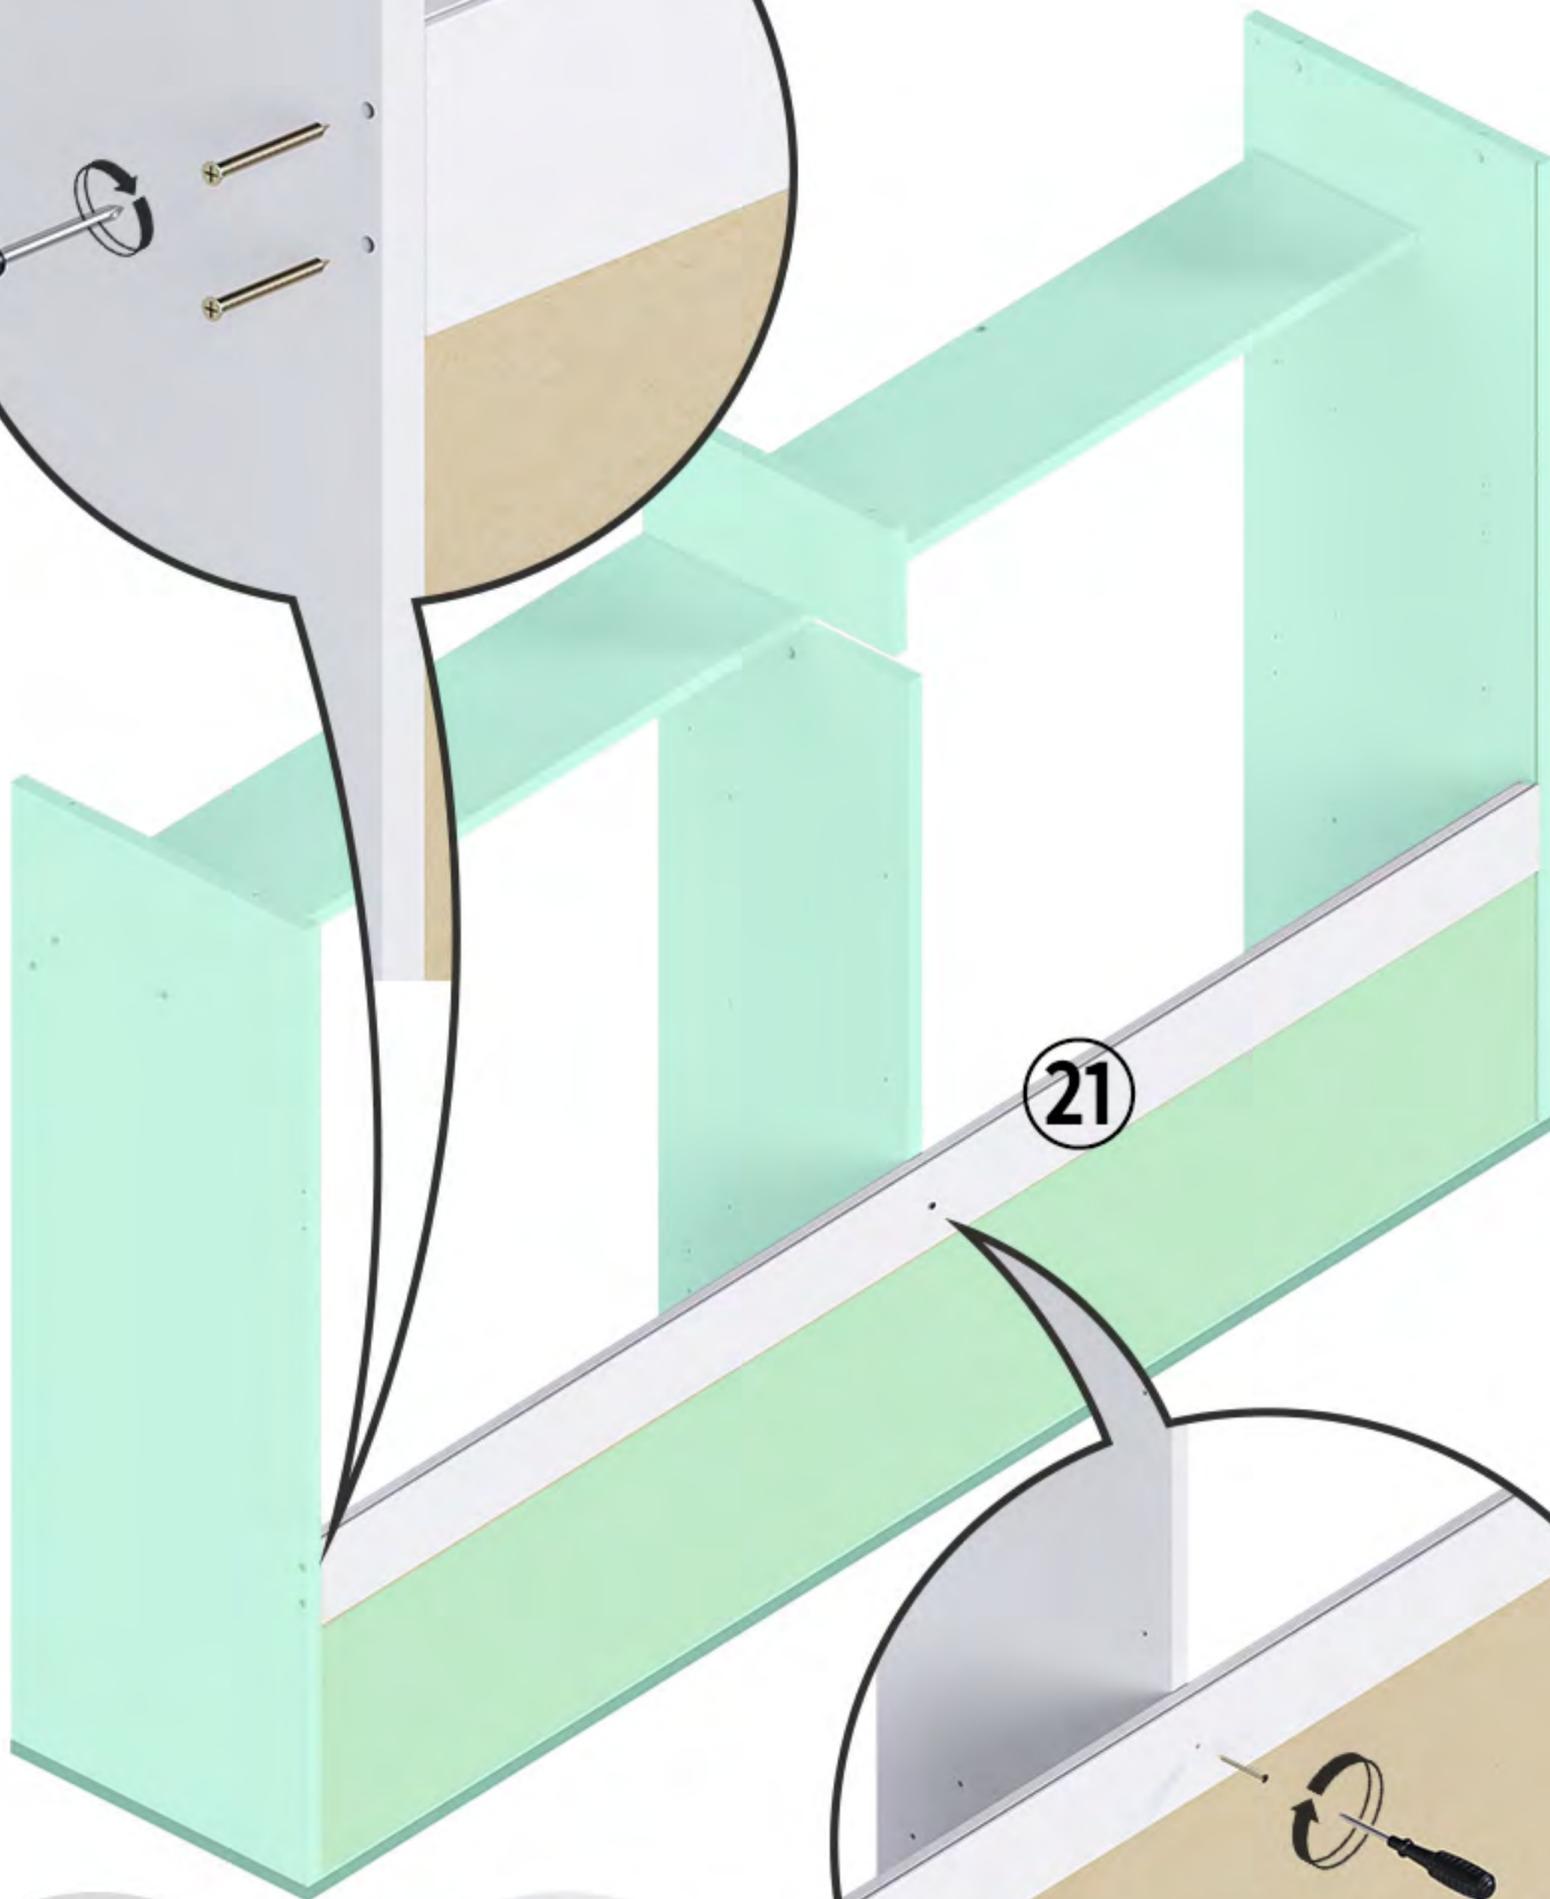

21

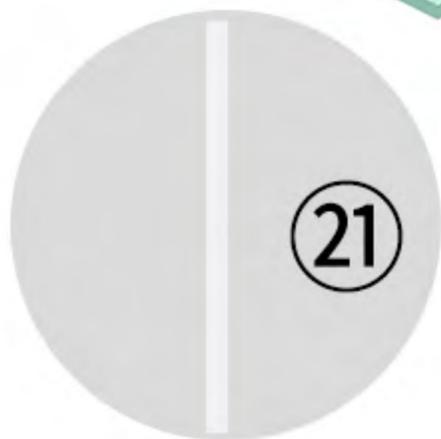
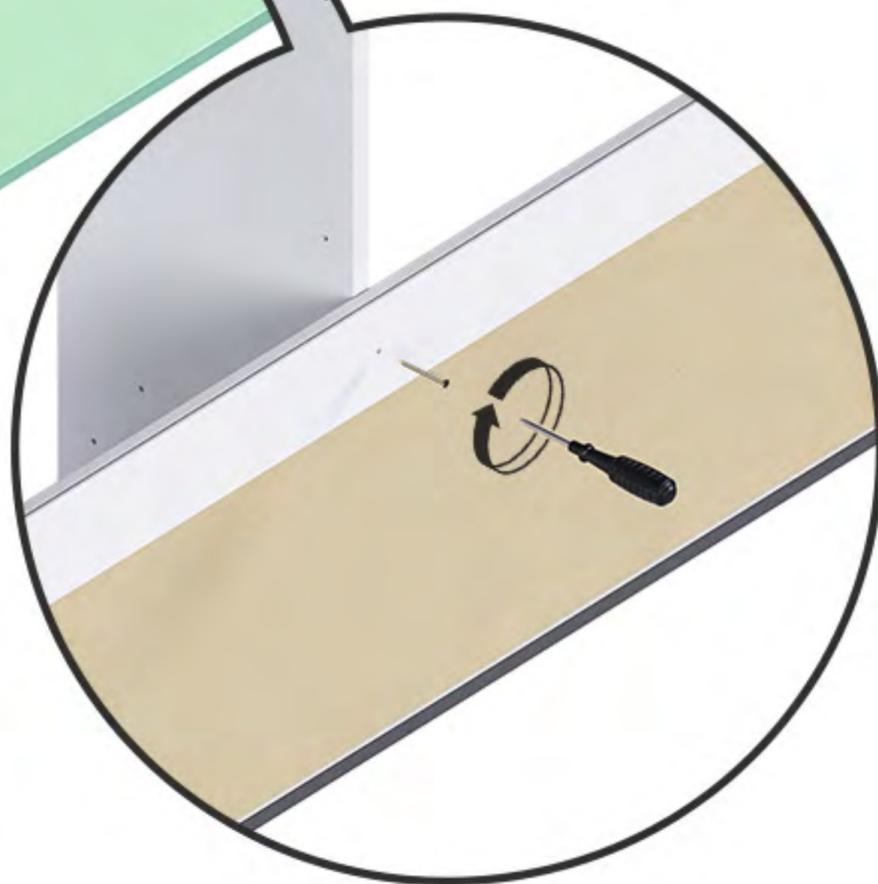


21




B4*5


8

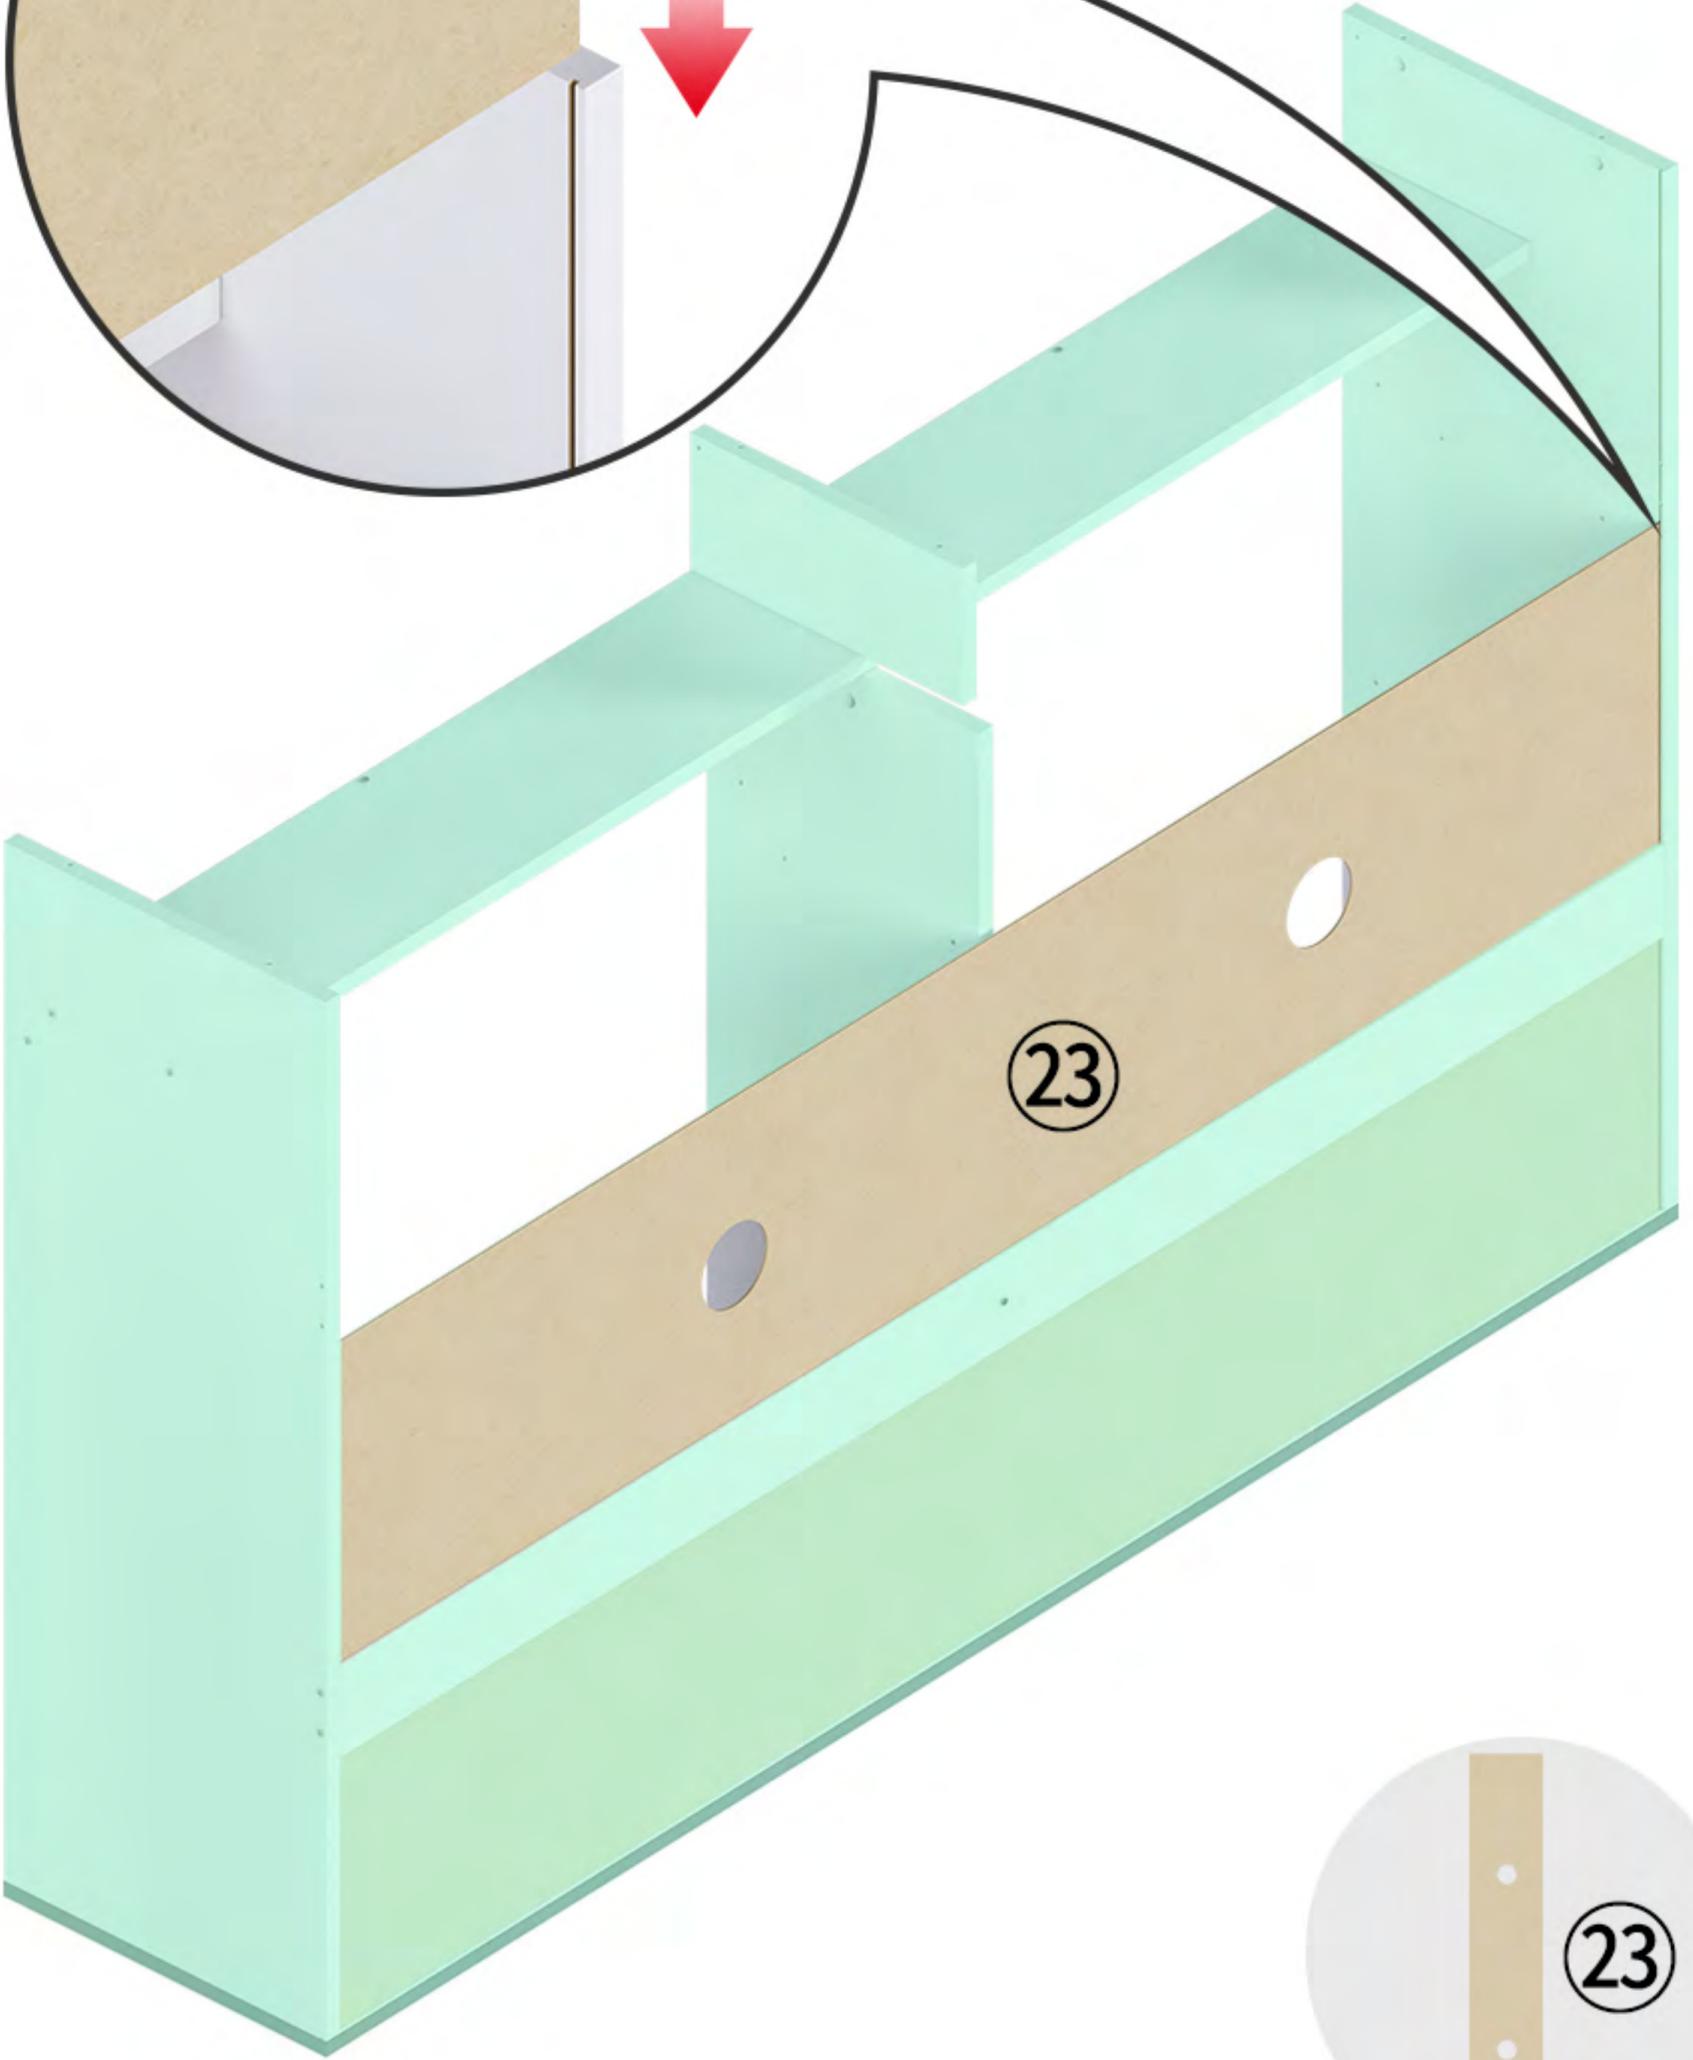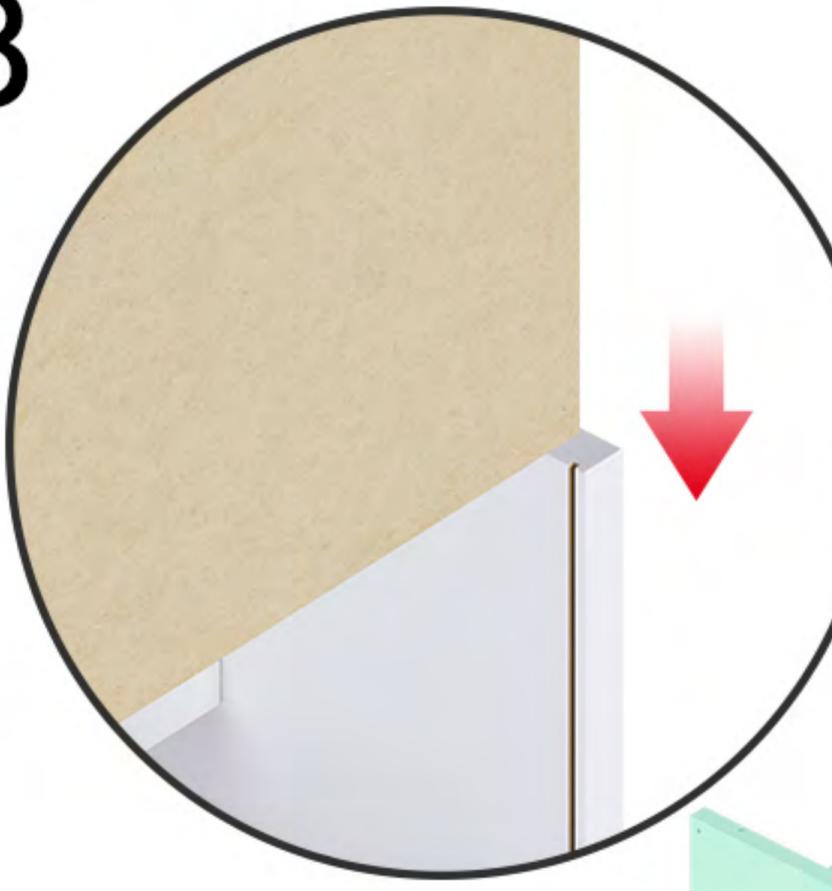


9

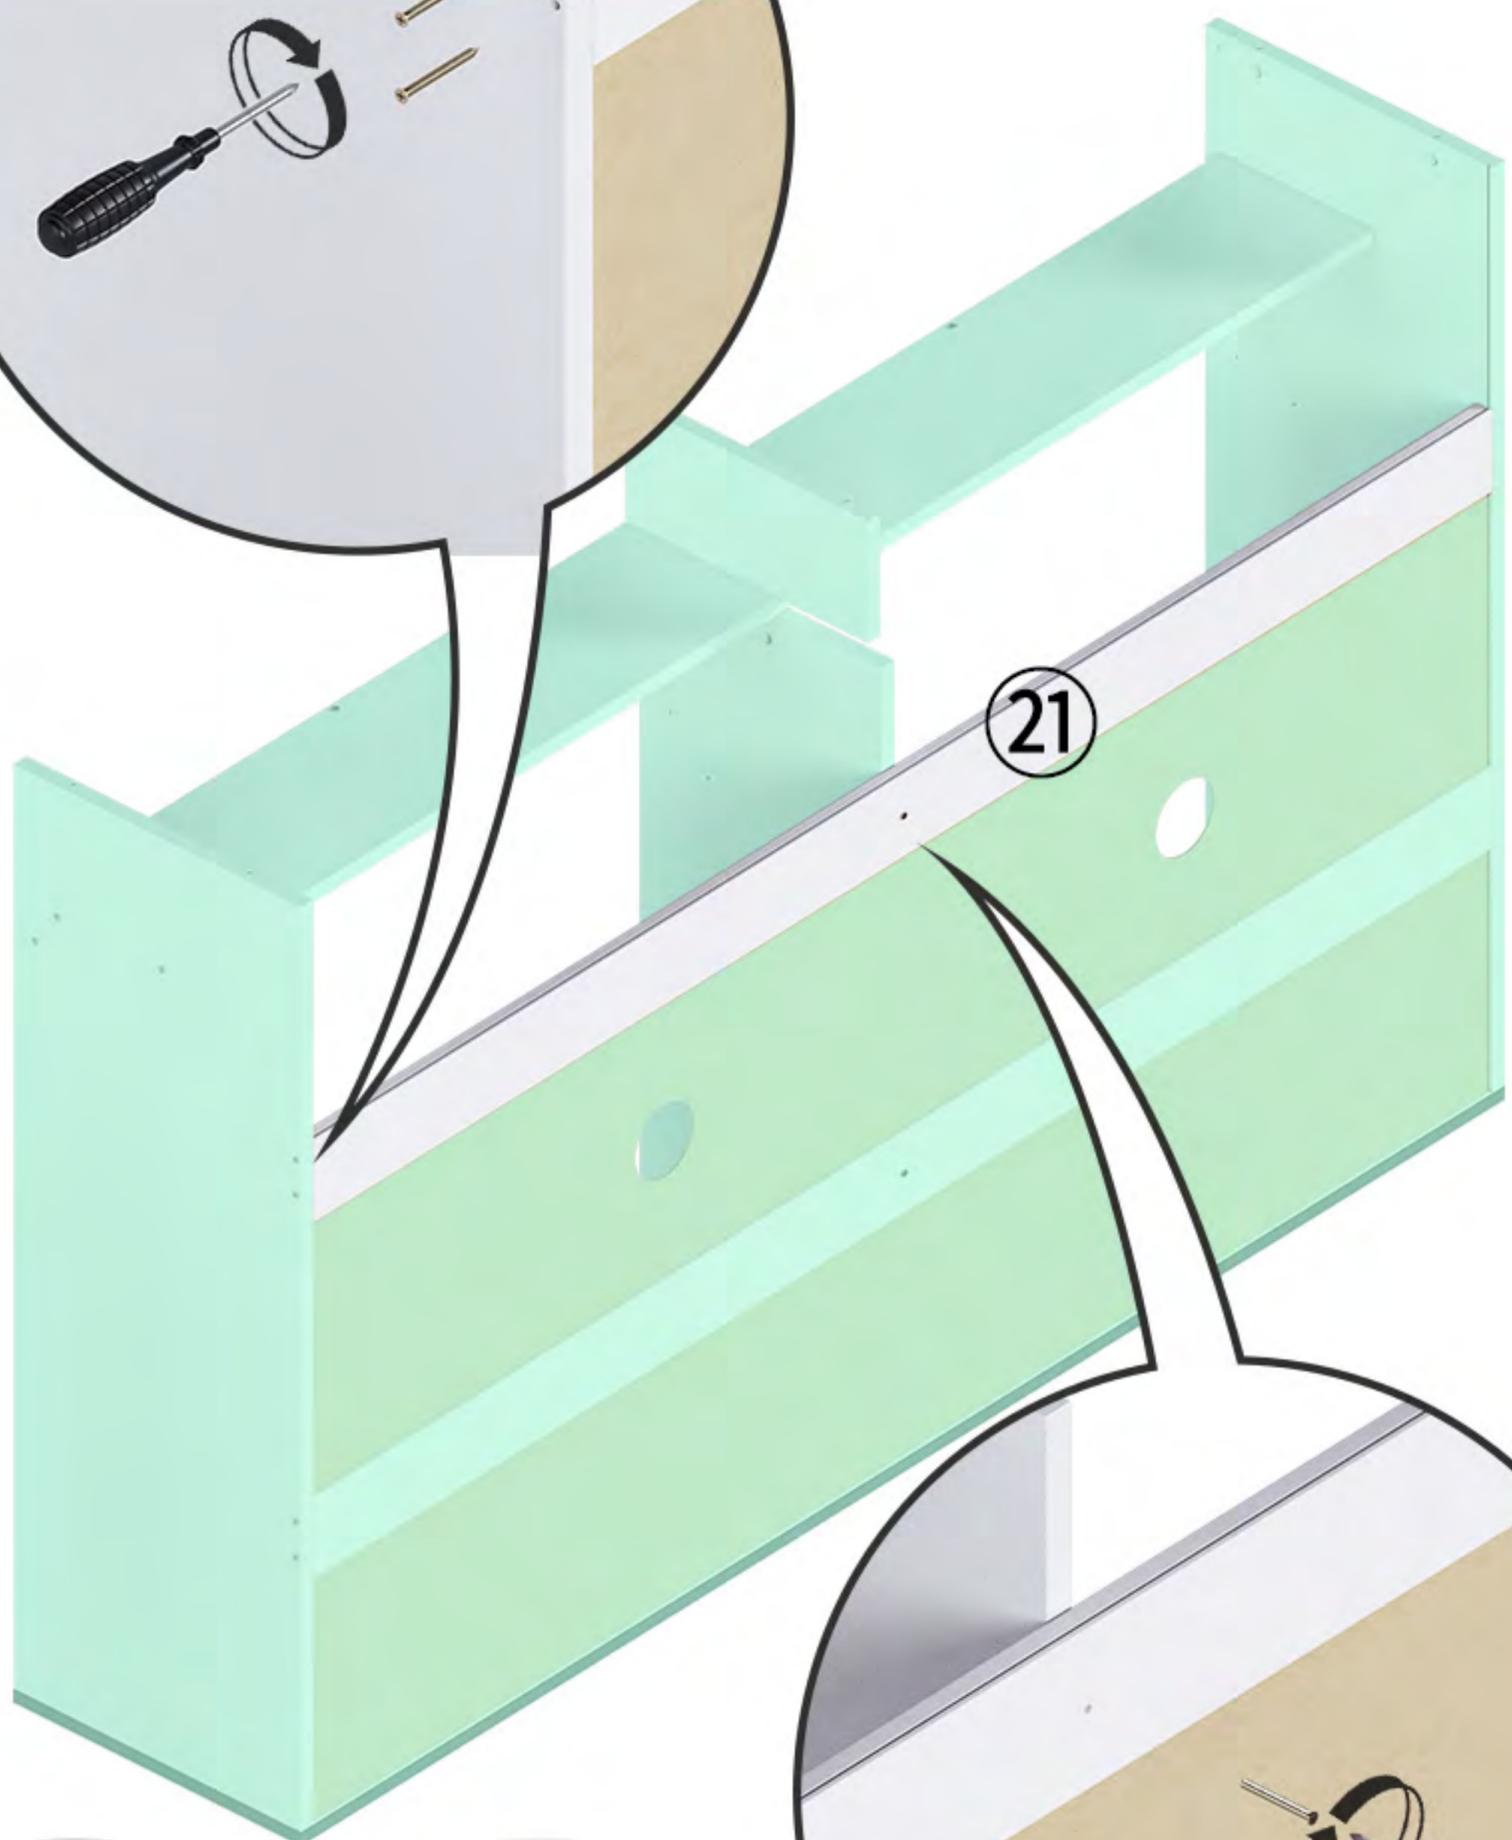


21

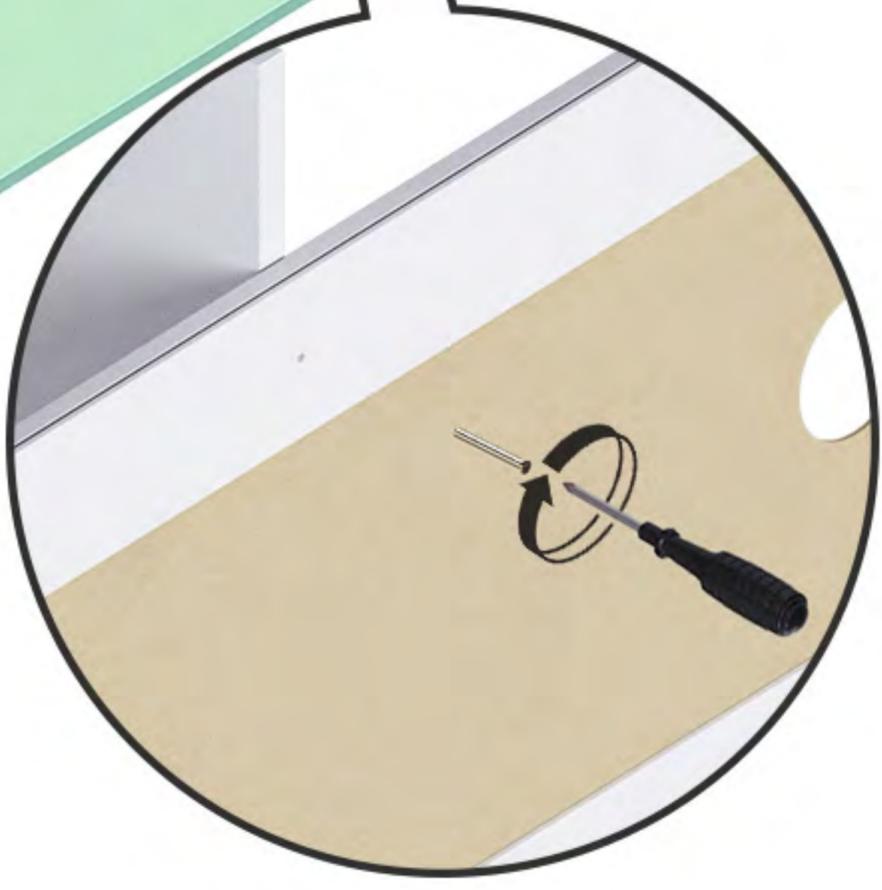


10

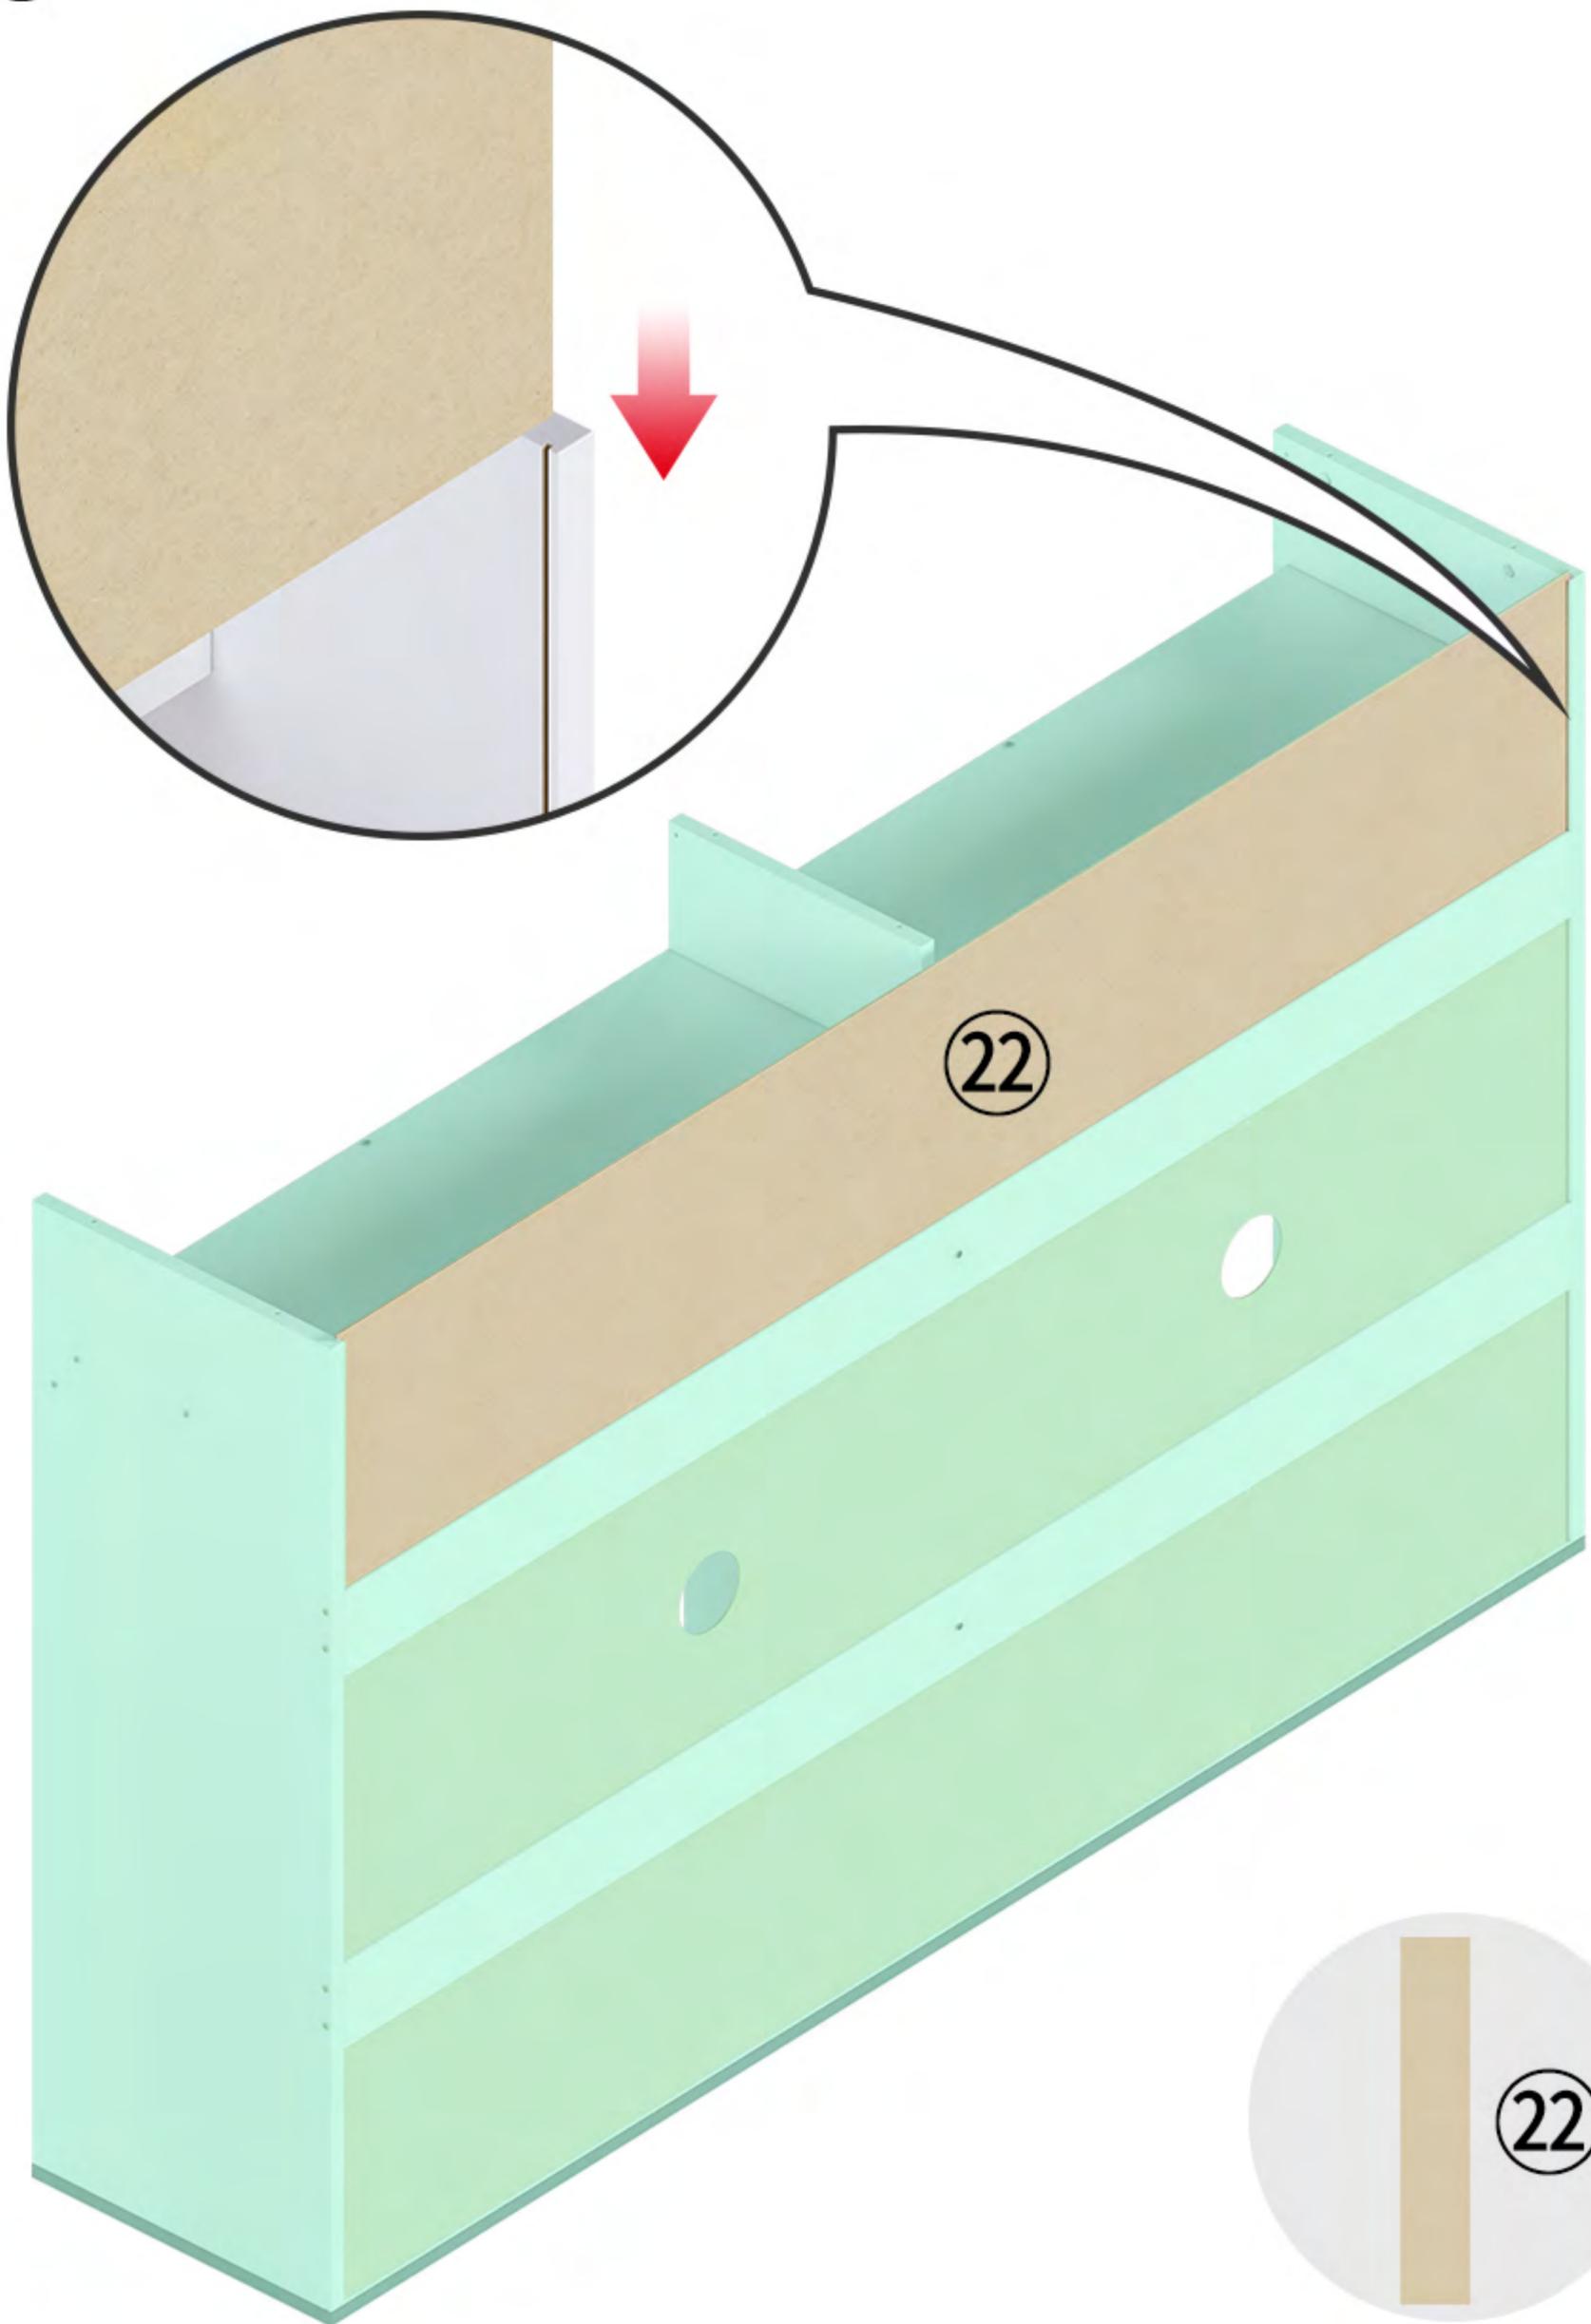

11

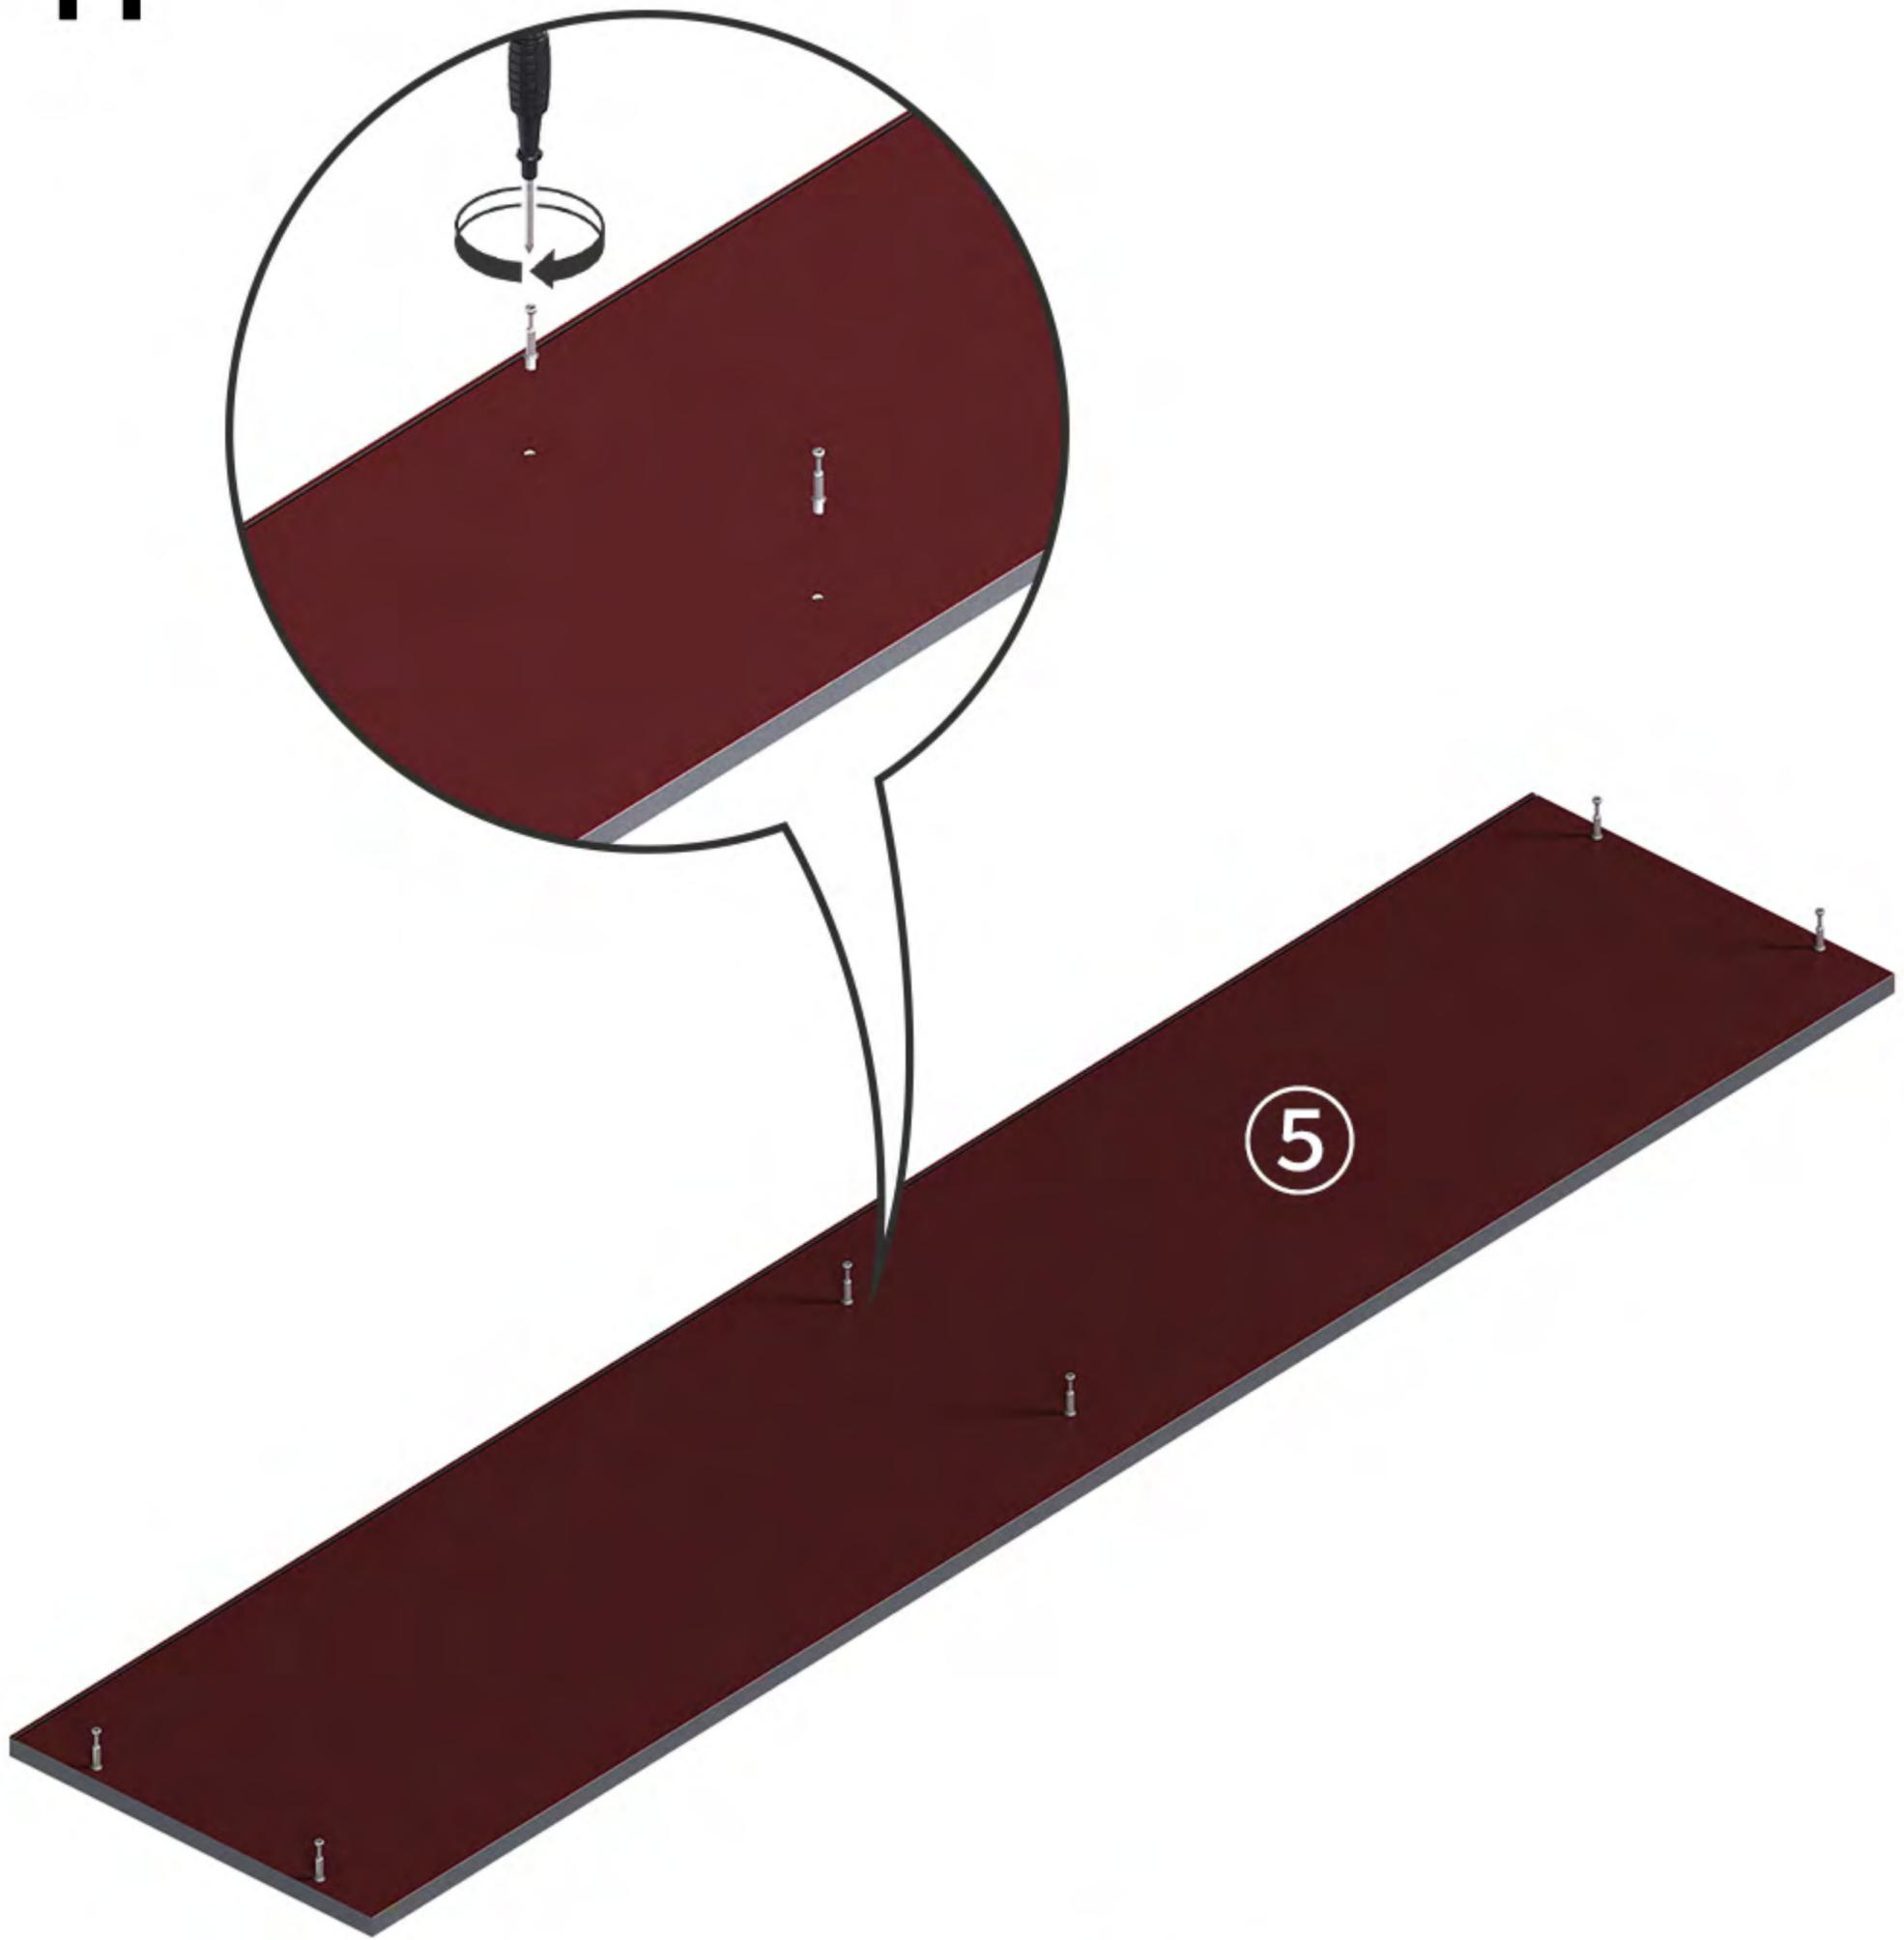



12

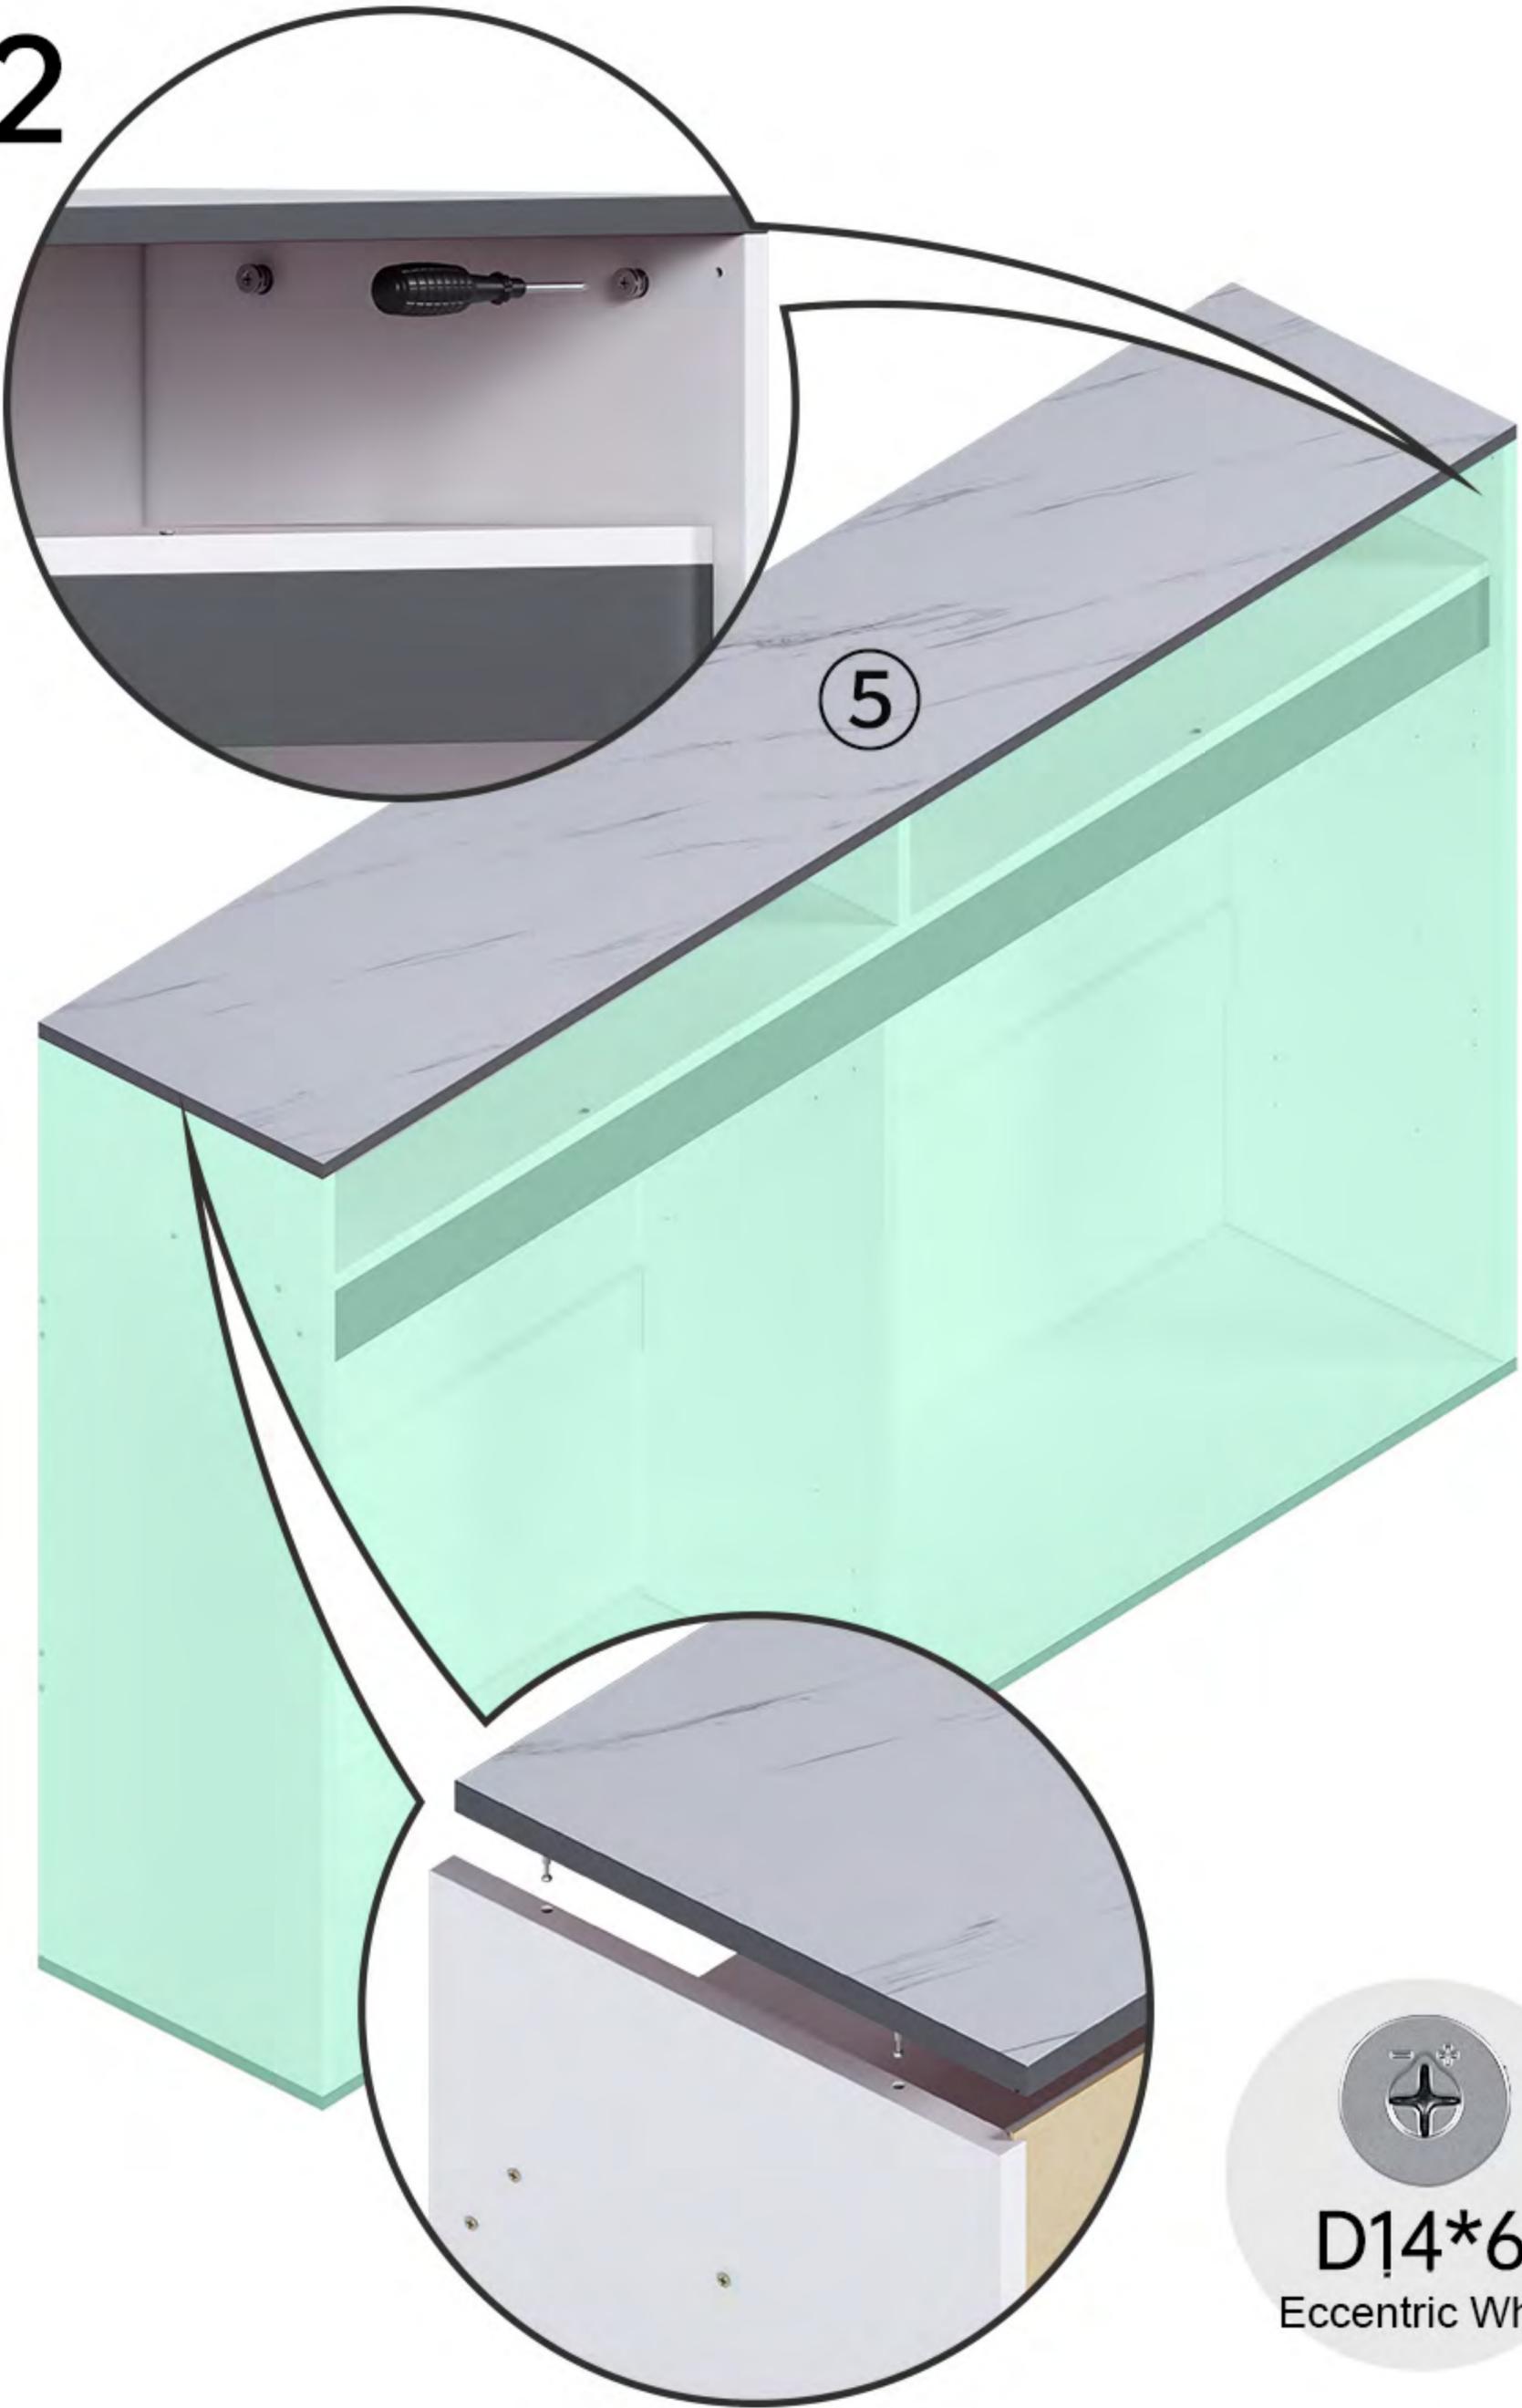

5


D14*6
Eccentric Wheel

13

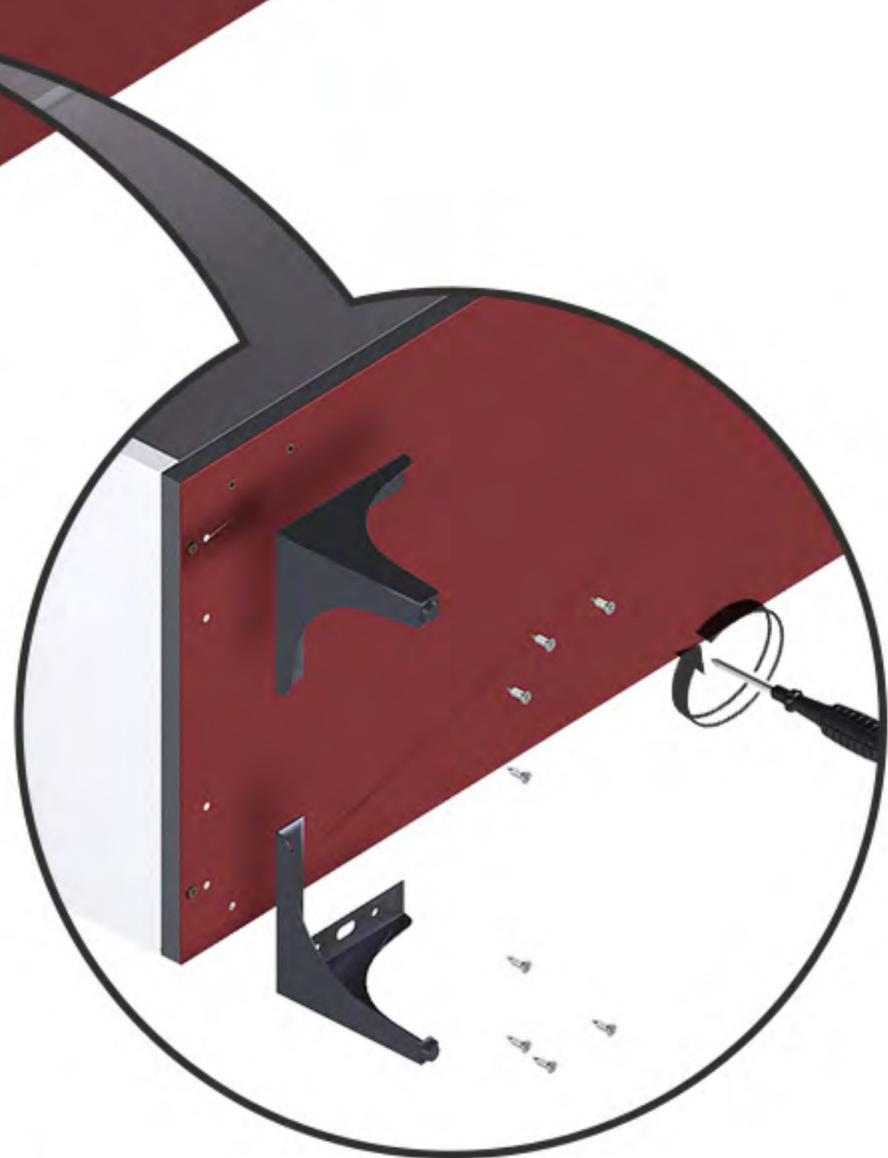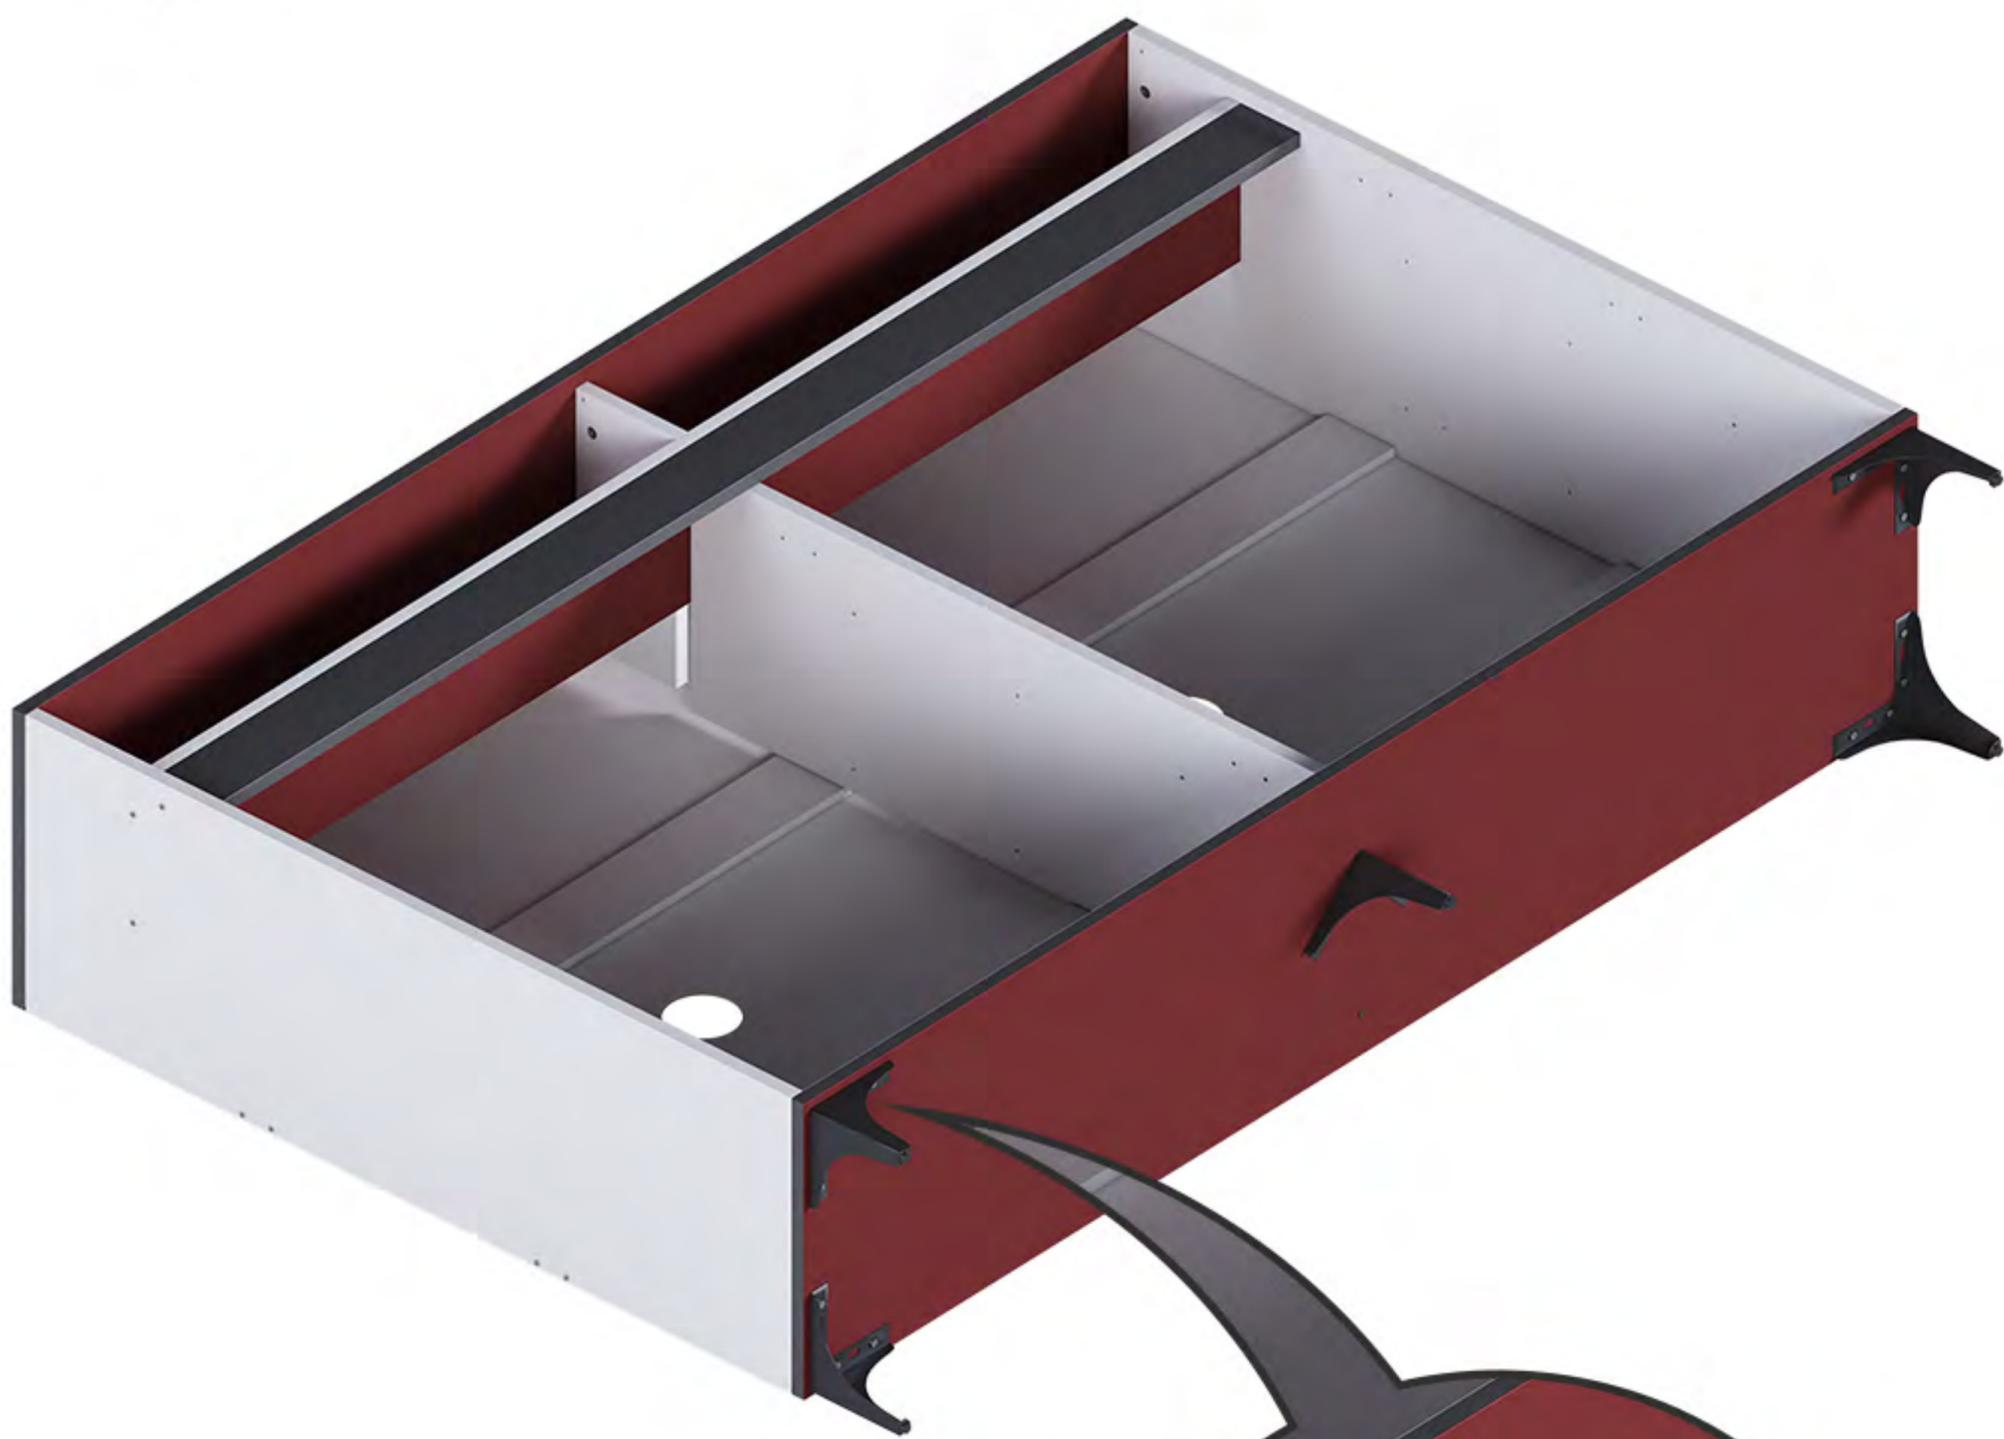


M24*5




A1*20

14

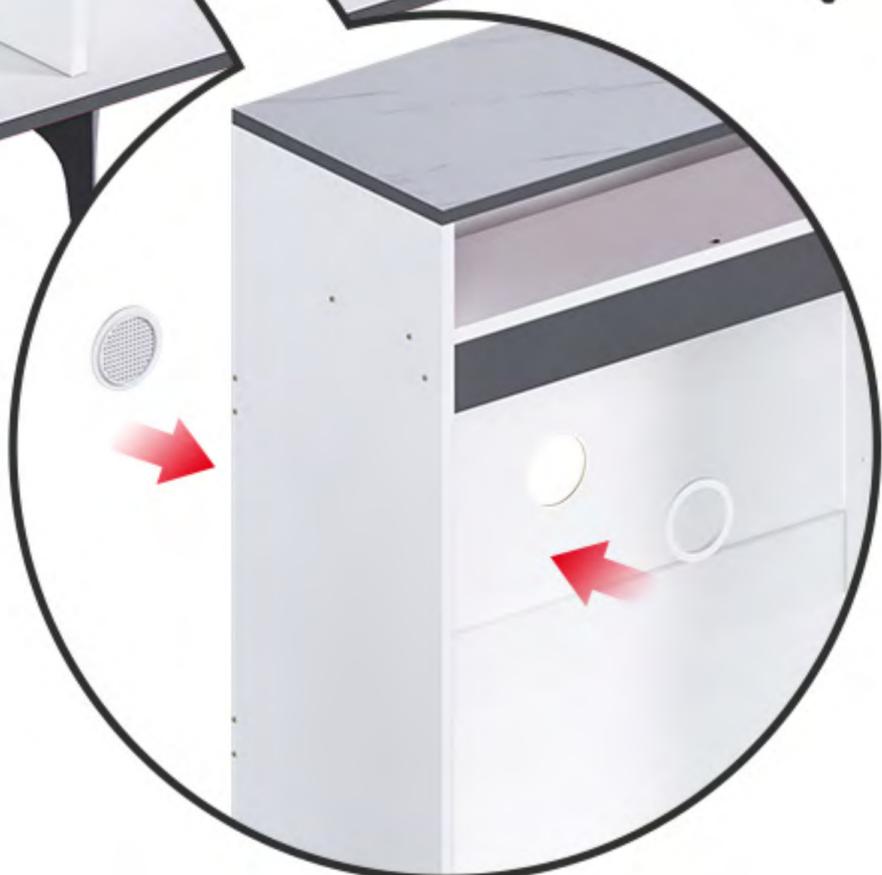


K11*2

15

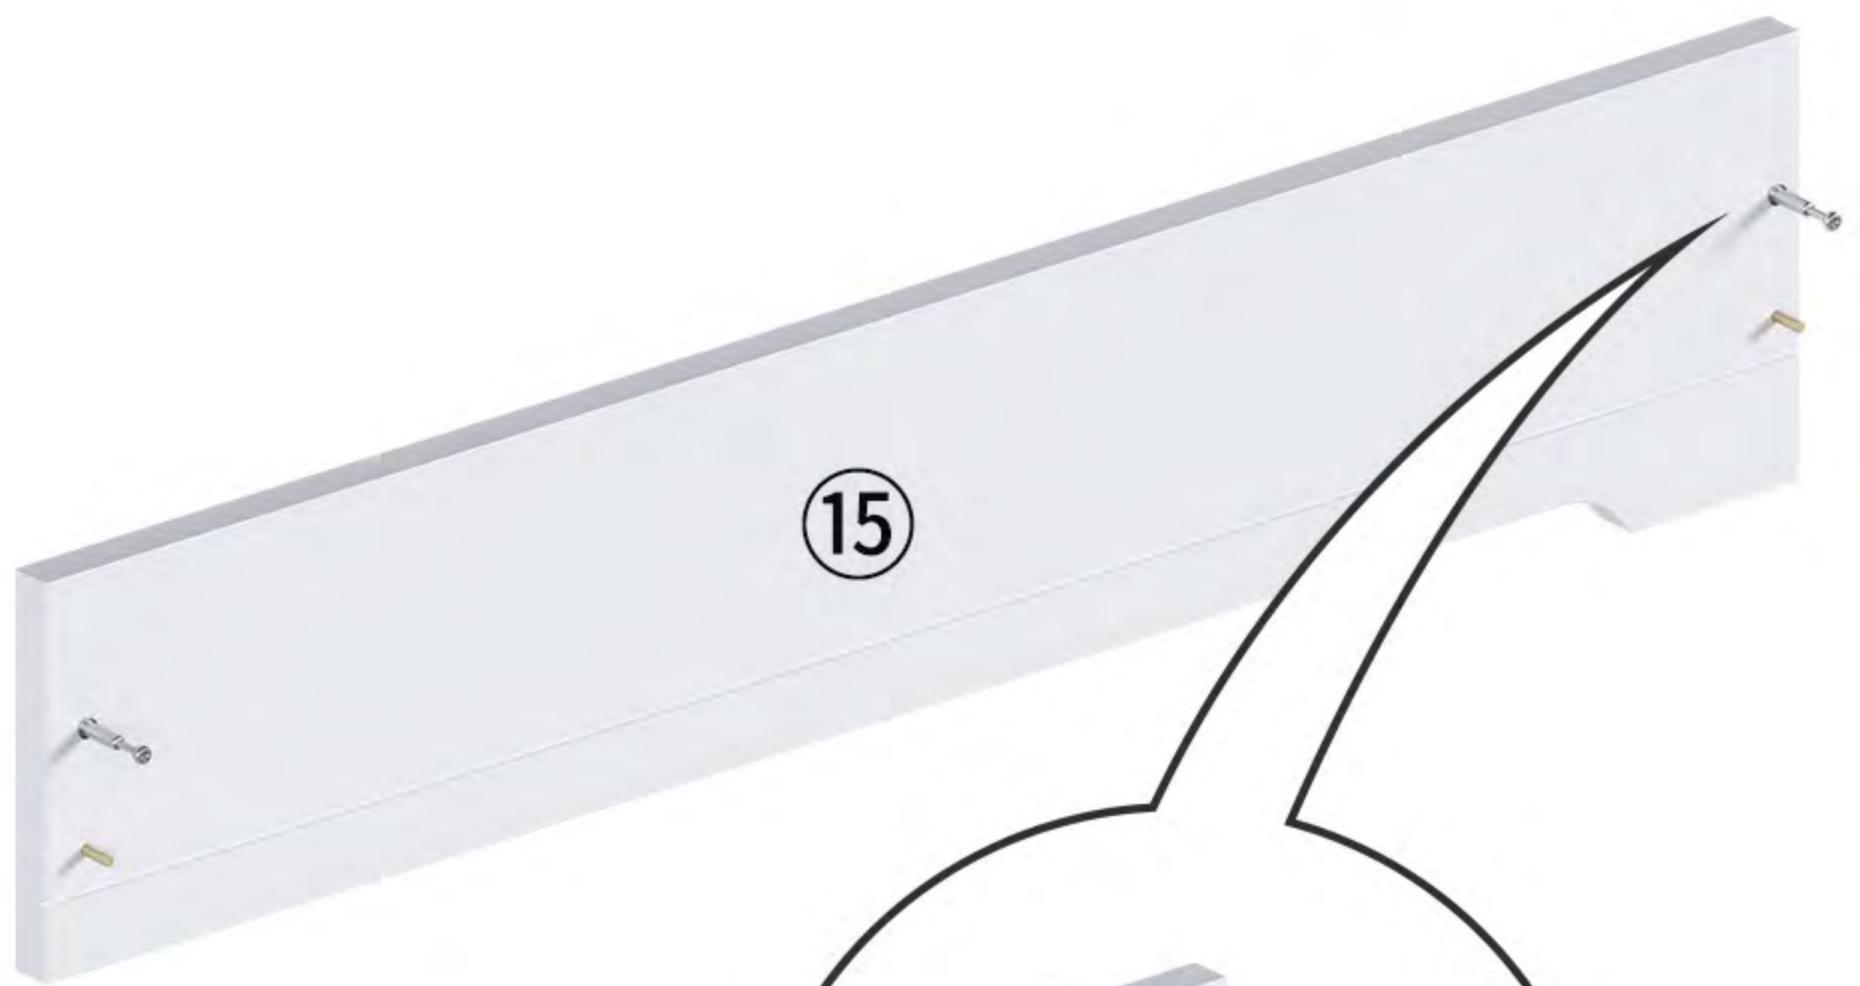

16

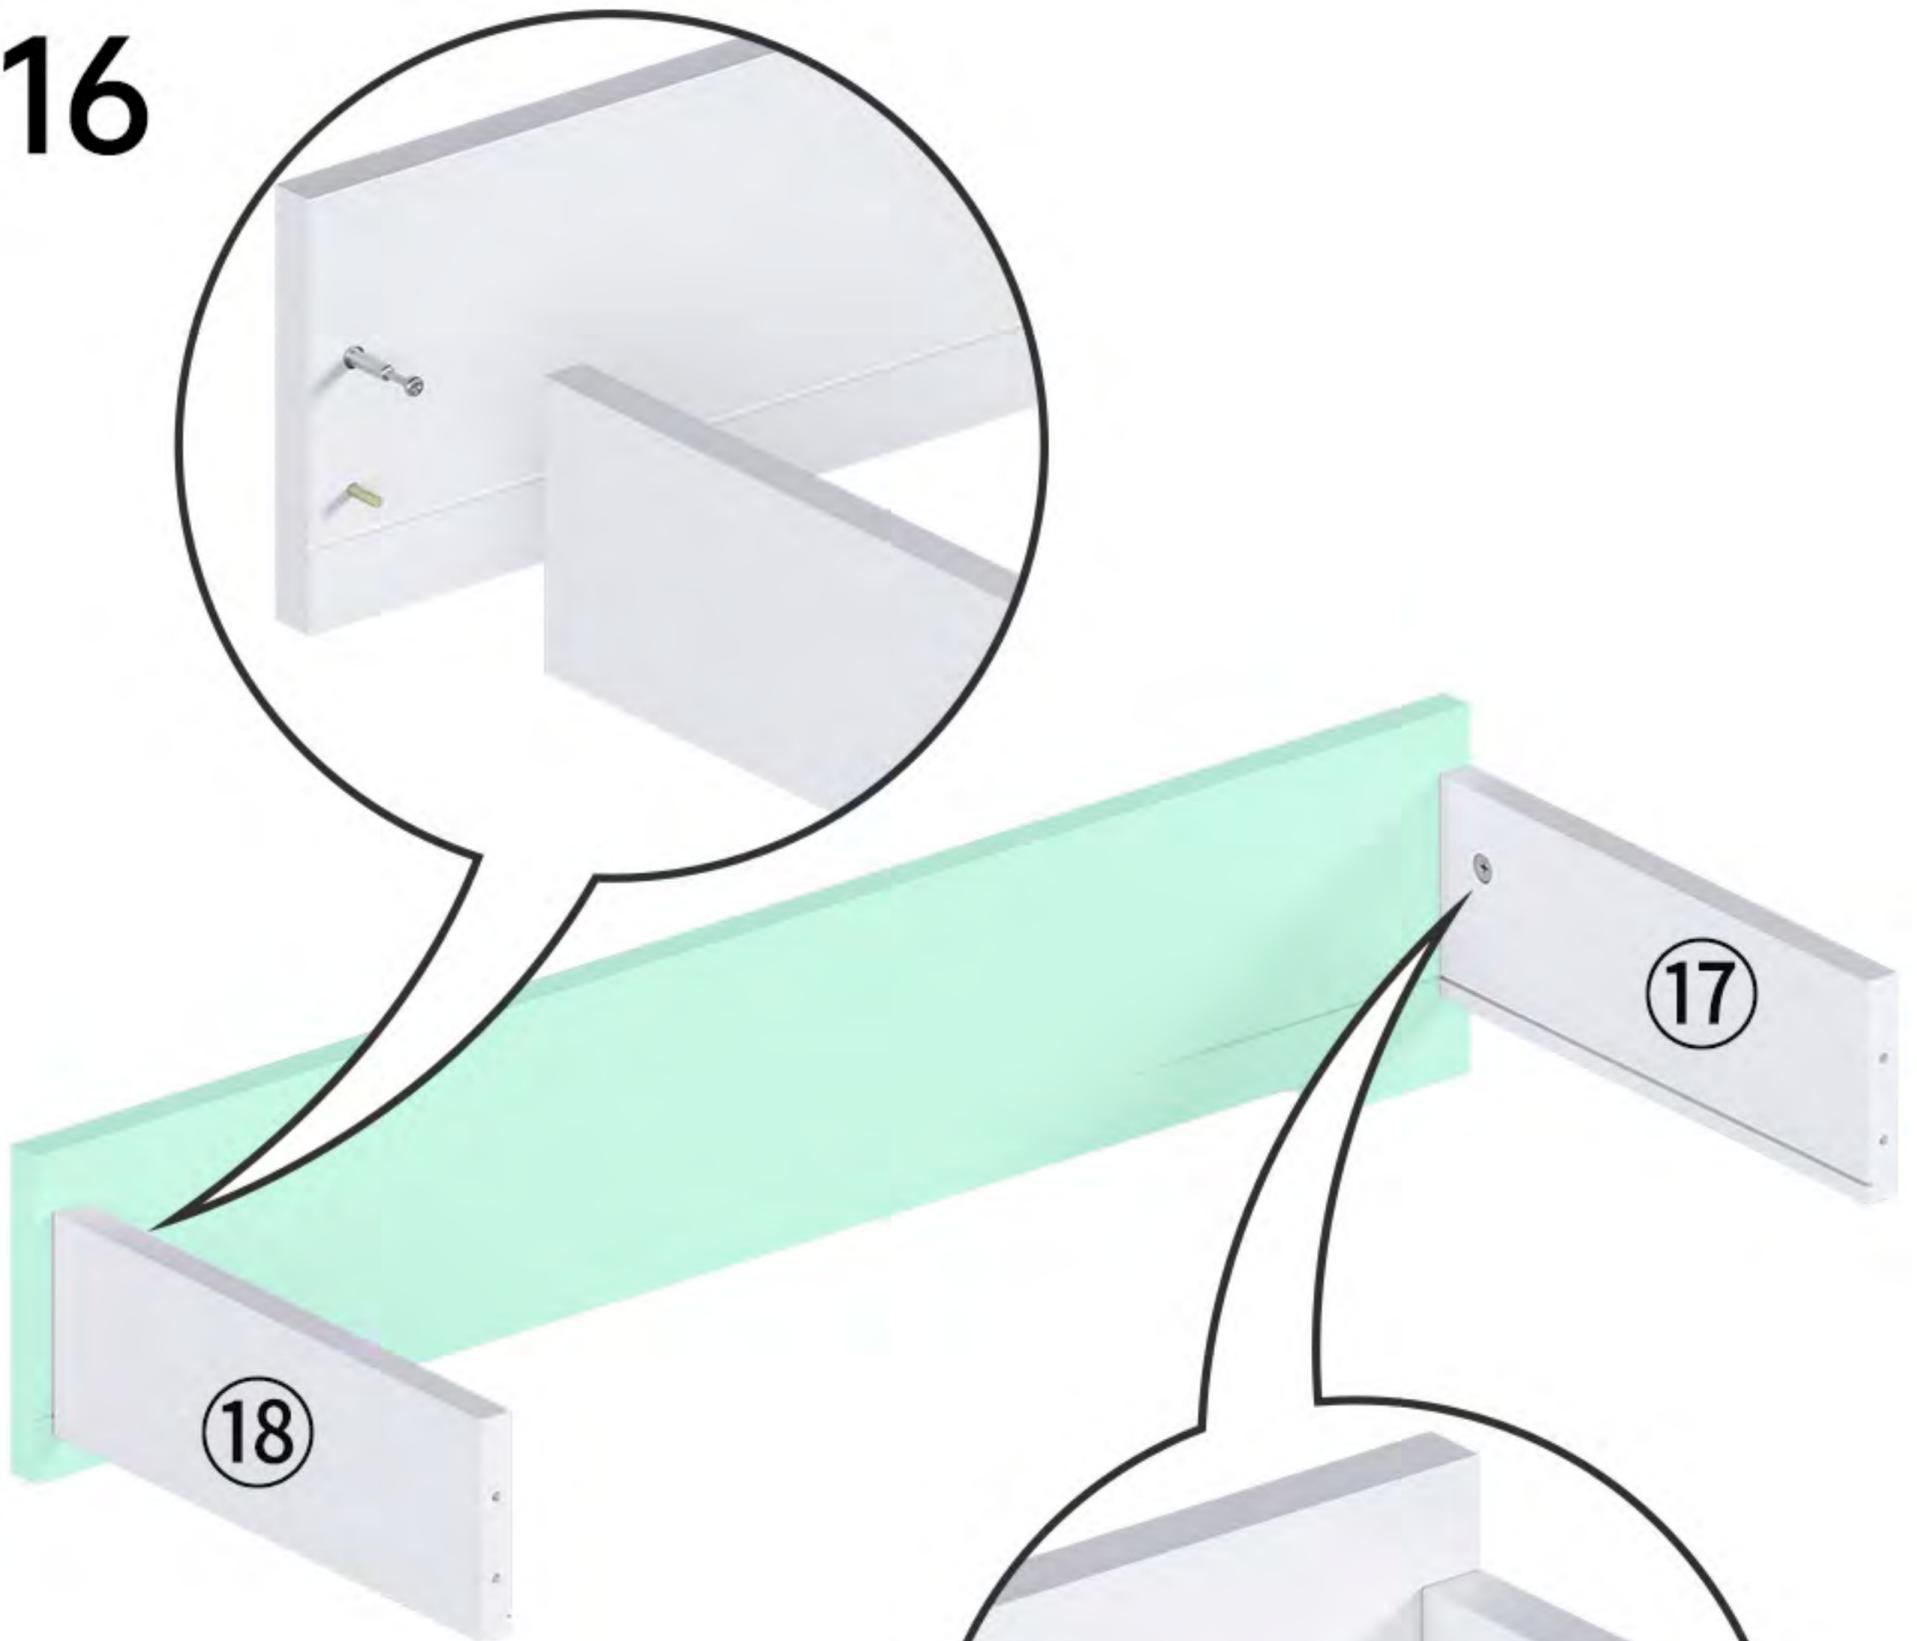

17





18




D14*2
Eccentric Wheel




17

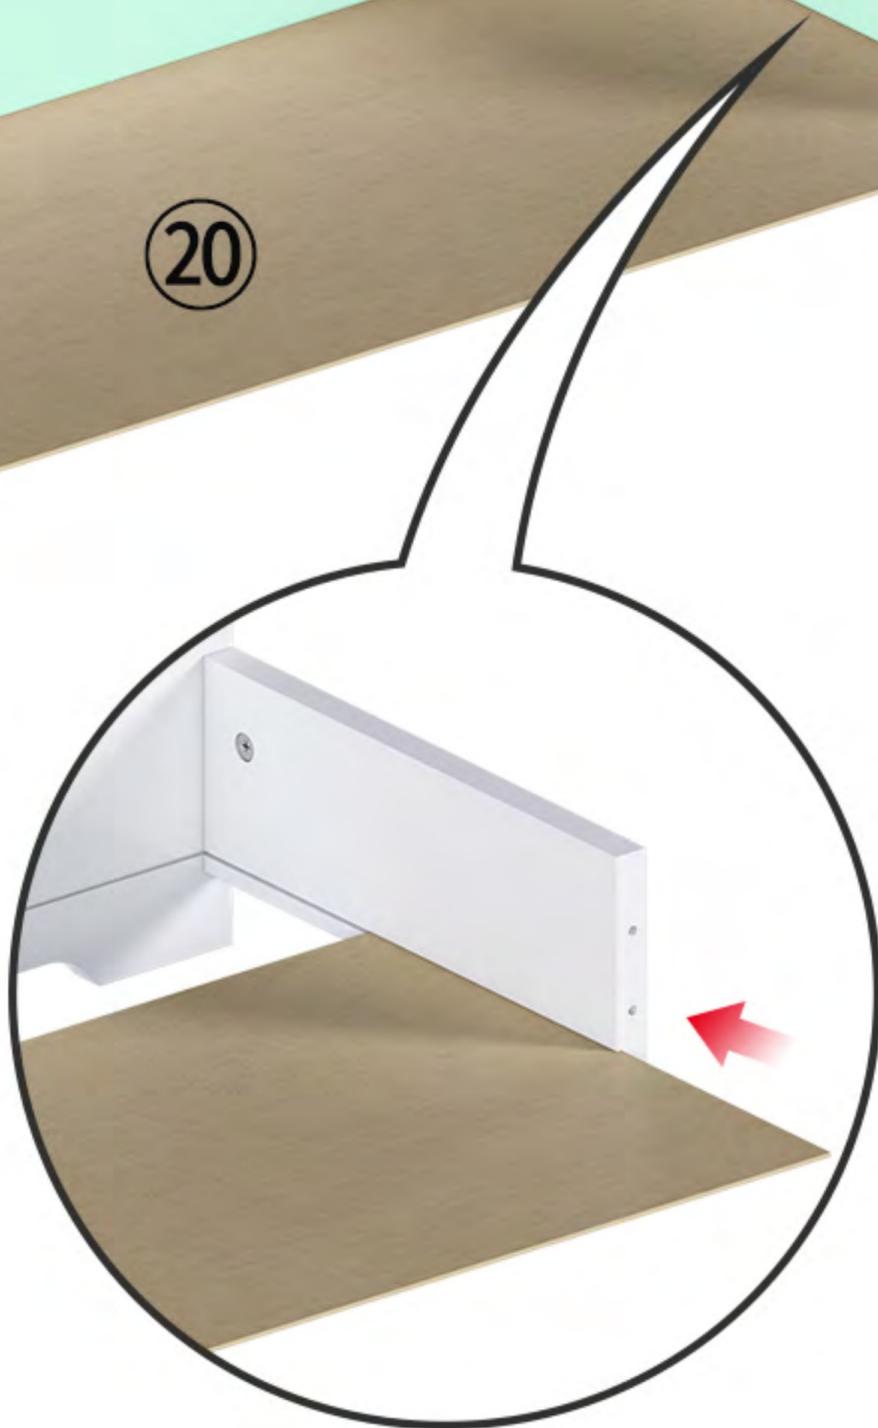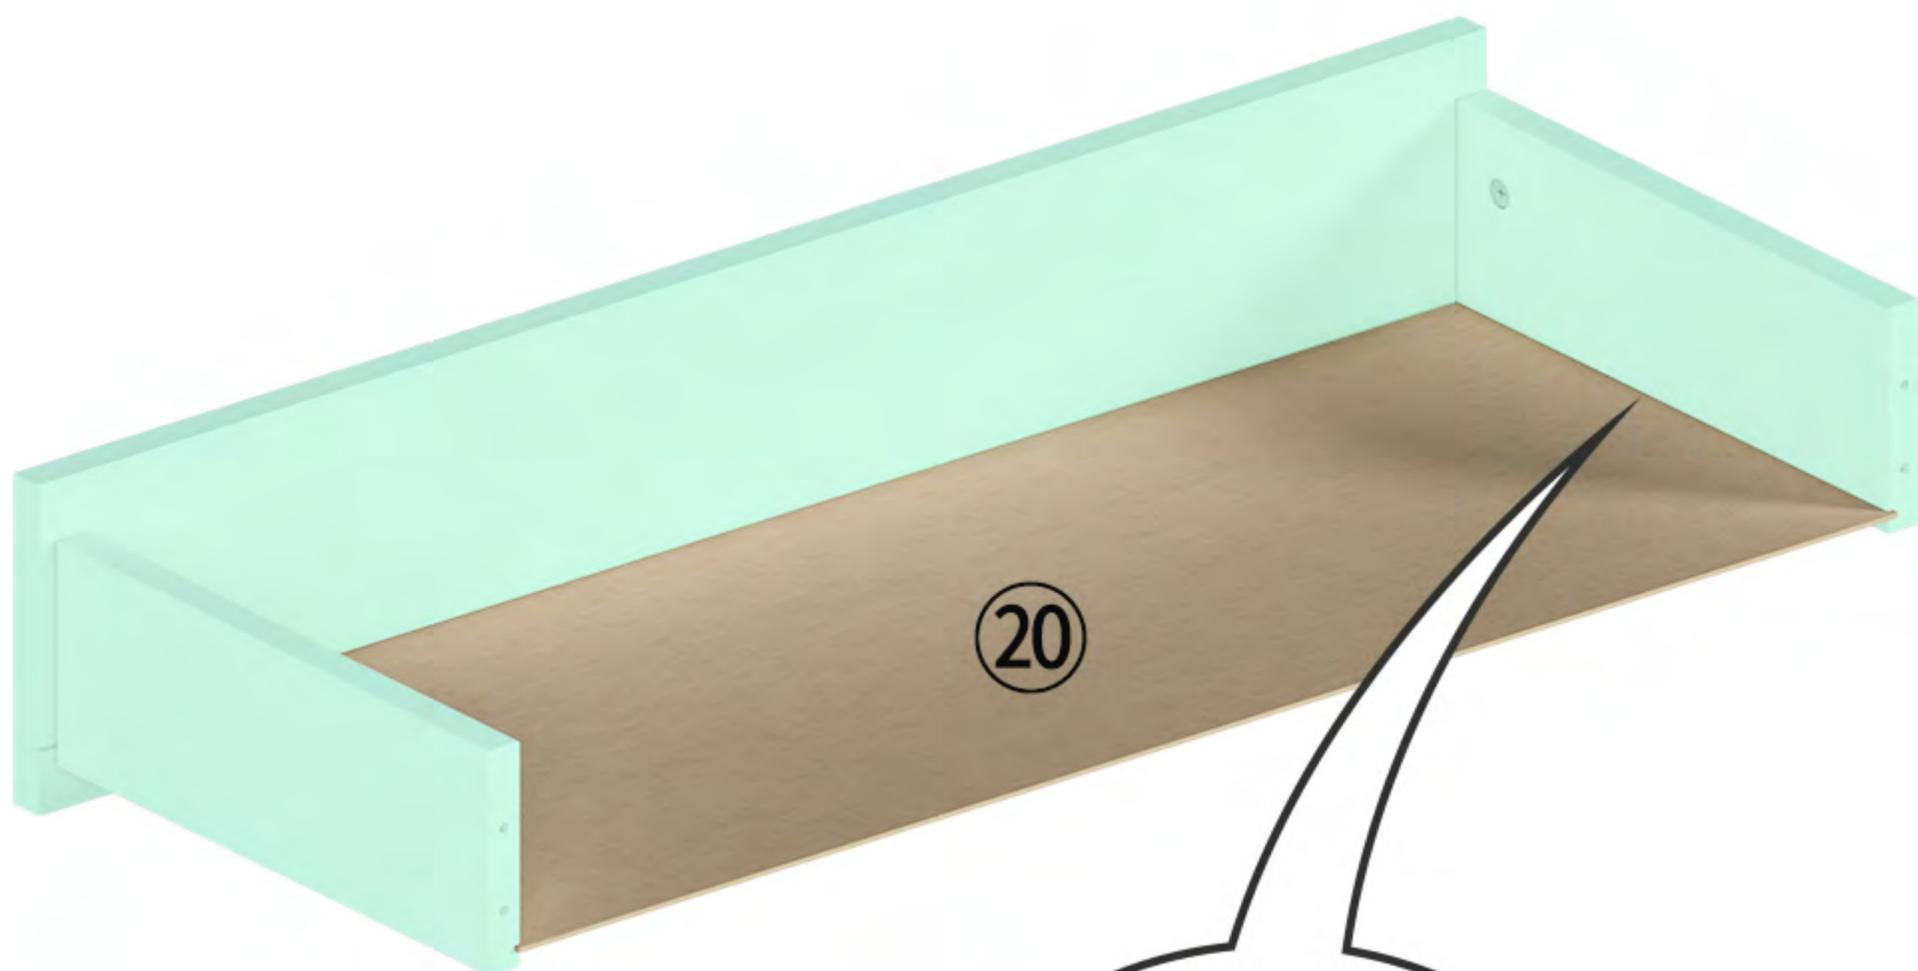


18

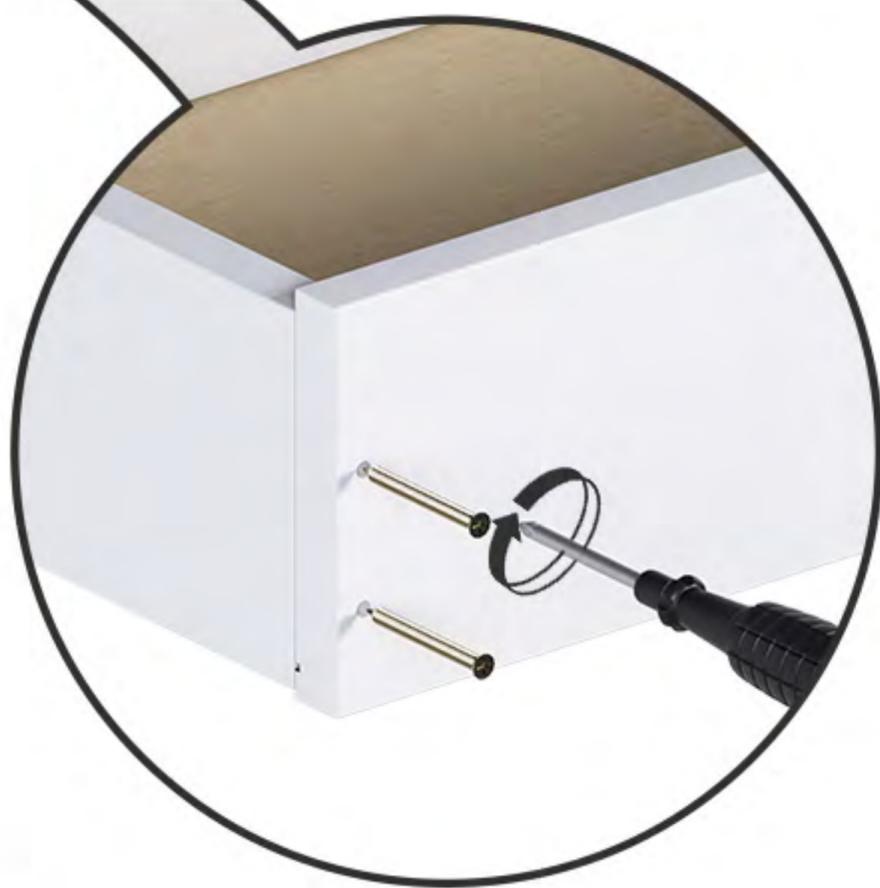

19

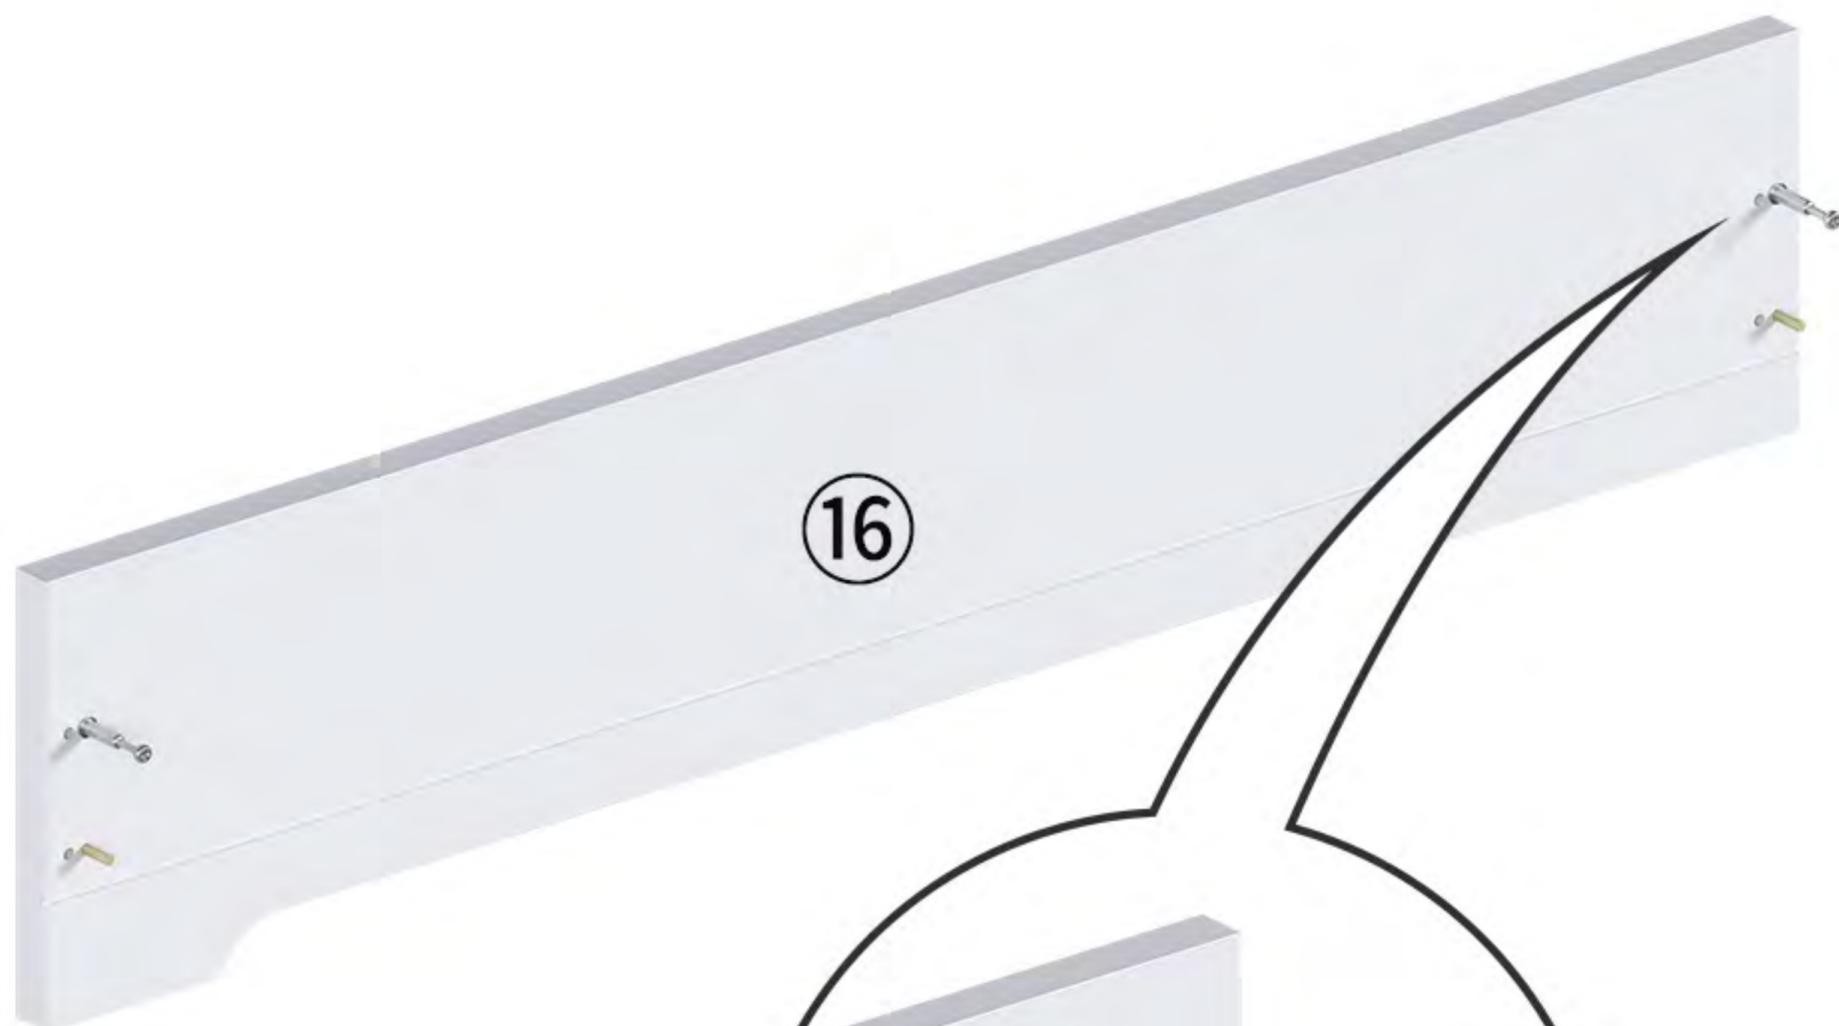

20

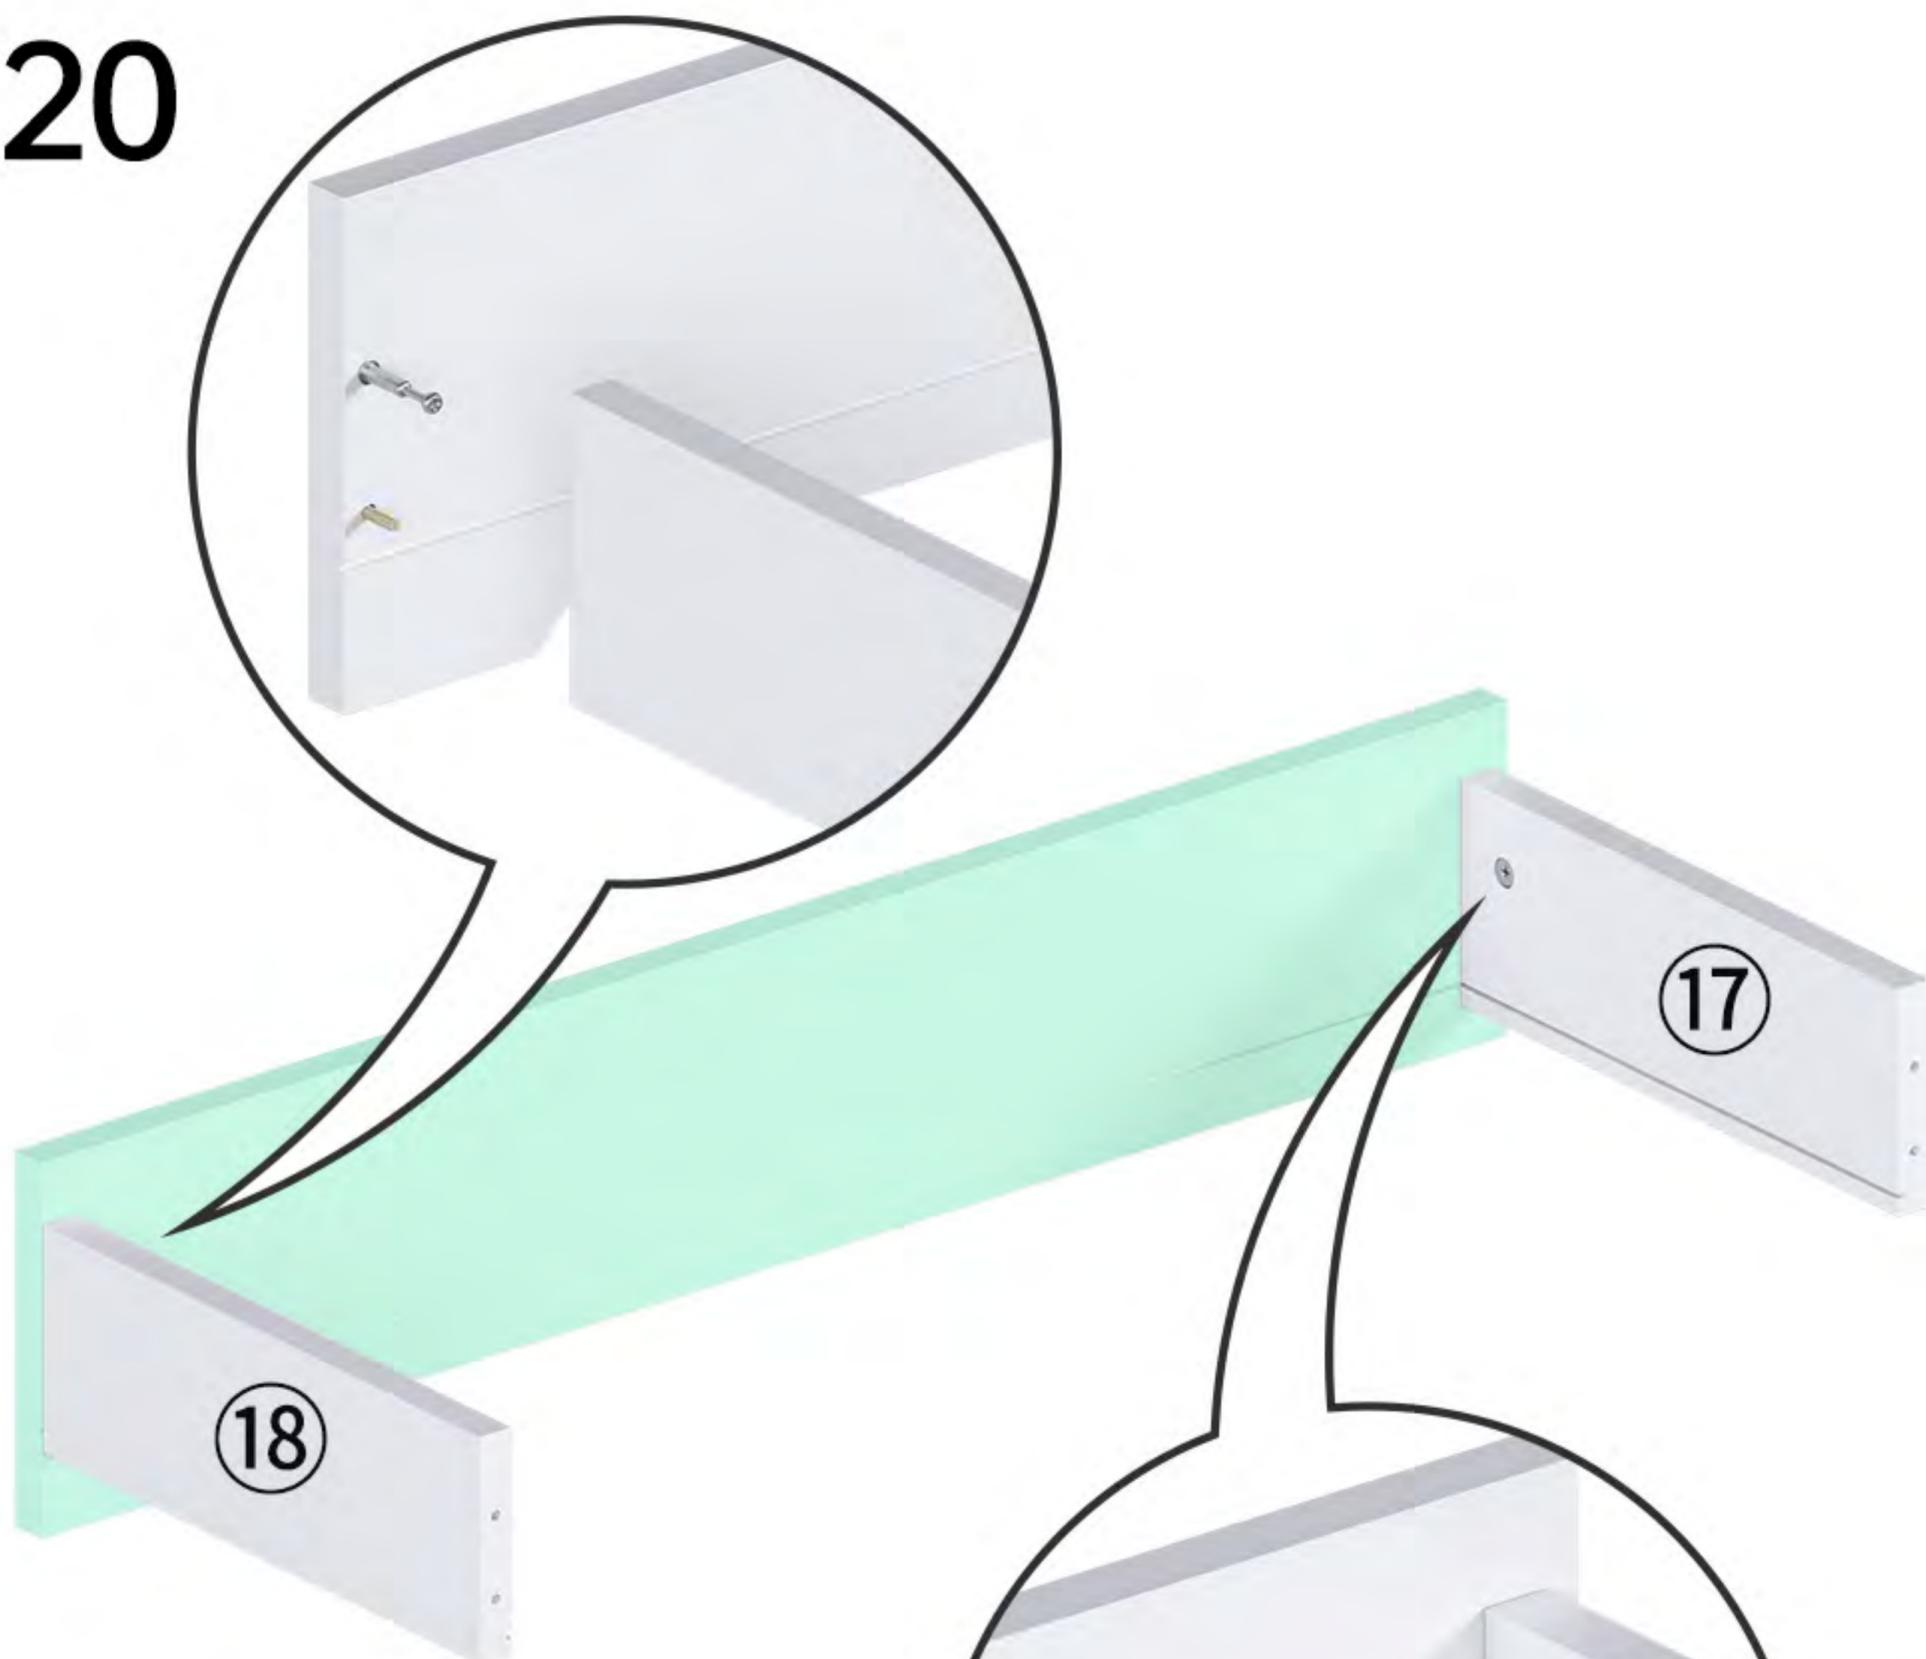

17





18





D14*2
Eccentric Wheel



21

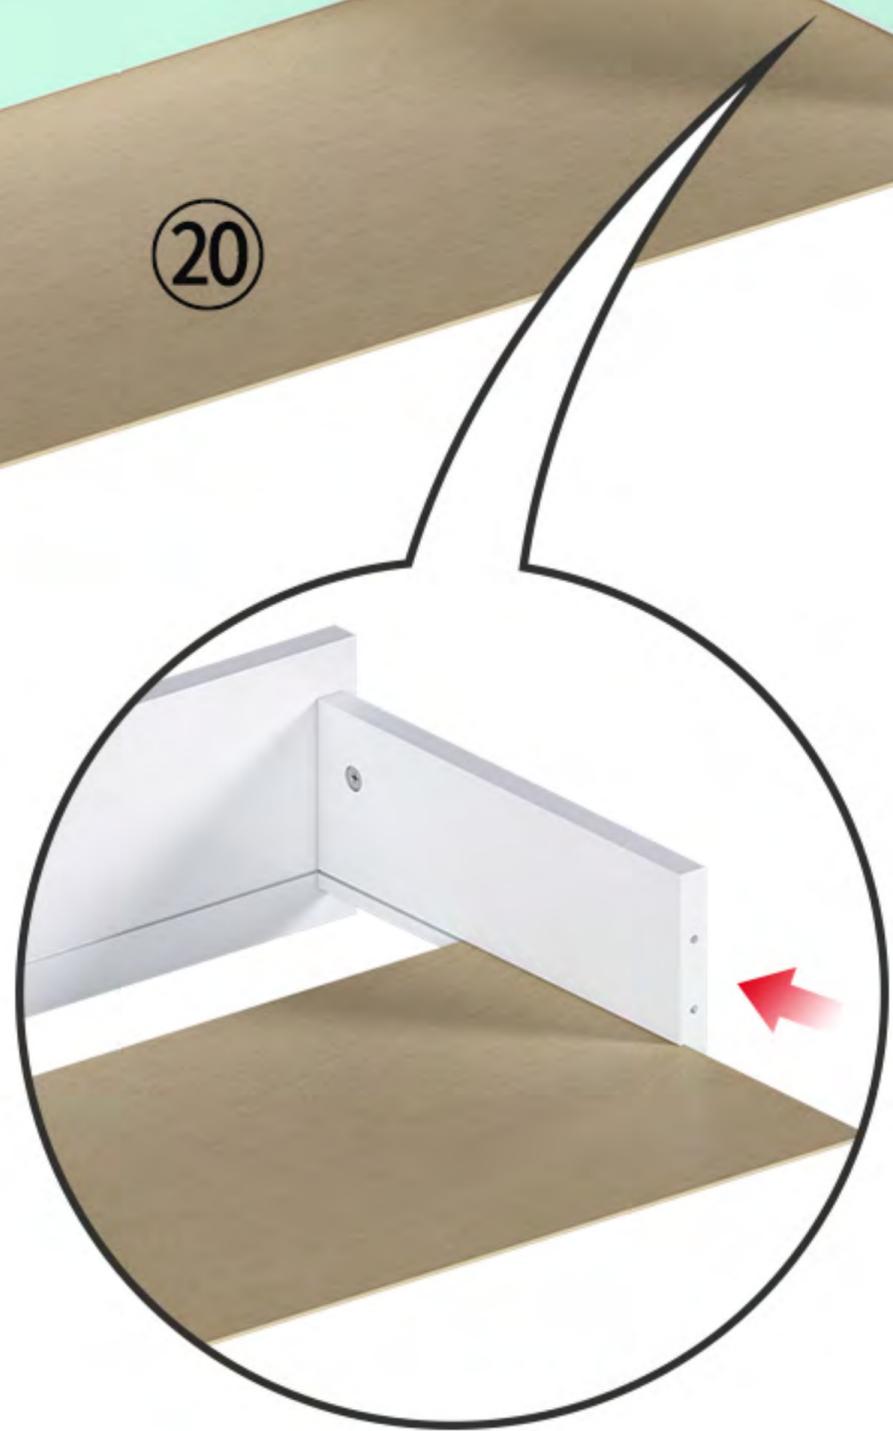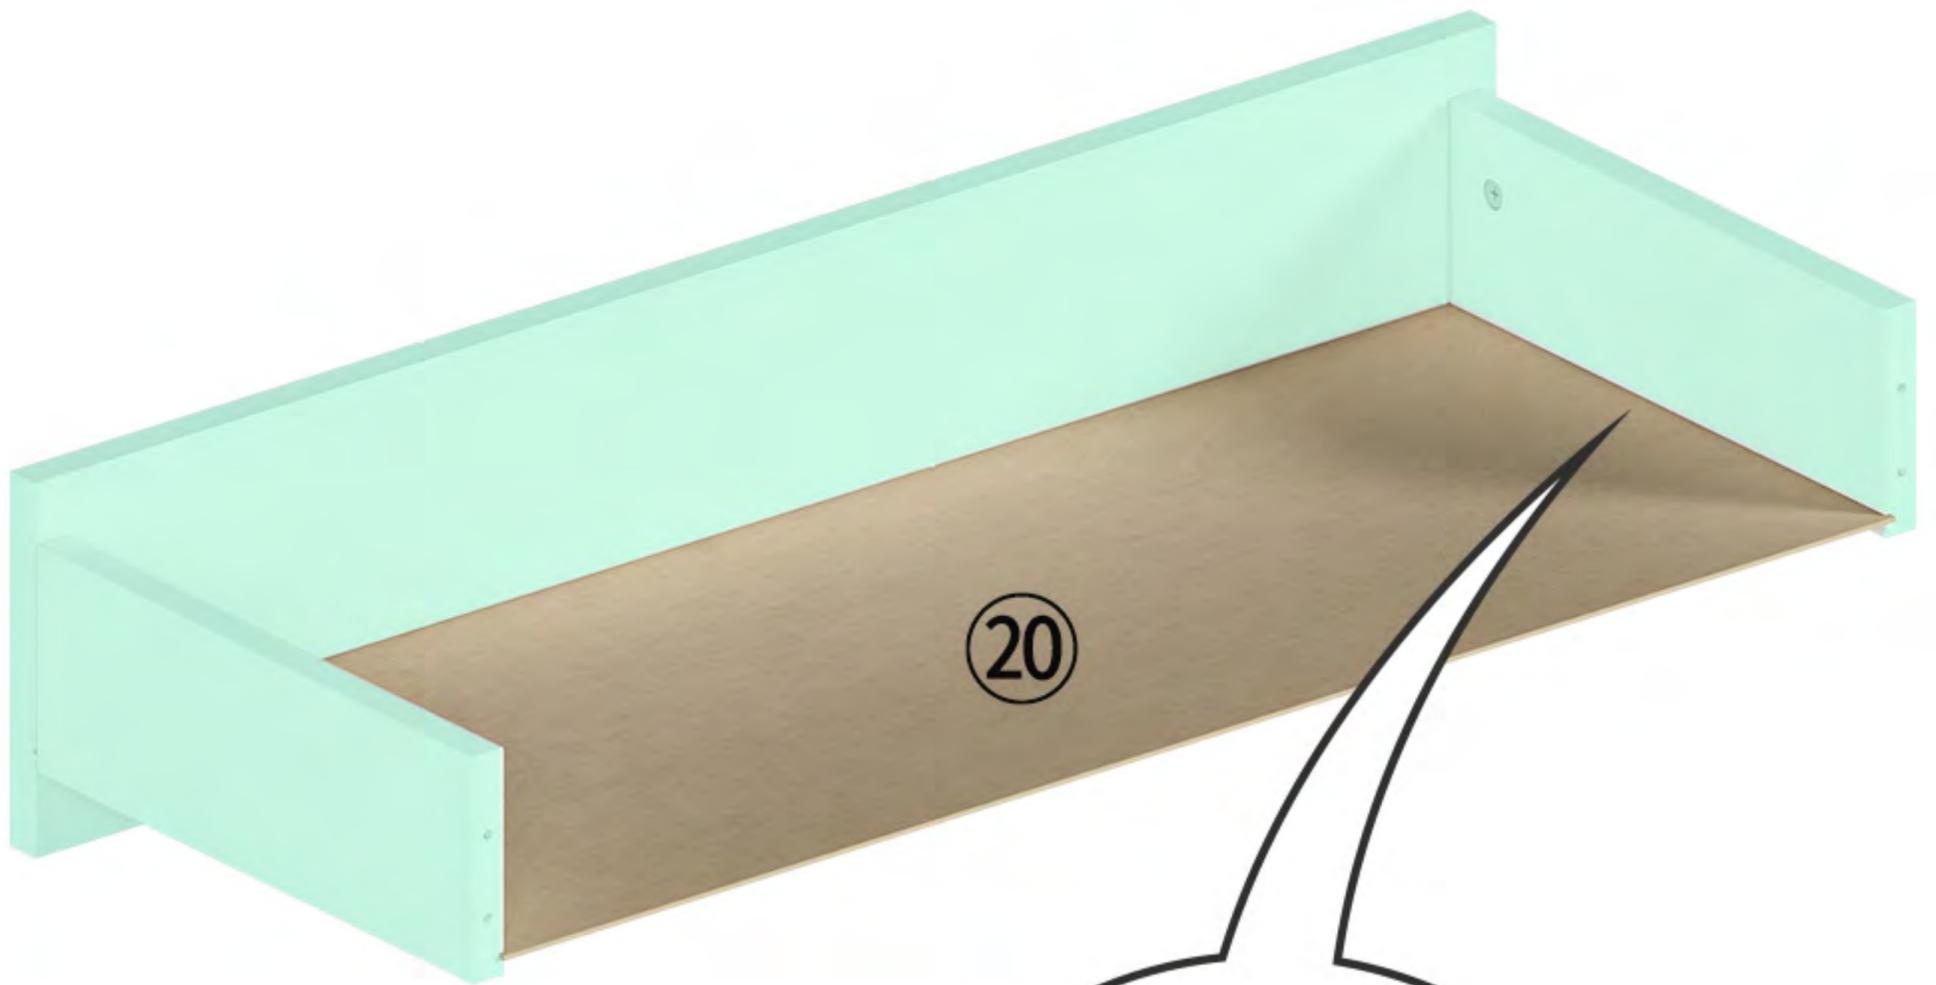

22

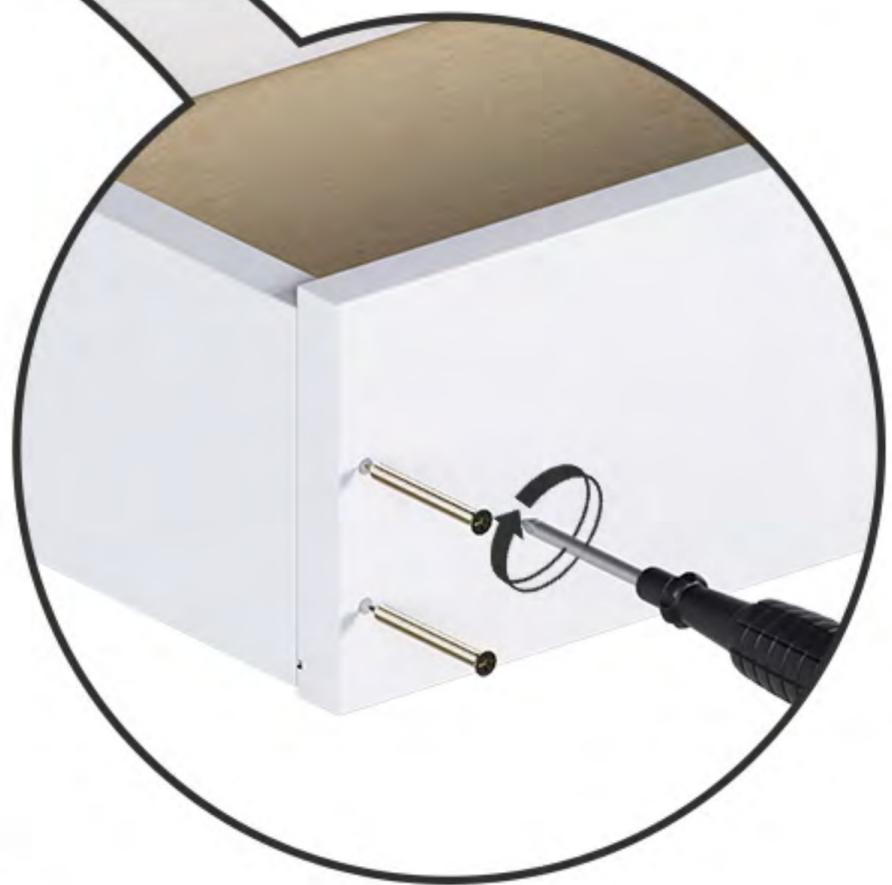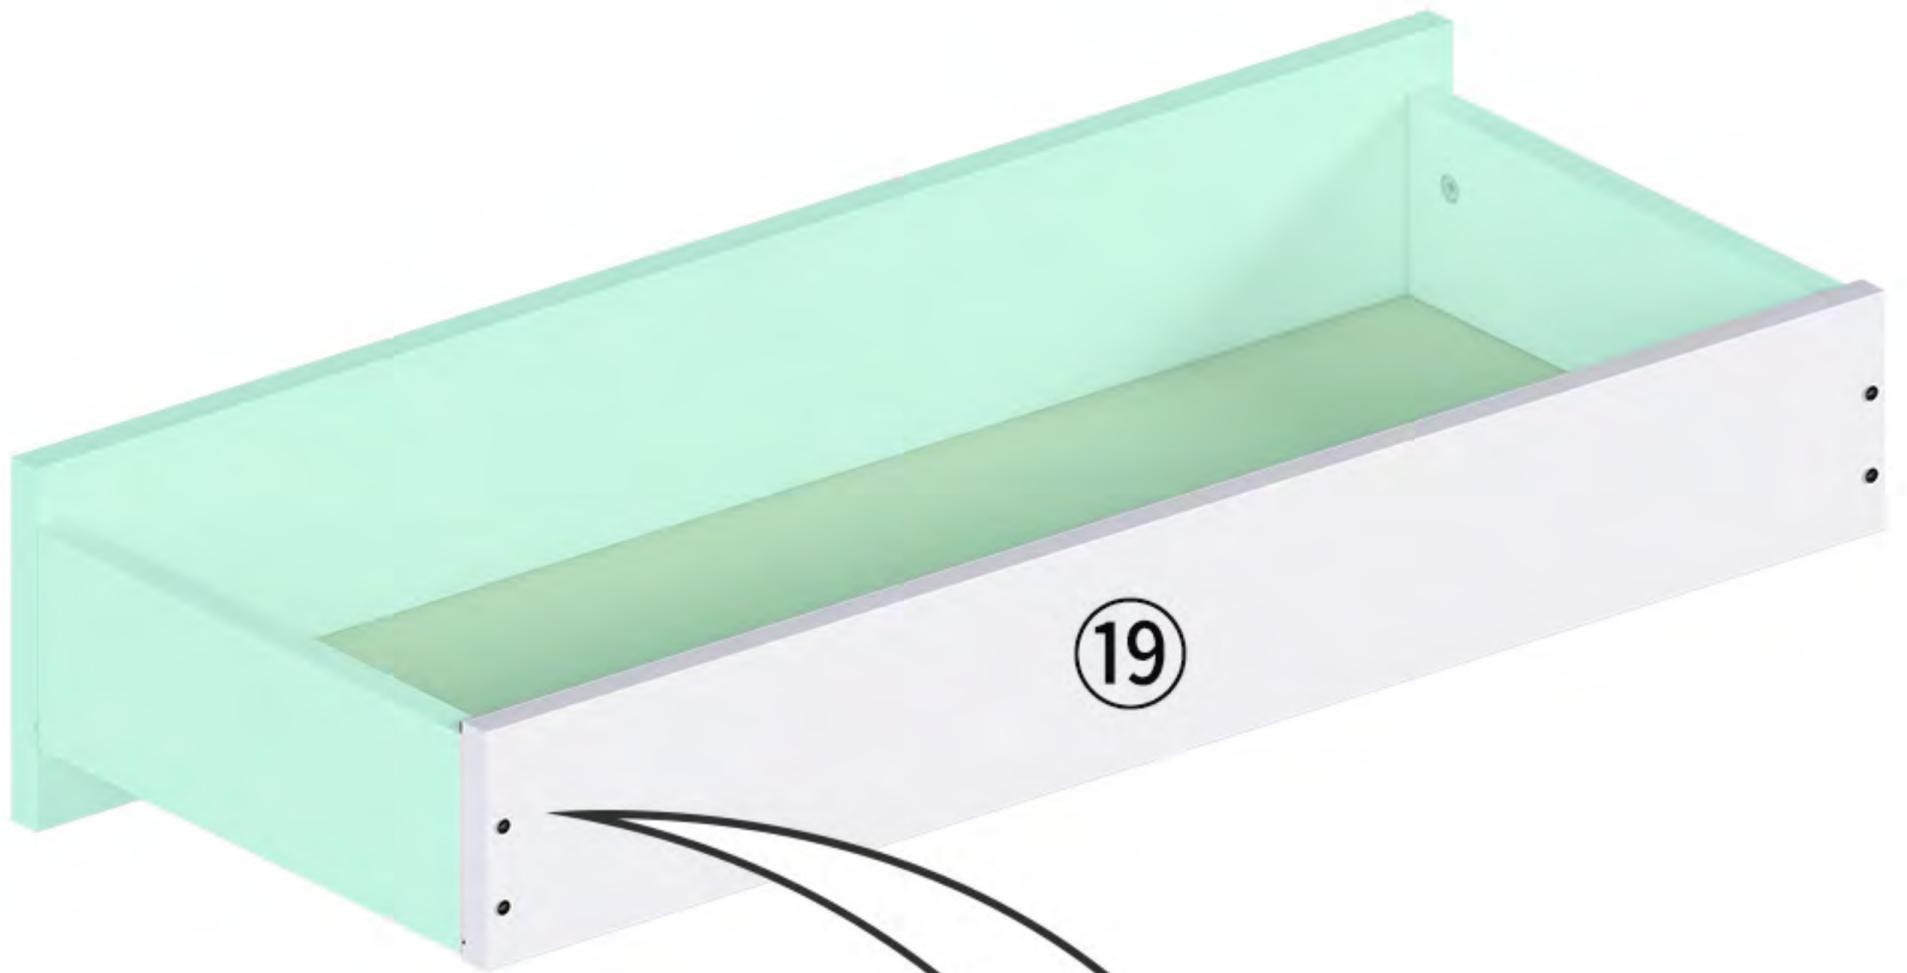

23

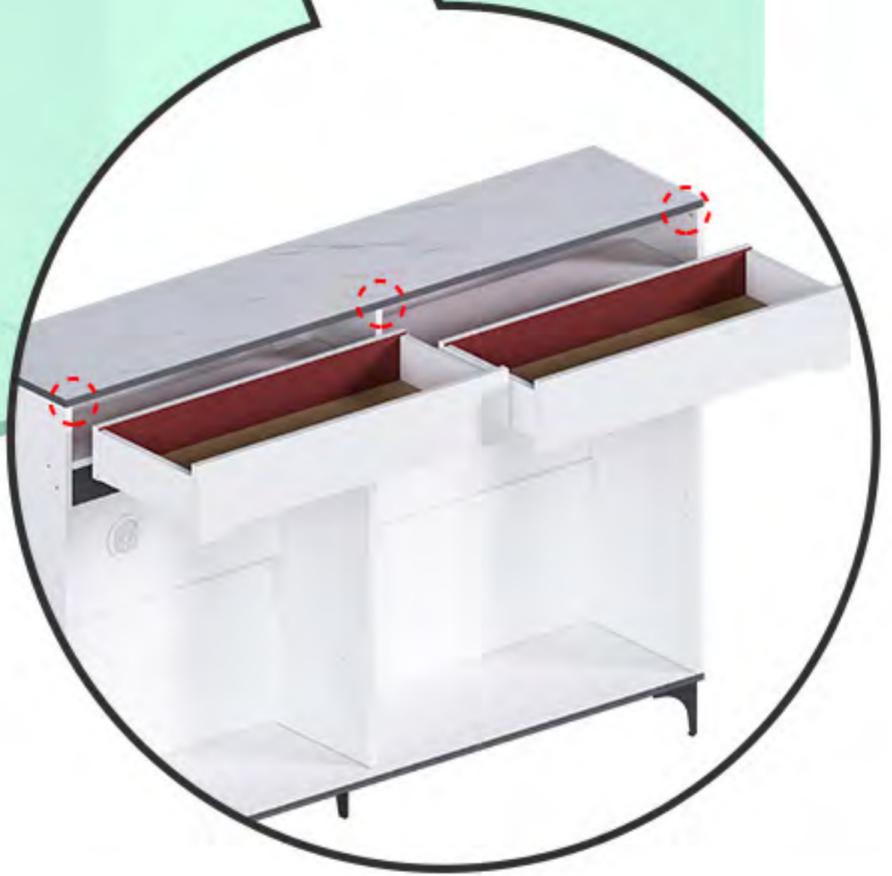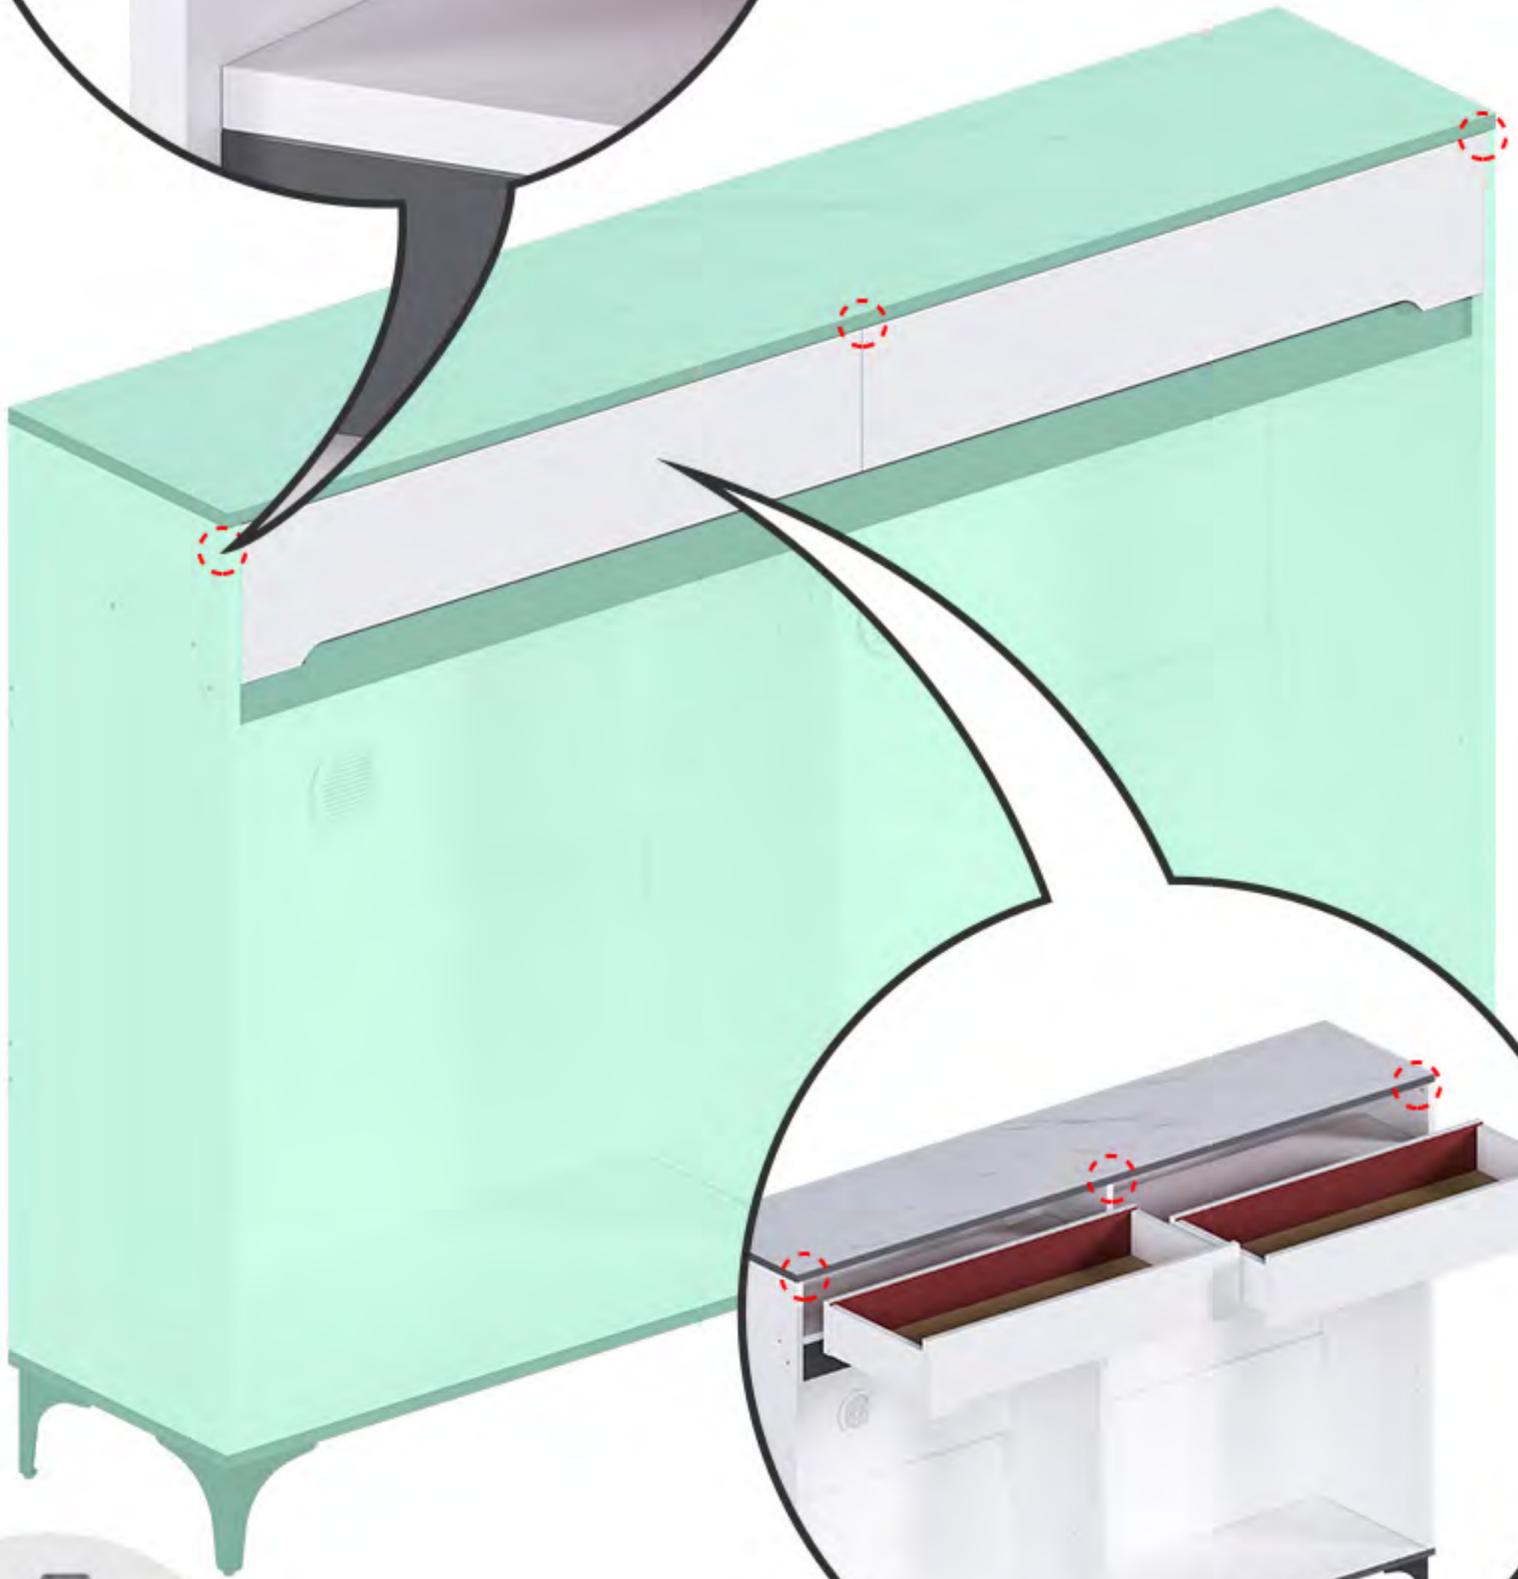


K0*4

Install K0 first, then slide it into the drawer.


24



25

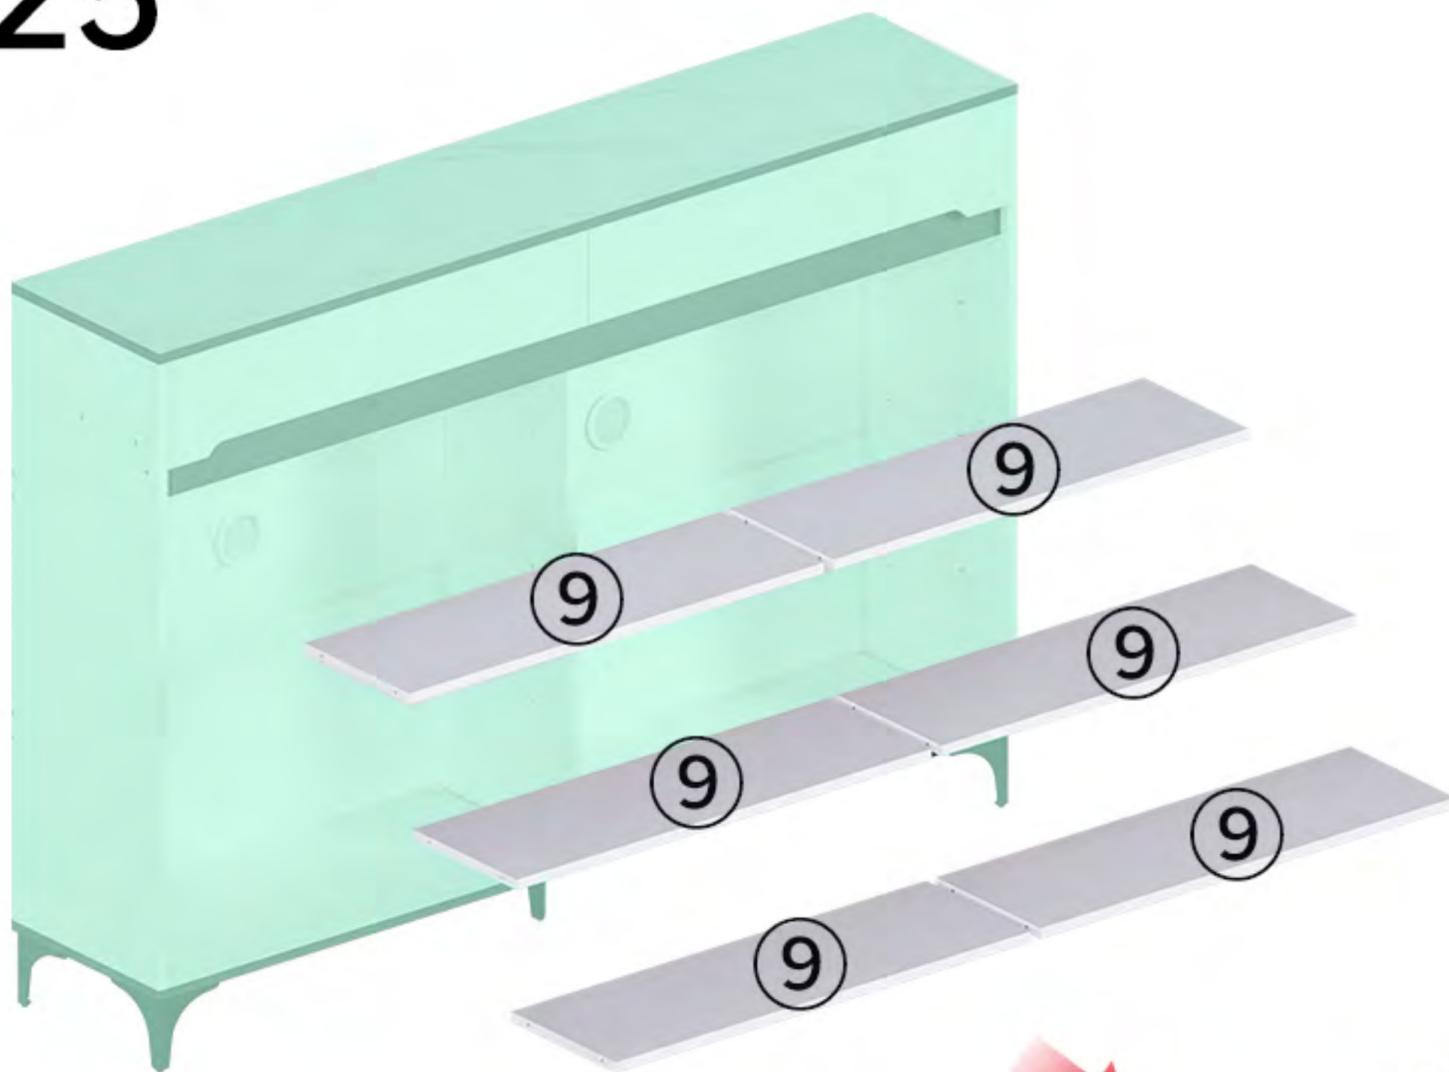


26

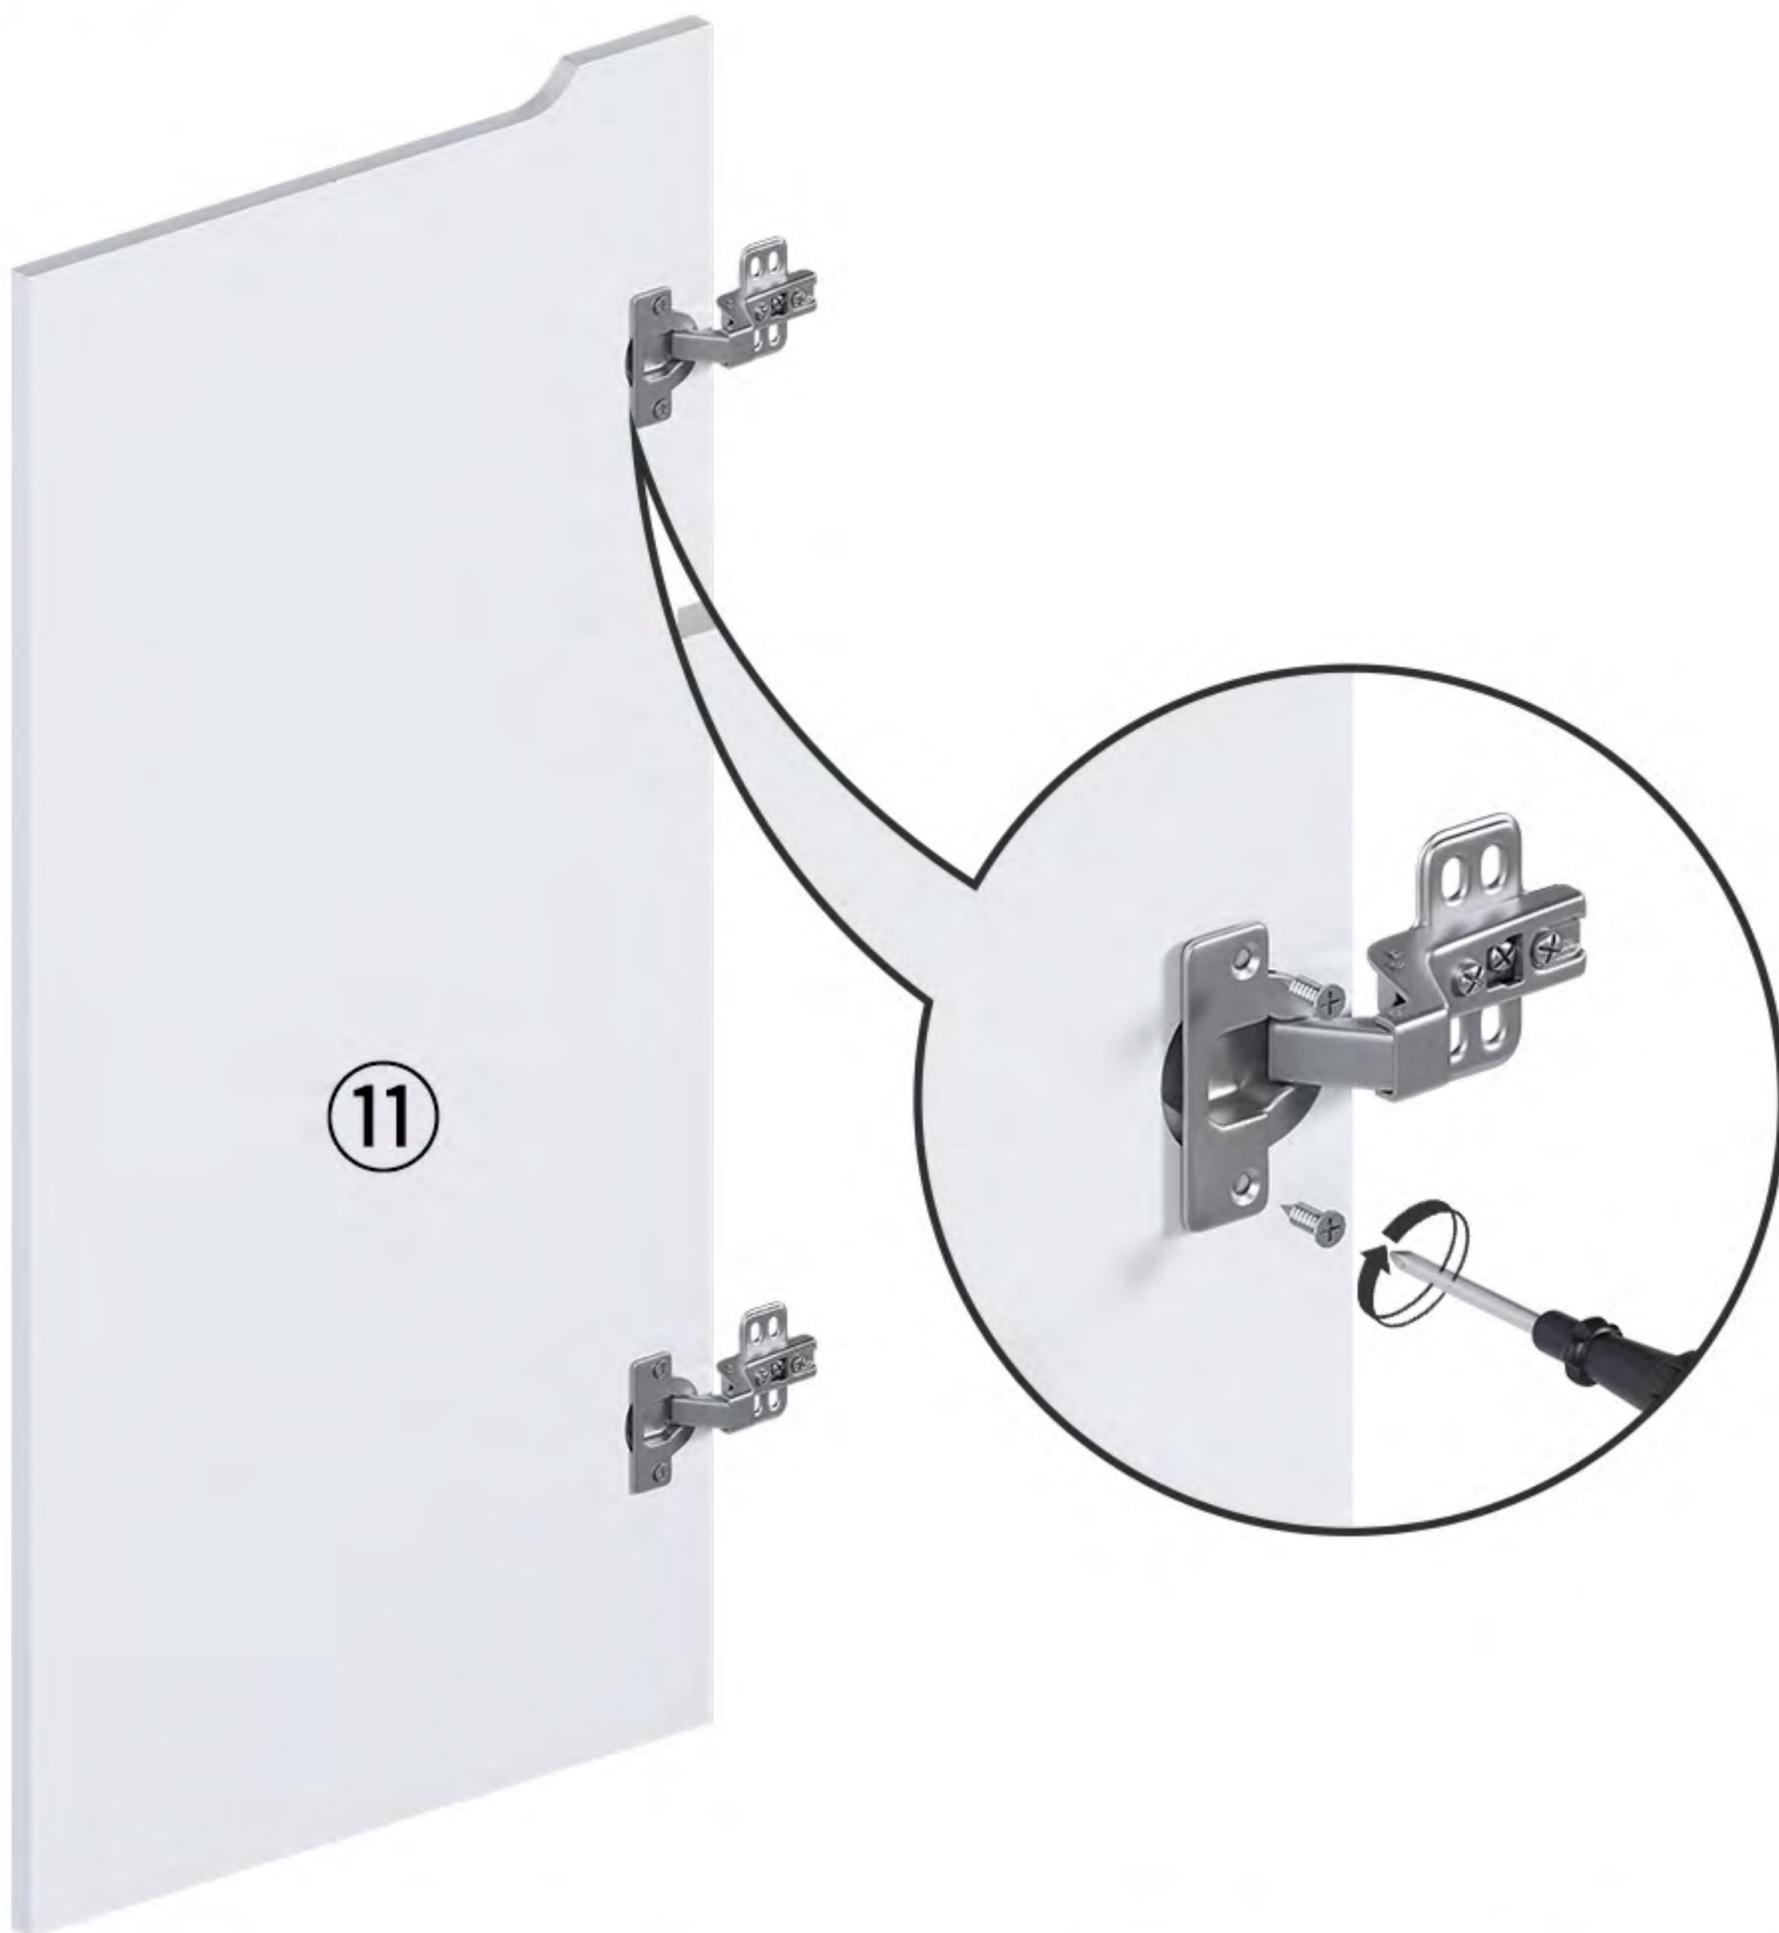


11



27

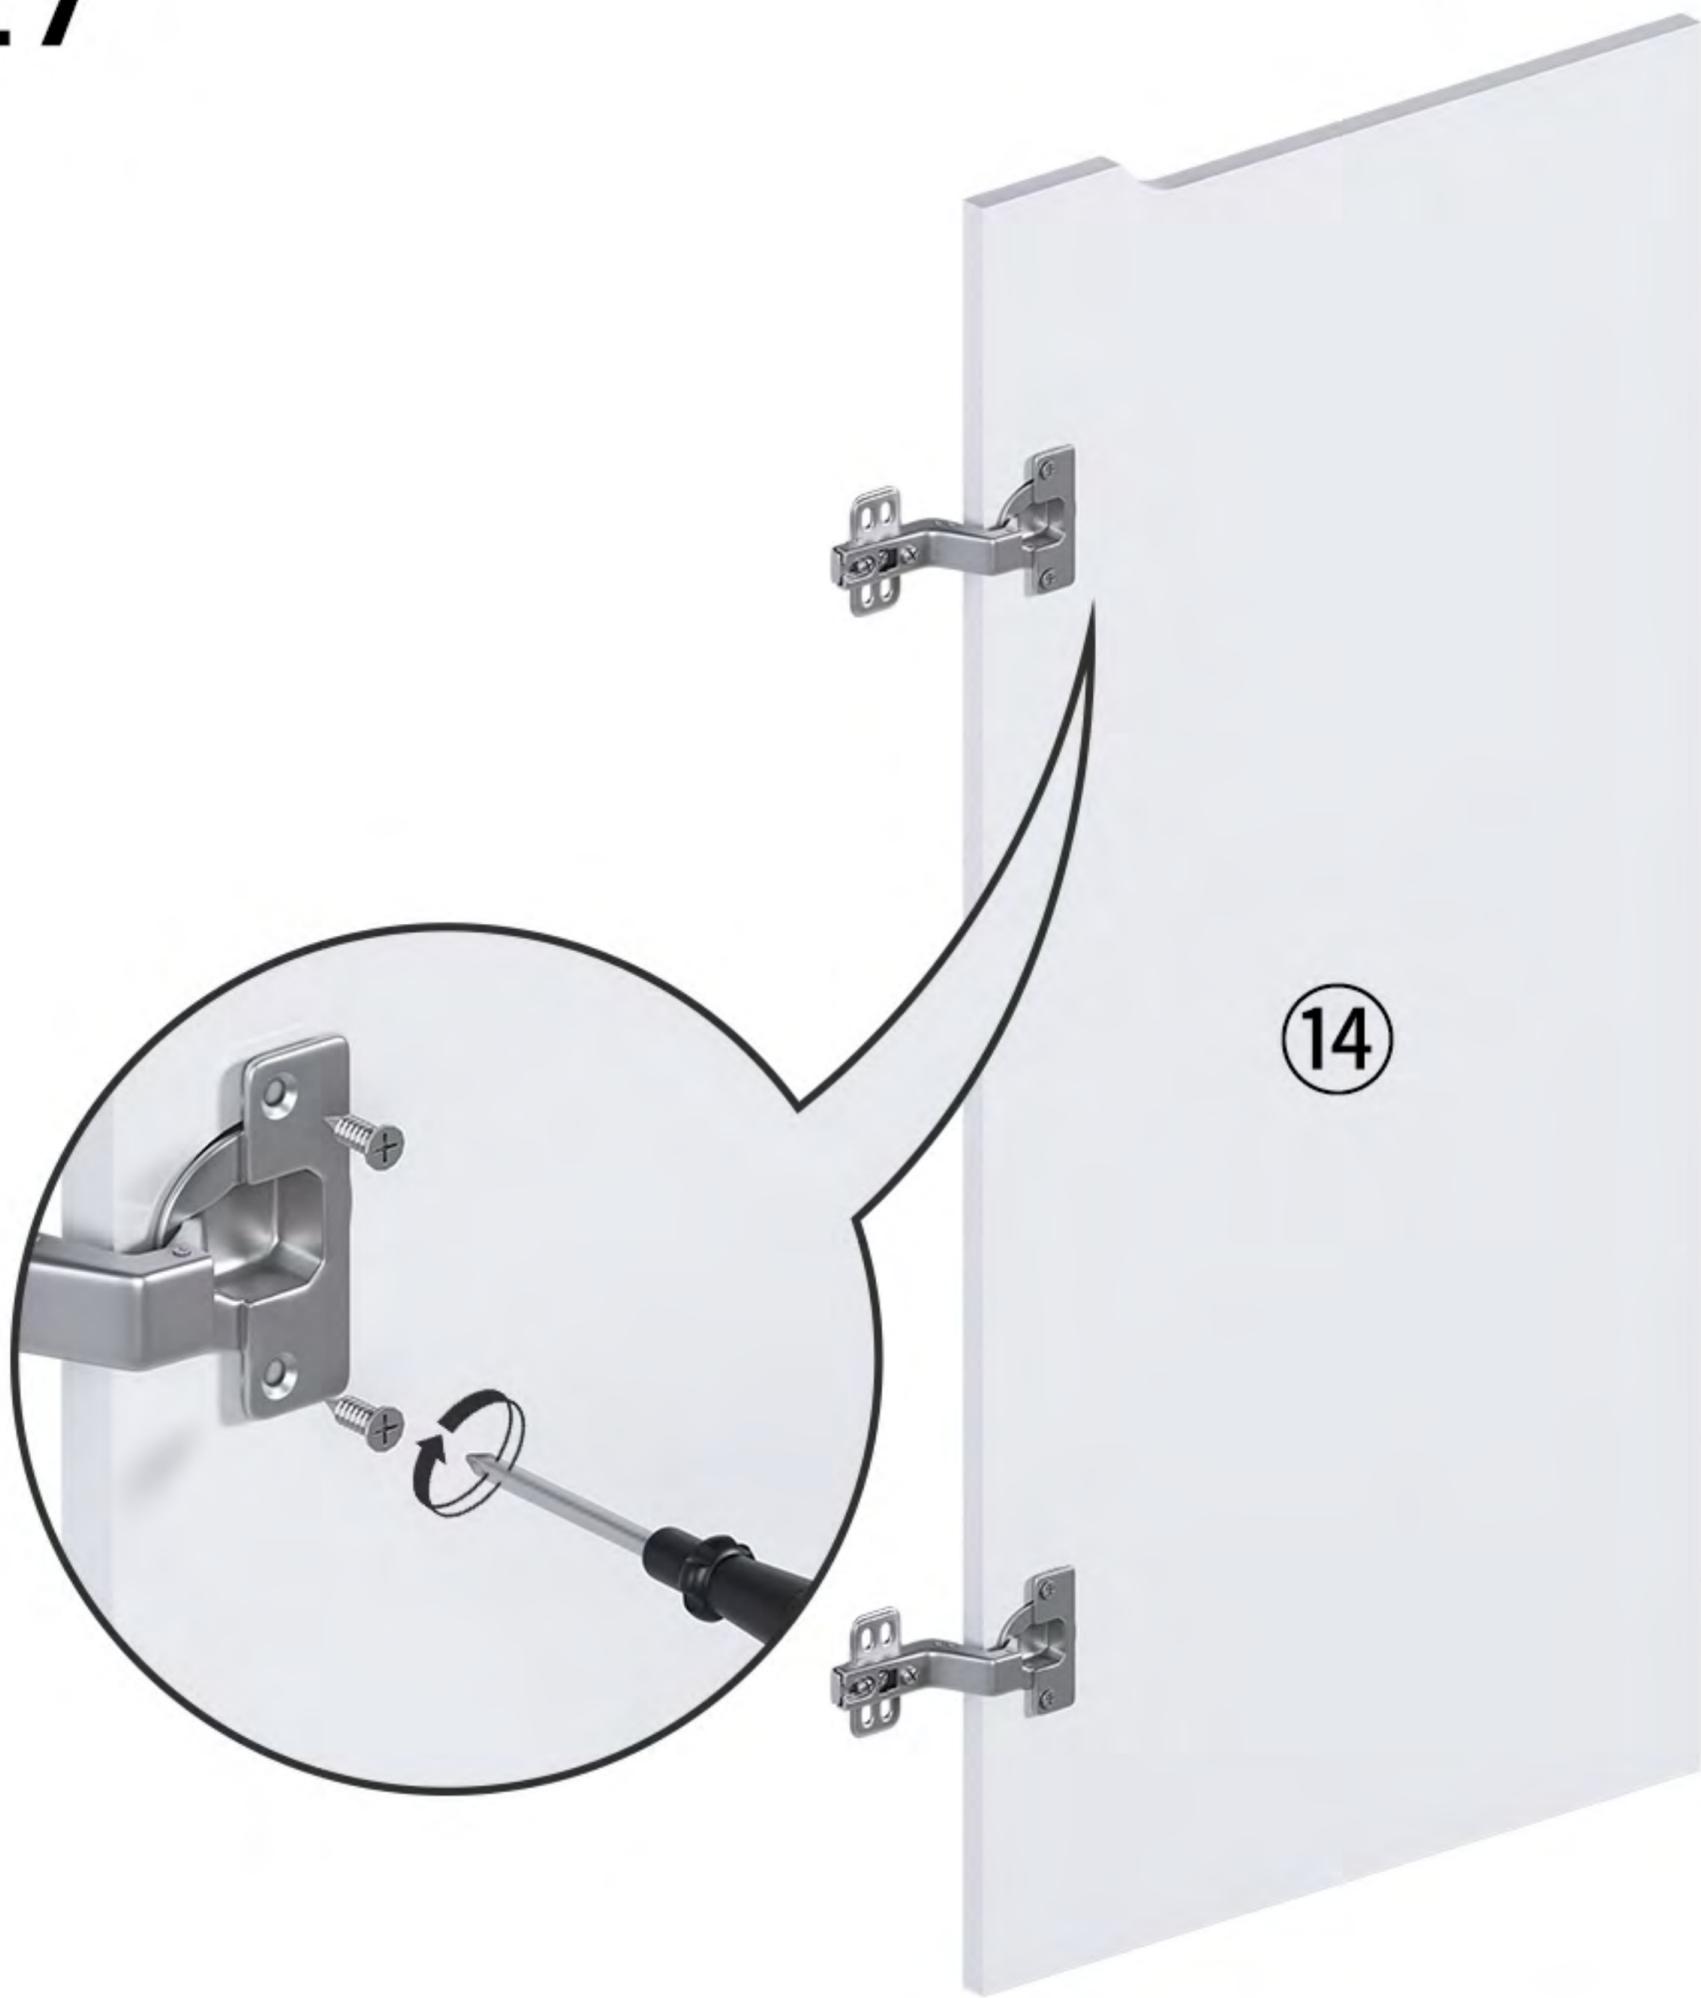


28

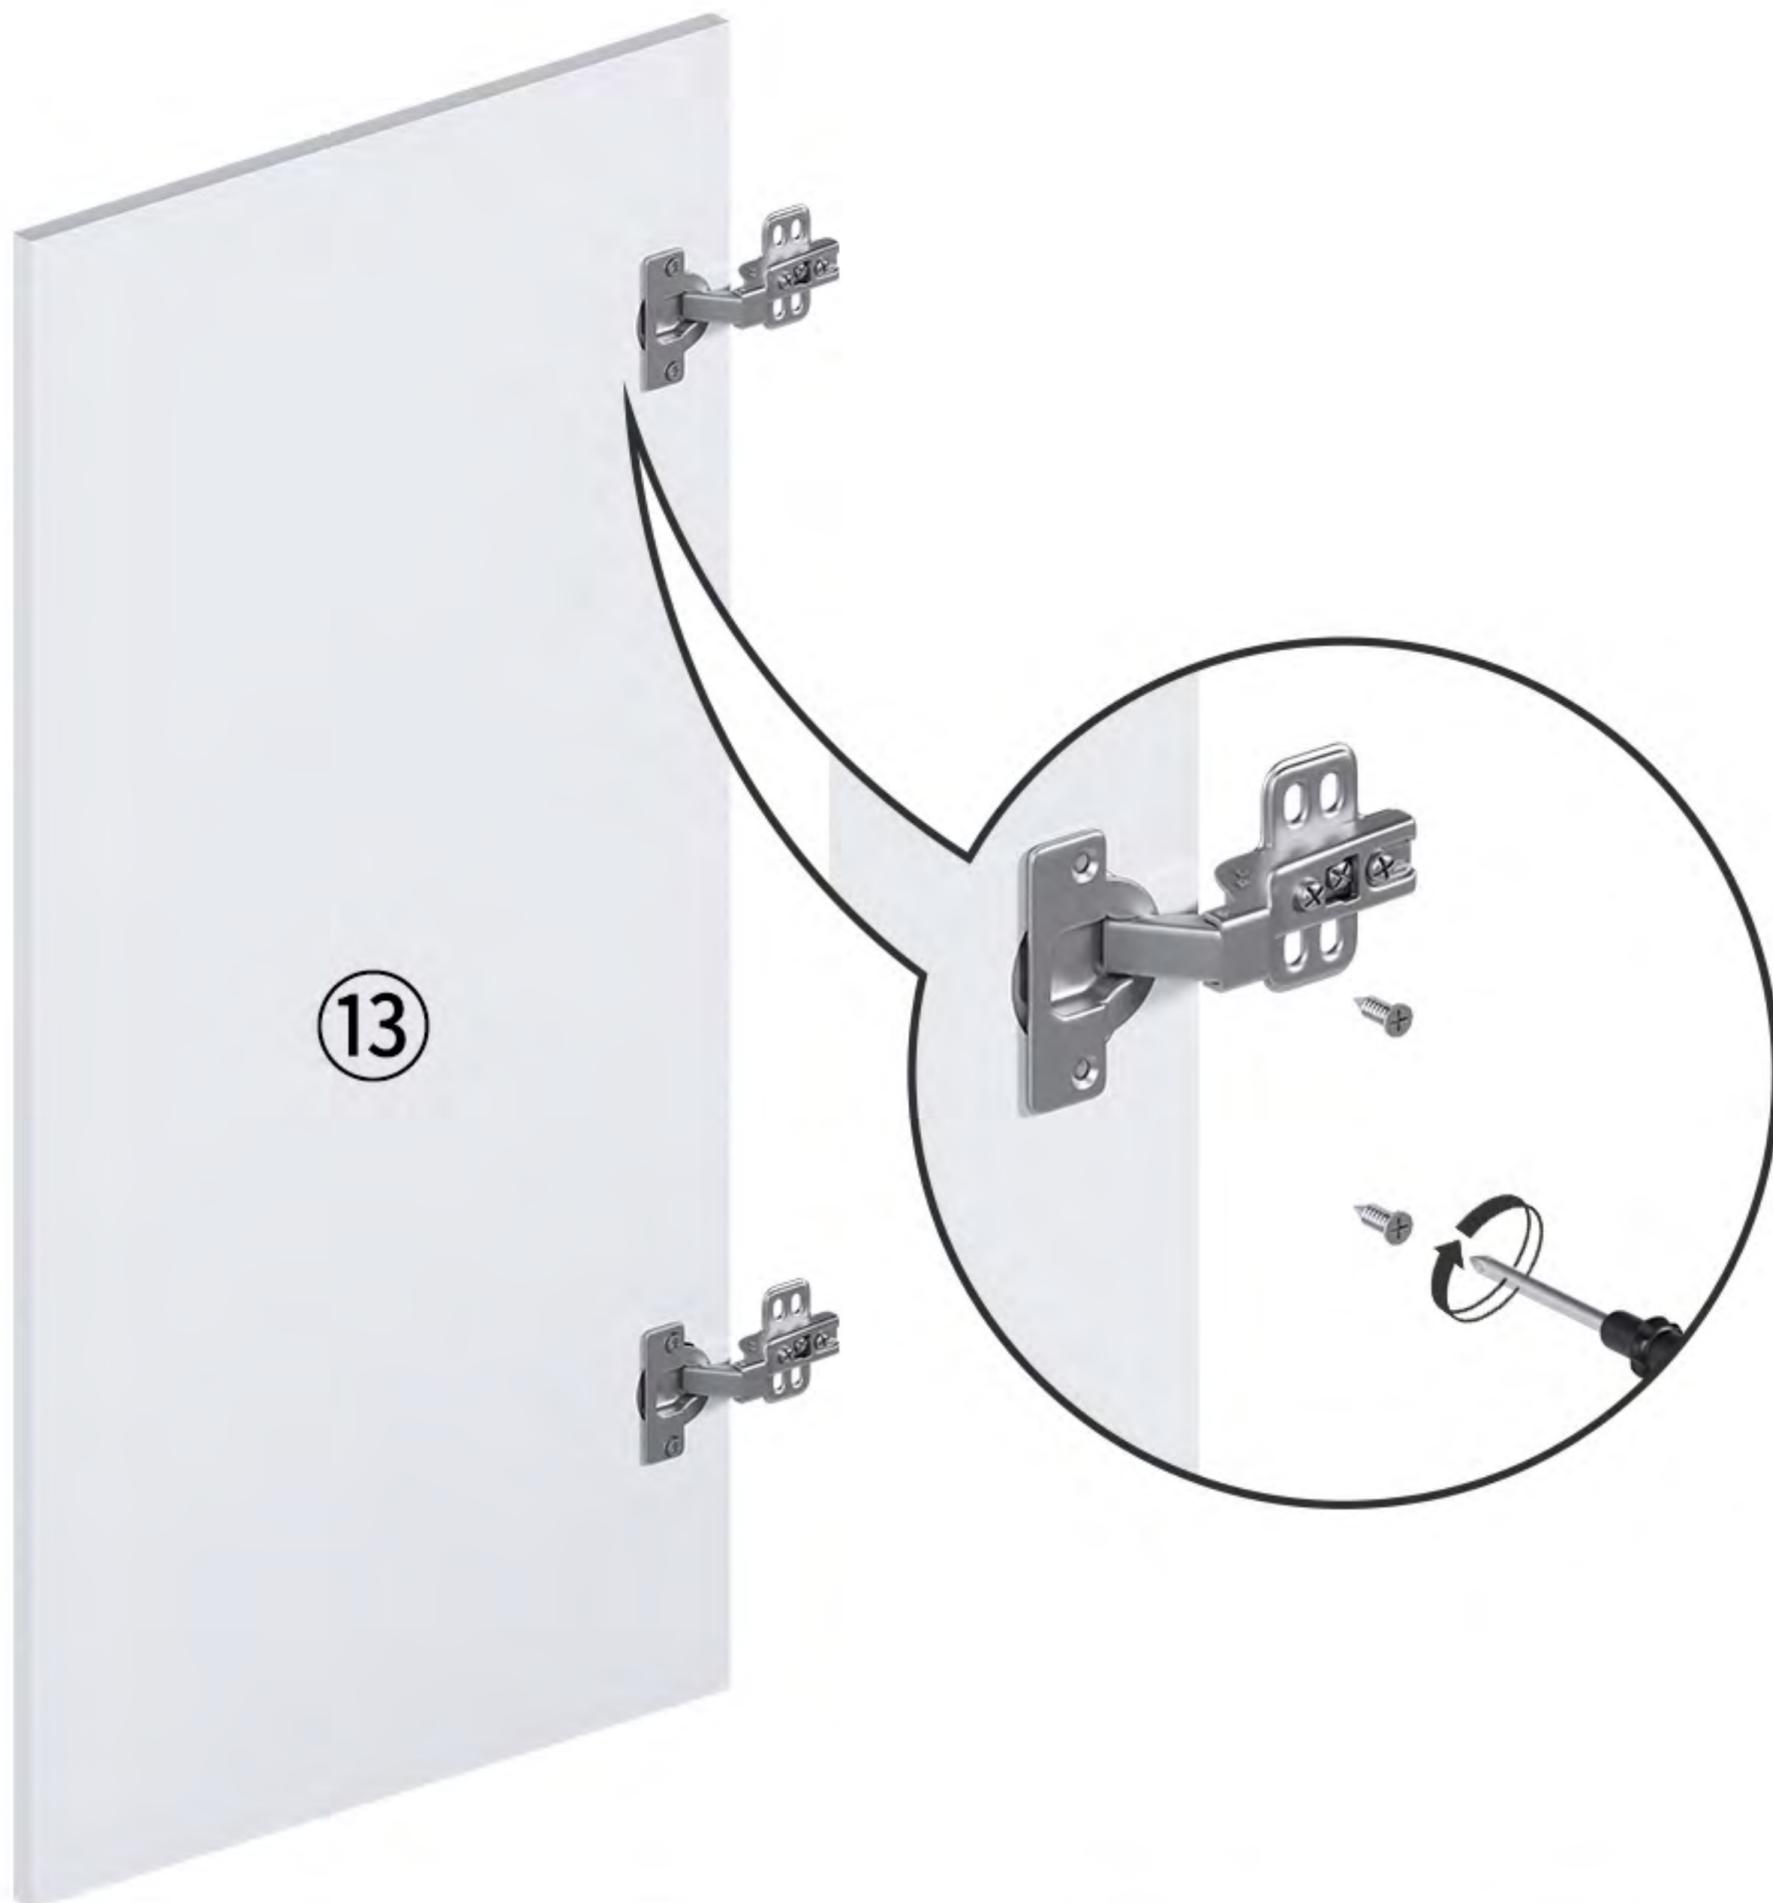

13



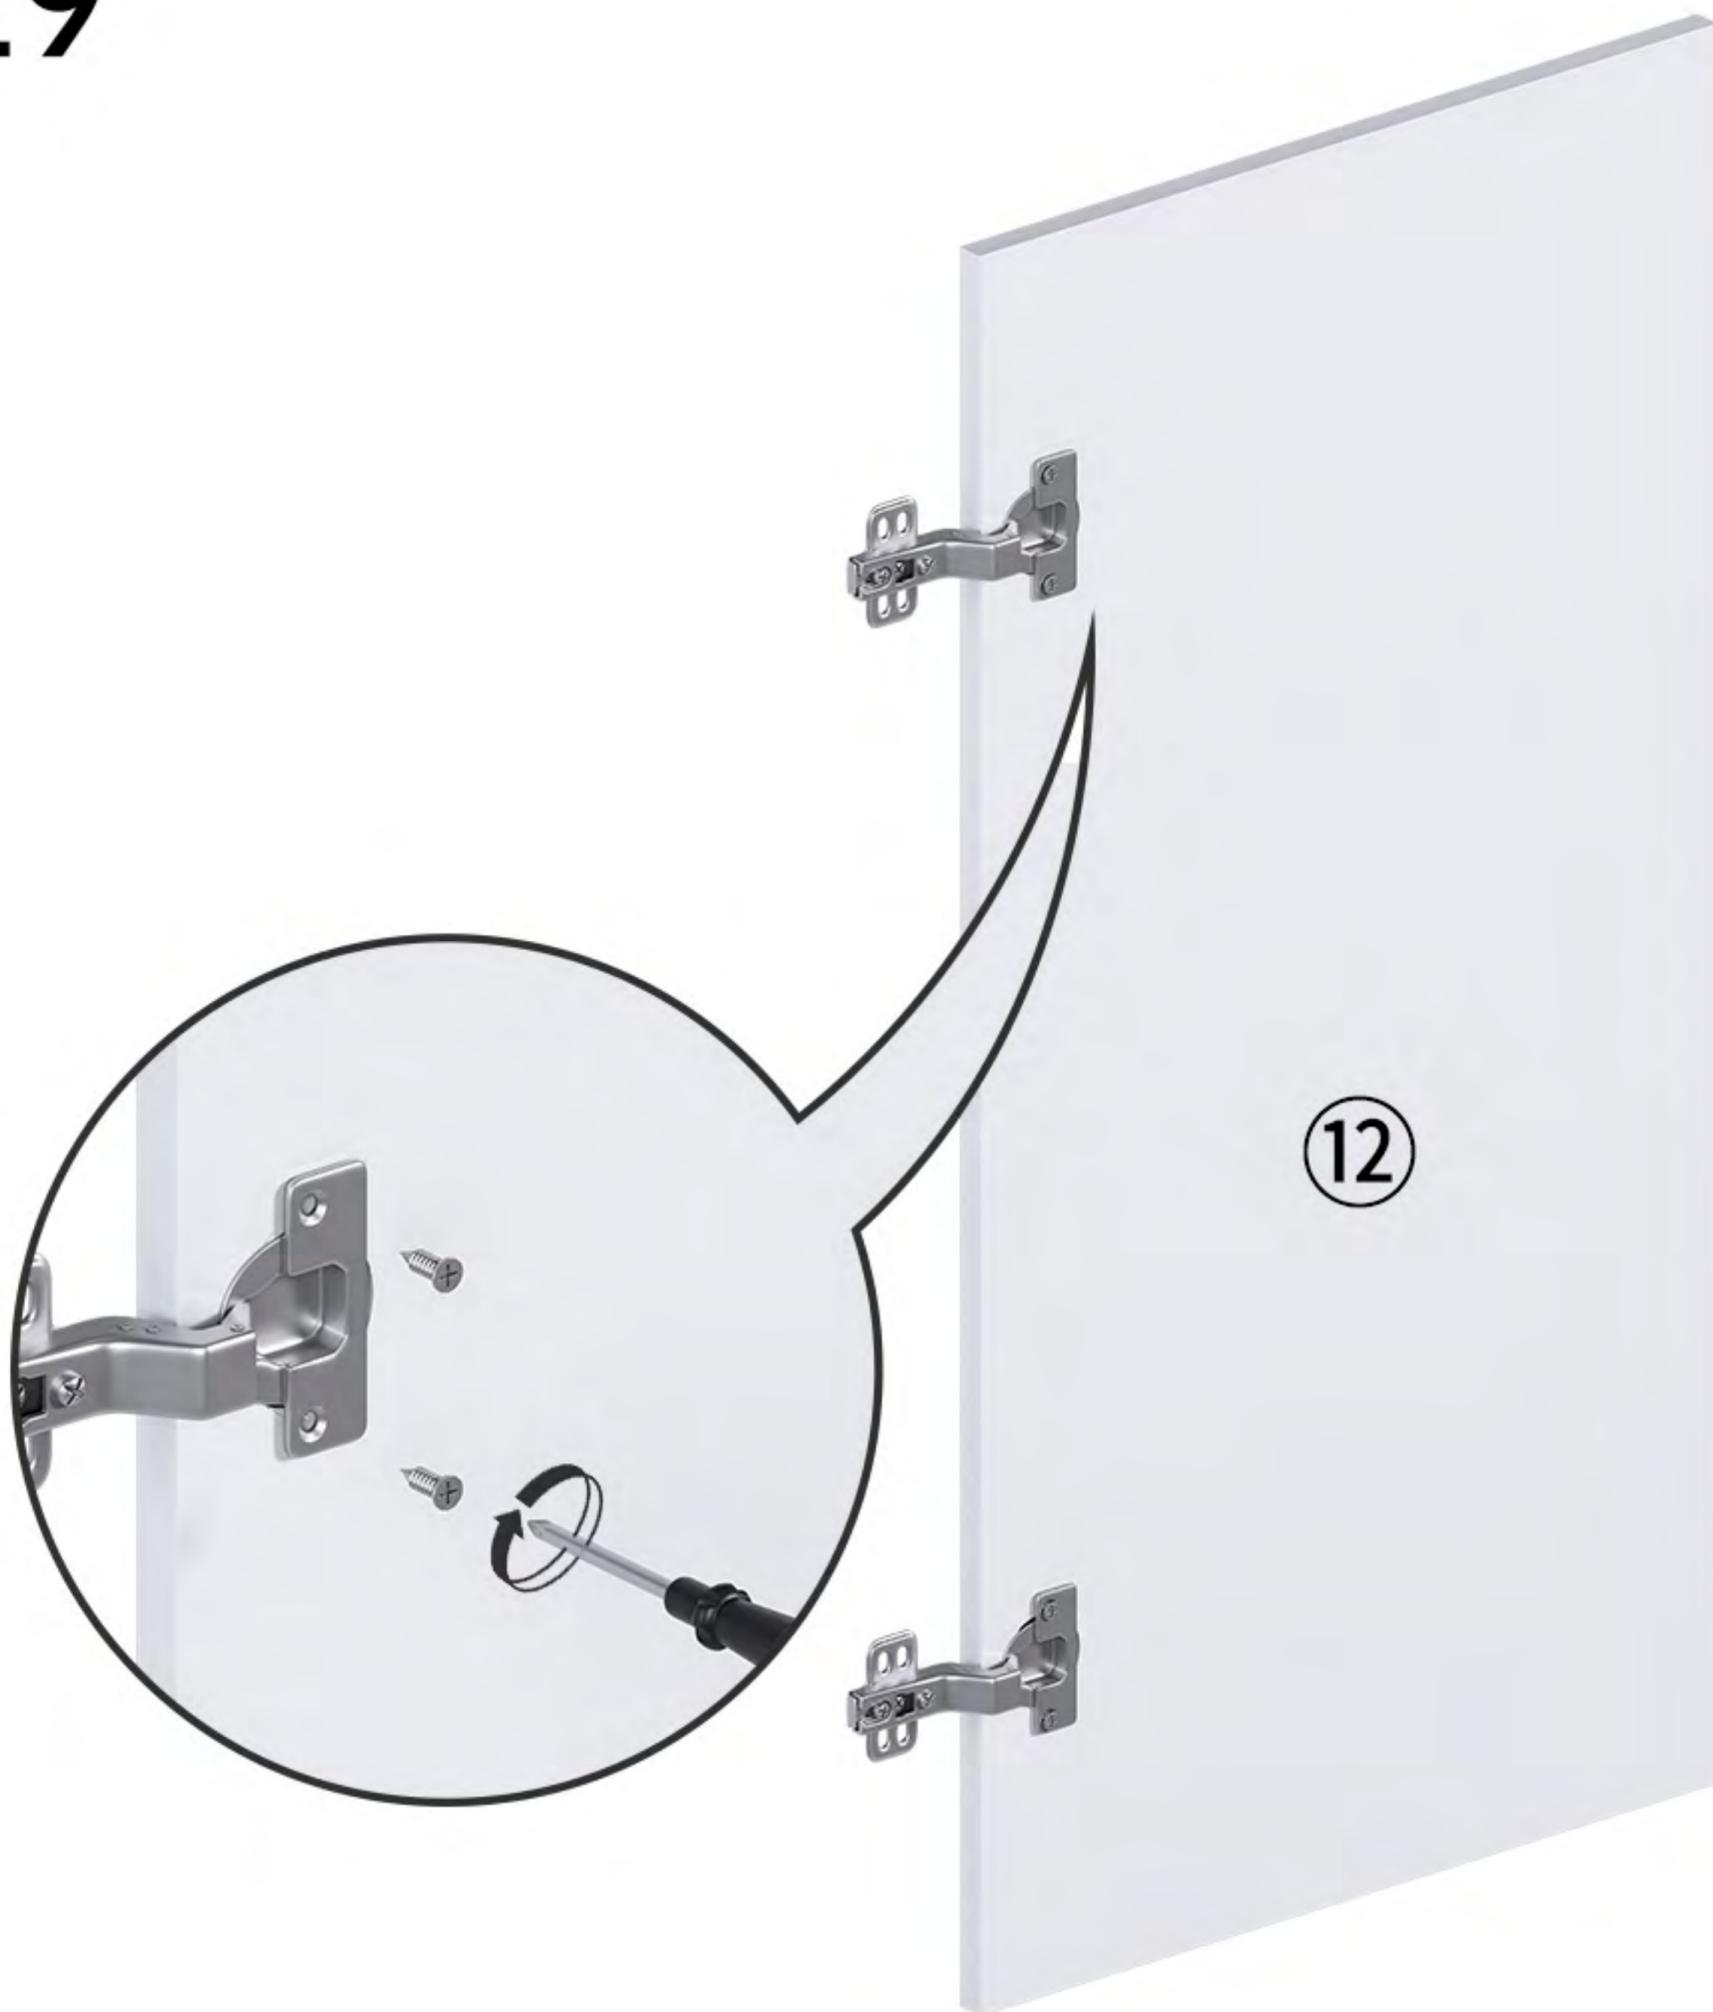

30

Door panel hinge adjustment installation example:

Door panels are uneven:

Loosen the screw pointed by the screwdriver in Figure 1, then adjust the position of the door then tighten the two screws on the side panel up and down, tighten it, and until they are flush.



Picture 1

The front and rear door gaps are too large:

The screw pointed by the screwdriver in Figure 2 is used to adjust the front and rear door seams. After loosening, adjust the position until it is flush, and then tighten it.



Picture 2

The left and right door gaps are too large:

The screw pointed by the screwdriver in Figure 3 is used to adjust the left and right door gaps. Clockwise will increase the door gap, and counterclockwise will decrease the door gap.



Picture 3

31



32



A1*8

33

