

## Kind tips:

1. When installing, please refer to the drawings to distinguish the boards,

The color of the product is not subject to the instructions;

2. Tighten the screw seven times, and then tighten it after everything is completed!

3. Some plates have a red side, and the red side faces down or inward.

4. Please read all the drawings before installing. 5. If there are extra screws, the spare screws are provided by the manufacturer!

### 2. Installation steps of eccentric parts



Screw the eccentric rod to the plate




Find the corresponding board to insert



find the hole



Insert the eccentric into the round hole

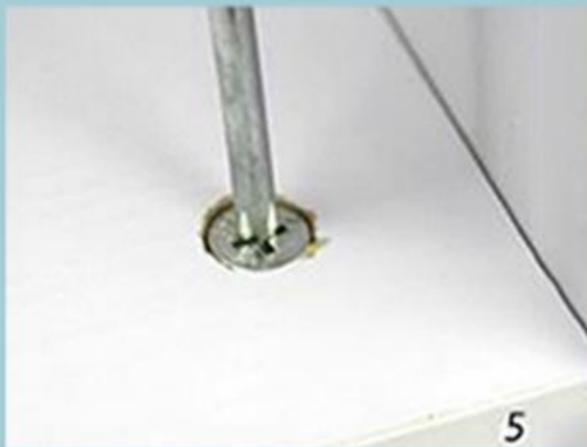

Rotate 180° clockwise  
to lock the board



6

### 3. Start the installation: drawer part installation



<1>

Non-penetrating hole on plate No.

19 Screw into DO (eccentric rod)




(10) Drawer panel

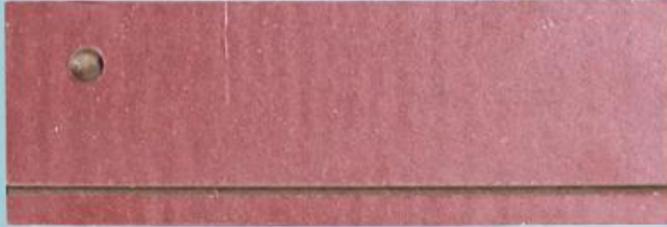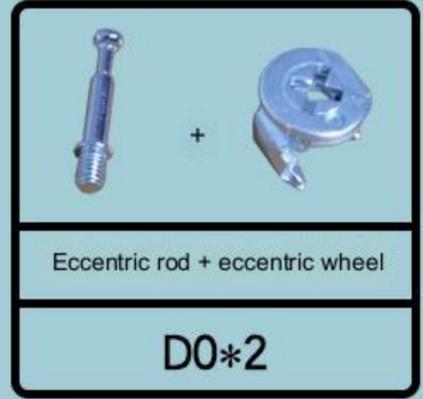

(20) Left panel of the drawer



(21) drawer right side panel

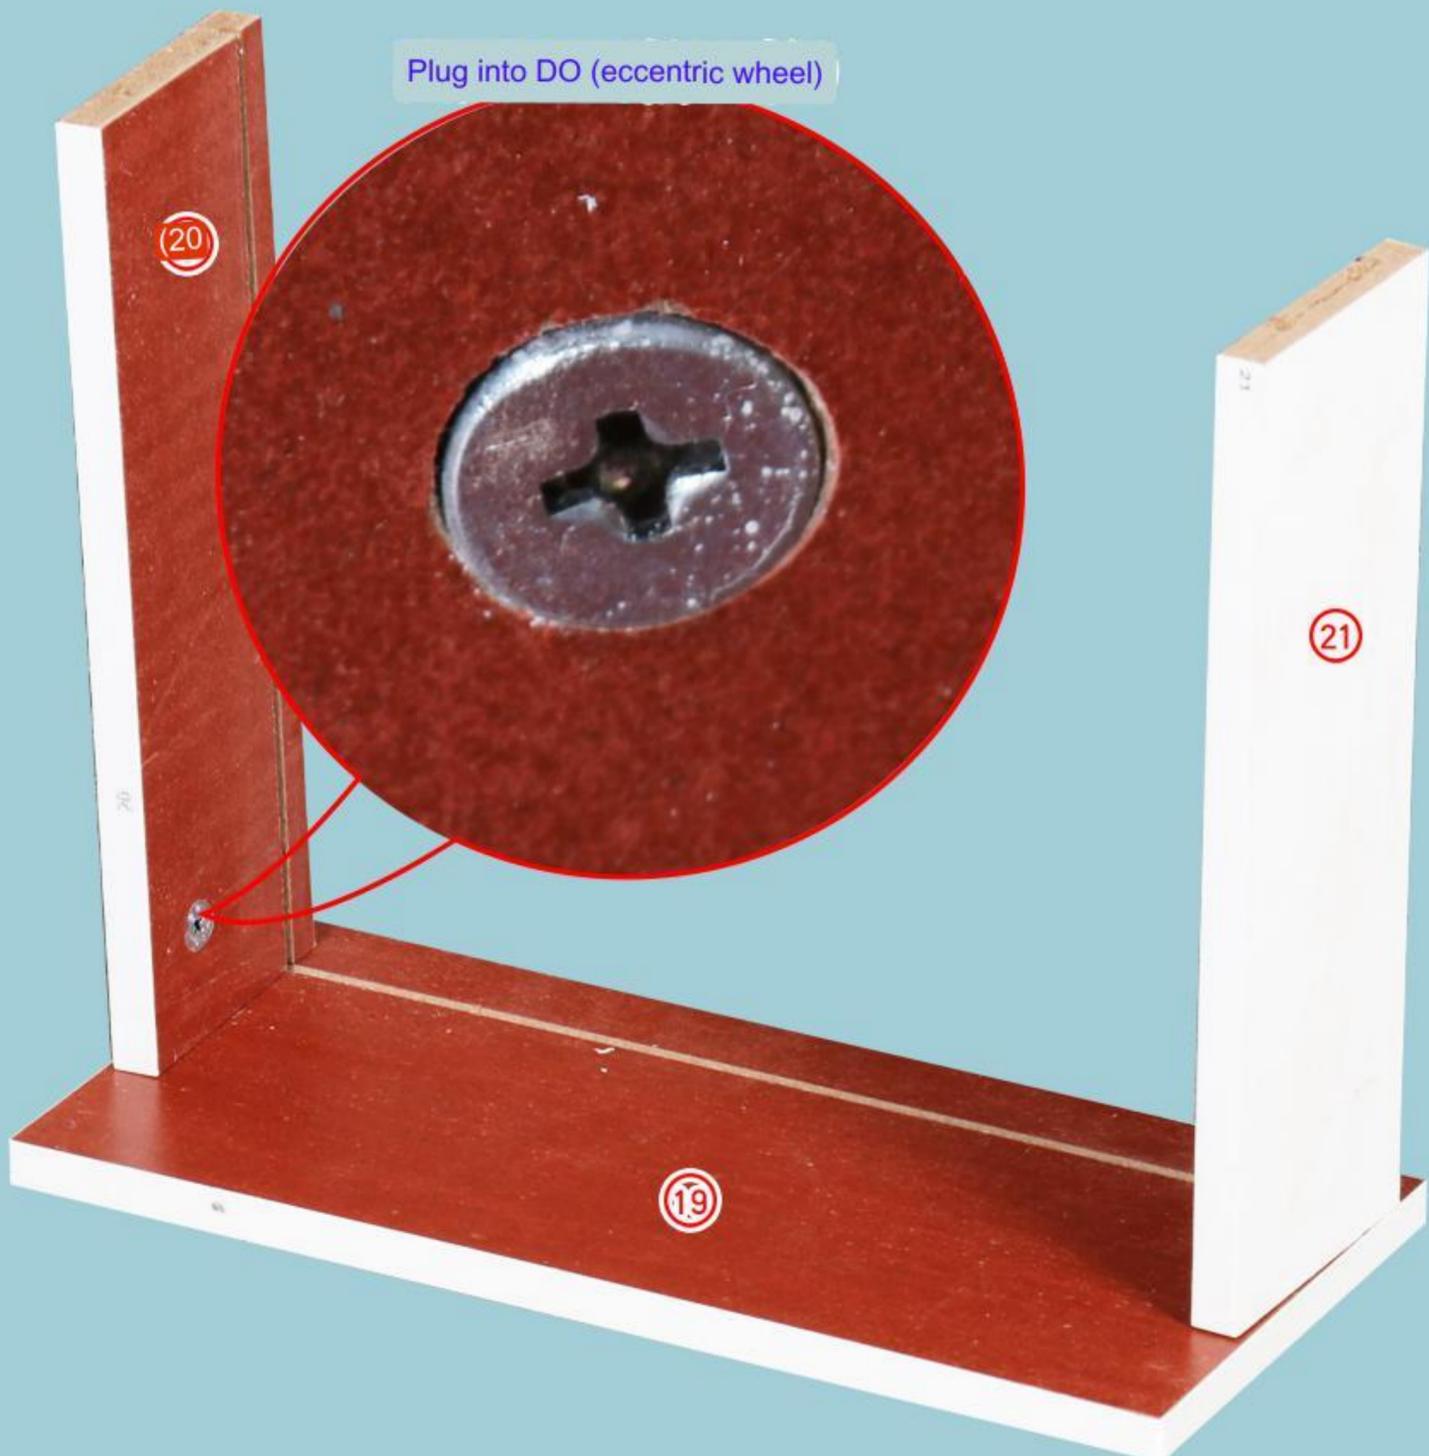

Plug into DO (eccentric wheel)

(20)


(21)

(19)

<2>




② Drawer Bottom

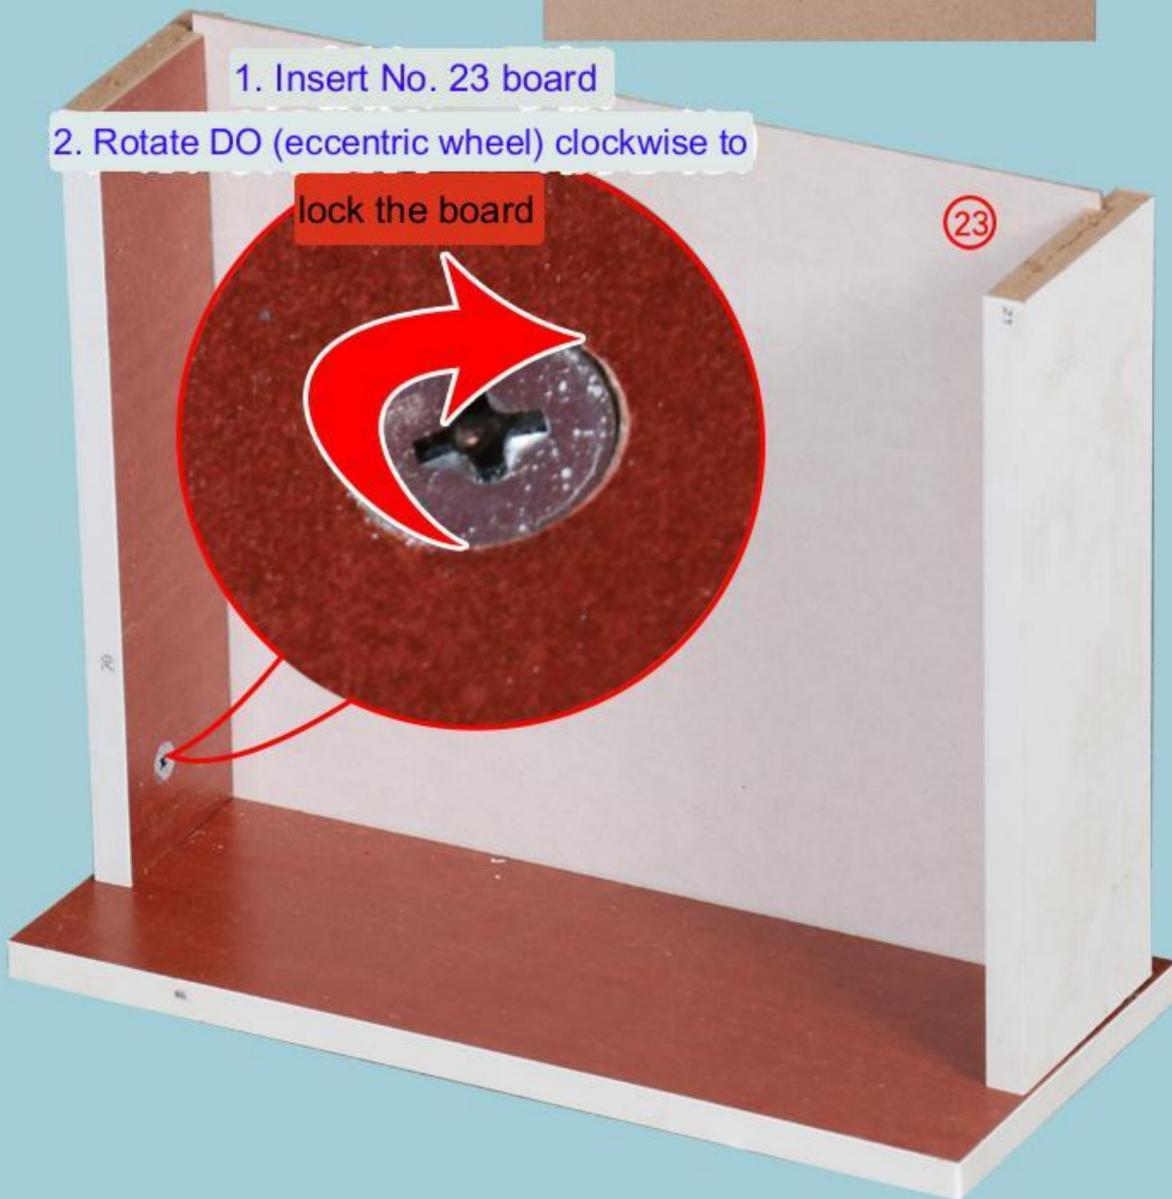

<3>



②② drawer back

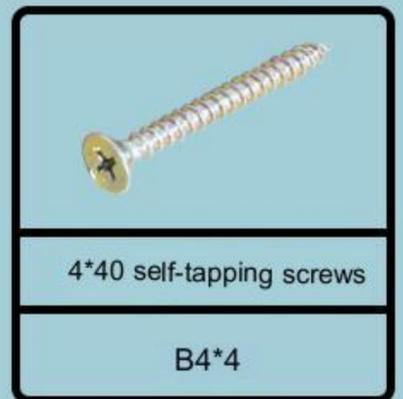



The drawer part is installed

4. Installation of the whole part

<1>

Put it on the needle hole on the No. 10 board

S33 is fixed with A2, with the magnetic side facing outward

Put S32 at the pinhole on No. 7 board and fix it with A2, with the magnetic side facing outward

Ⓣ Door Upper Laminate

Ⓡ Top plate

Non-penetrating hole on No. 7 plate Screw into DO (eccentric rod)

white bouncer (double head)	White bouncer (single head)	3.5*14 self-tapping screws	Eccentric rod
S32*1	S33*1	A2*8	D0*2



① Left panel



③ Middle vertical board



4*40 self-tapping screws
B4*2

Eccentric wheel
D0*2



⑦ roof

No. 1 and No. 3 boards circle the non-penetrating holes on the top and opposite

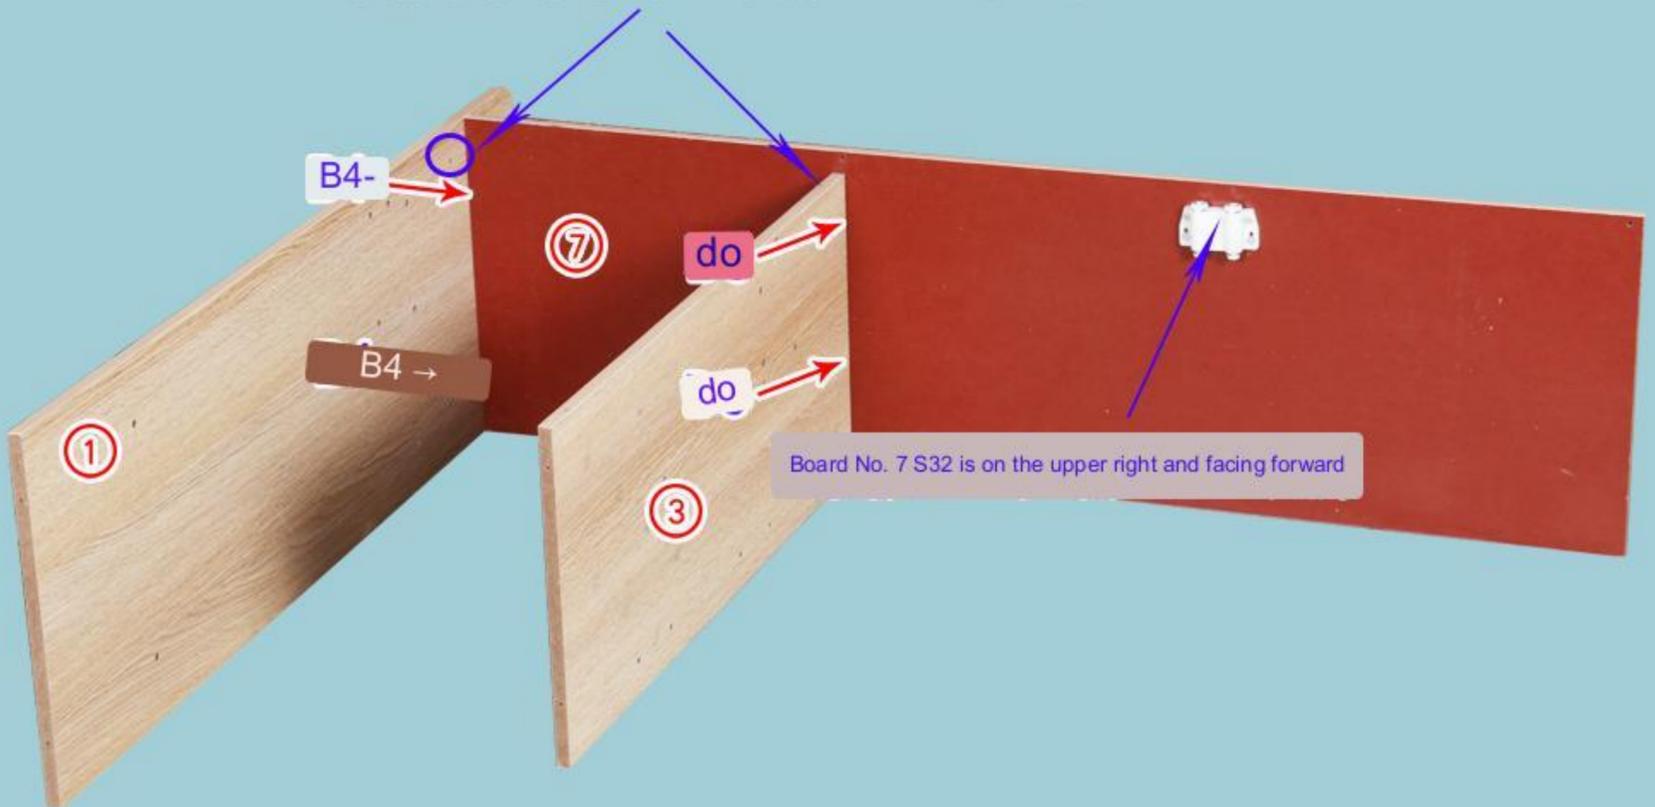


<2>



8 drawer lower shelf


4*40 self-tapping screws
B4*4

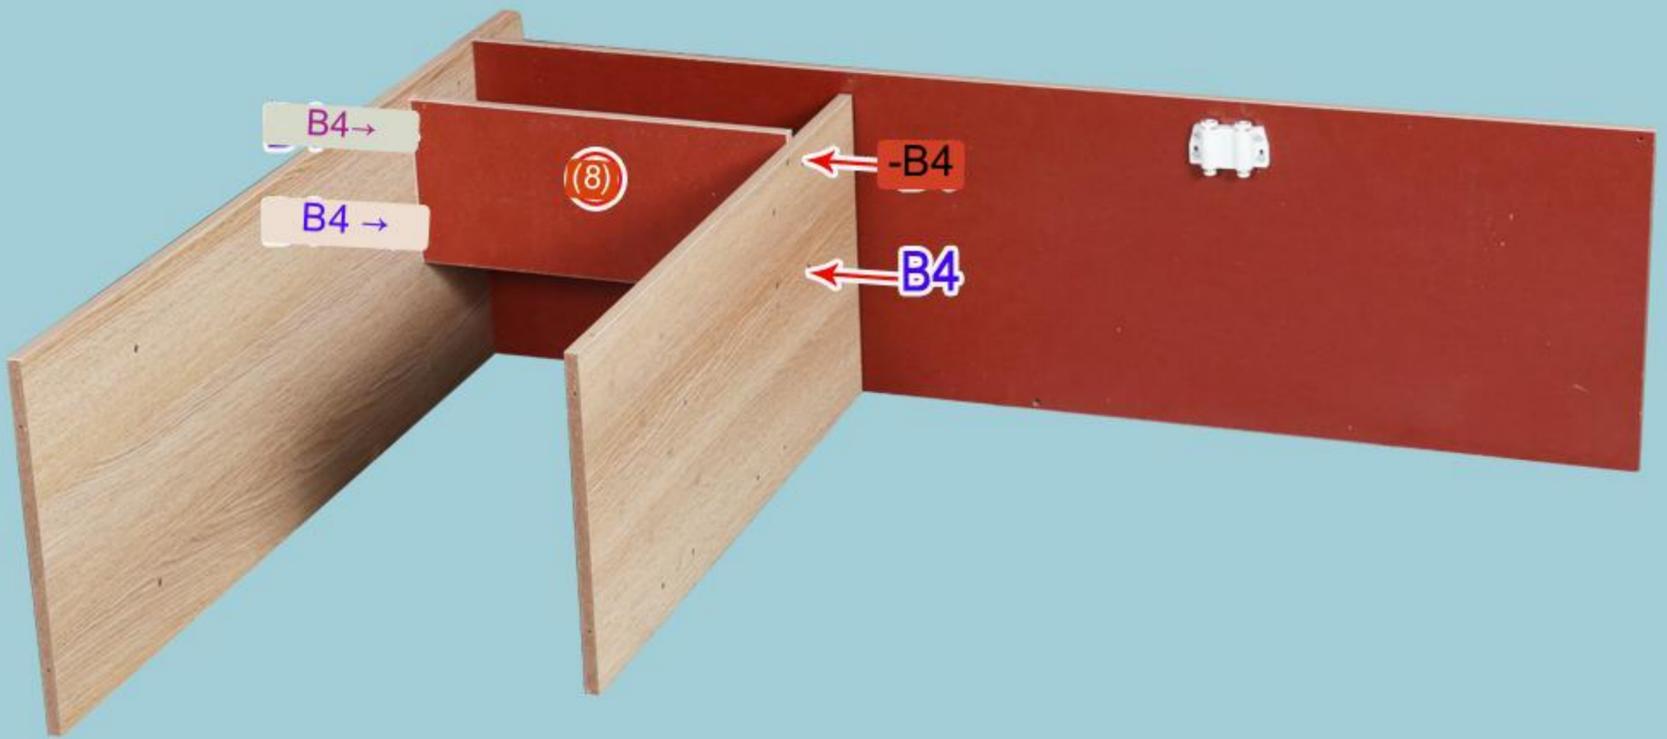


<3>



9 baffle


4*40 self-tapping screws
B4*2

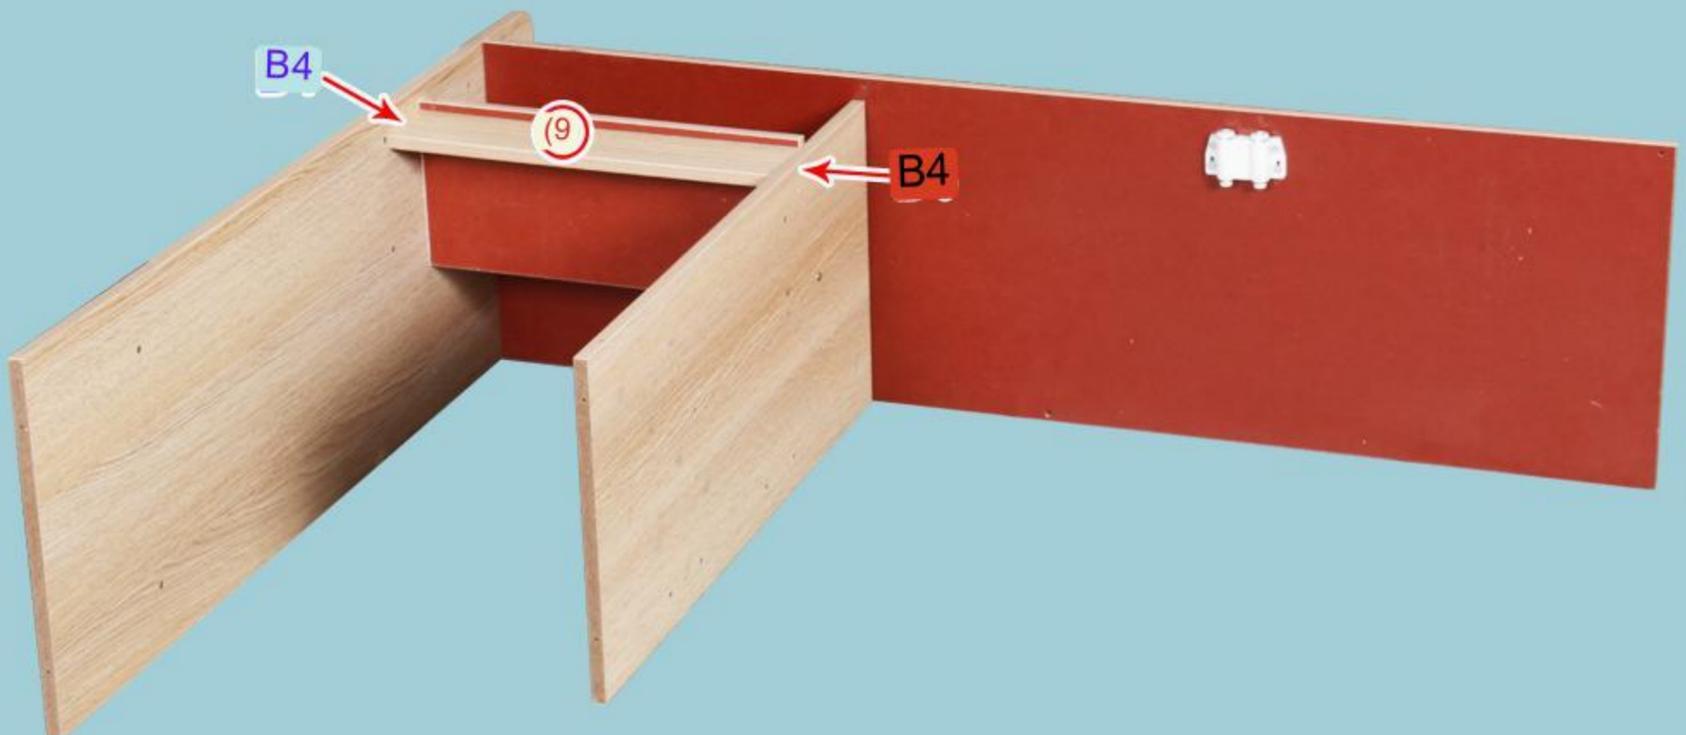


<4>



©Door Upper Laminate

4*40 self-tapping screws
B4*4

Board No. 10 S33 is on the upper right and facing forward

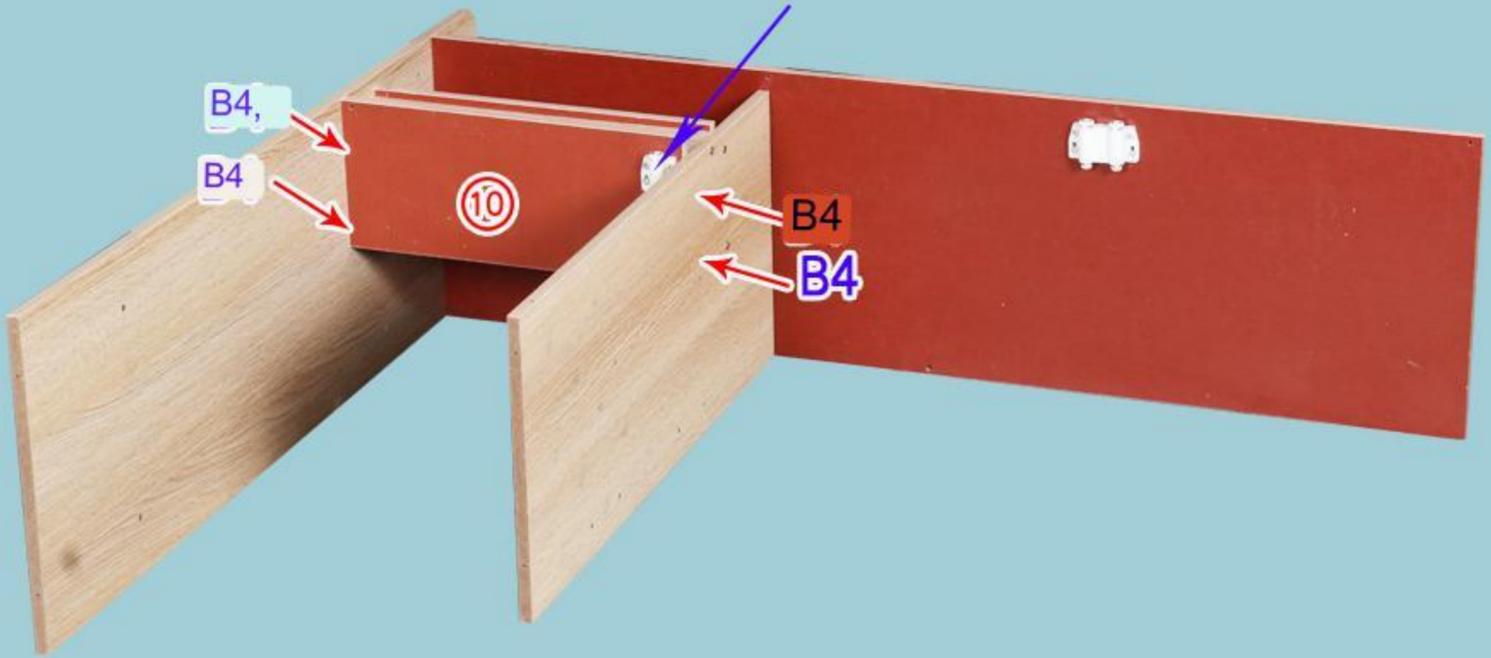


<5>



4 ) right side panel

4*40 self-tapping screws
B4*2

No. 4 plate circles the arc upwards and towards the rear

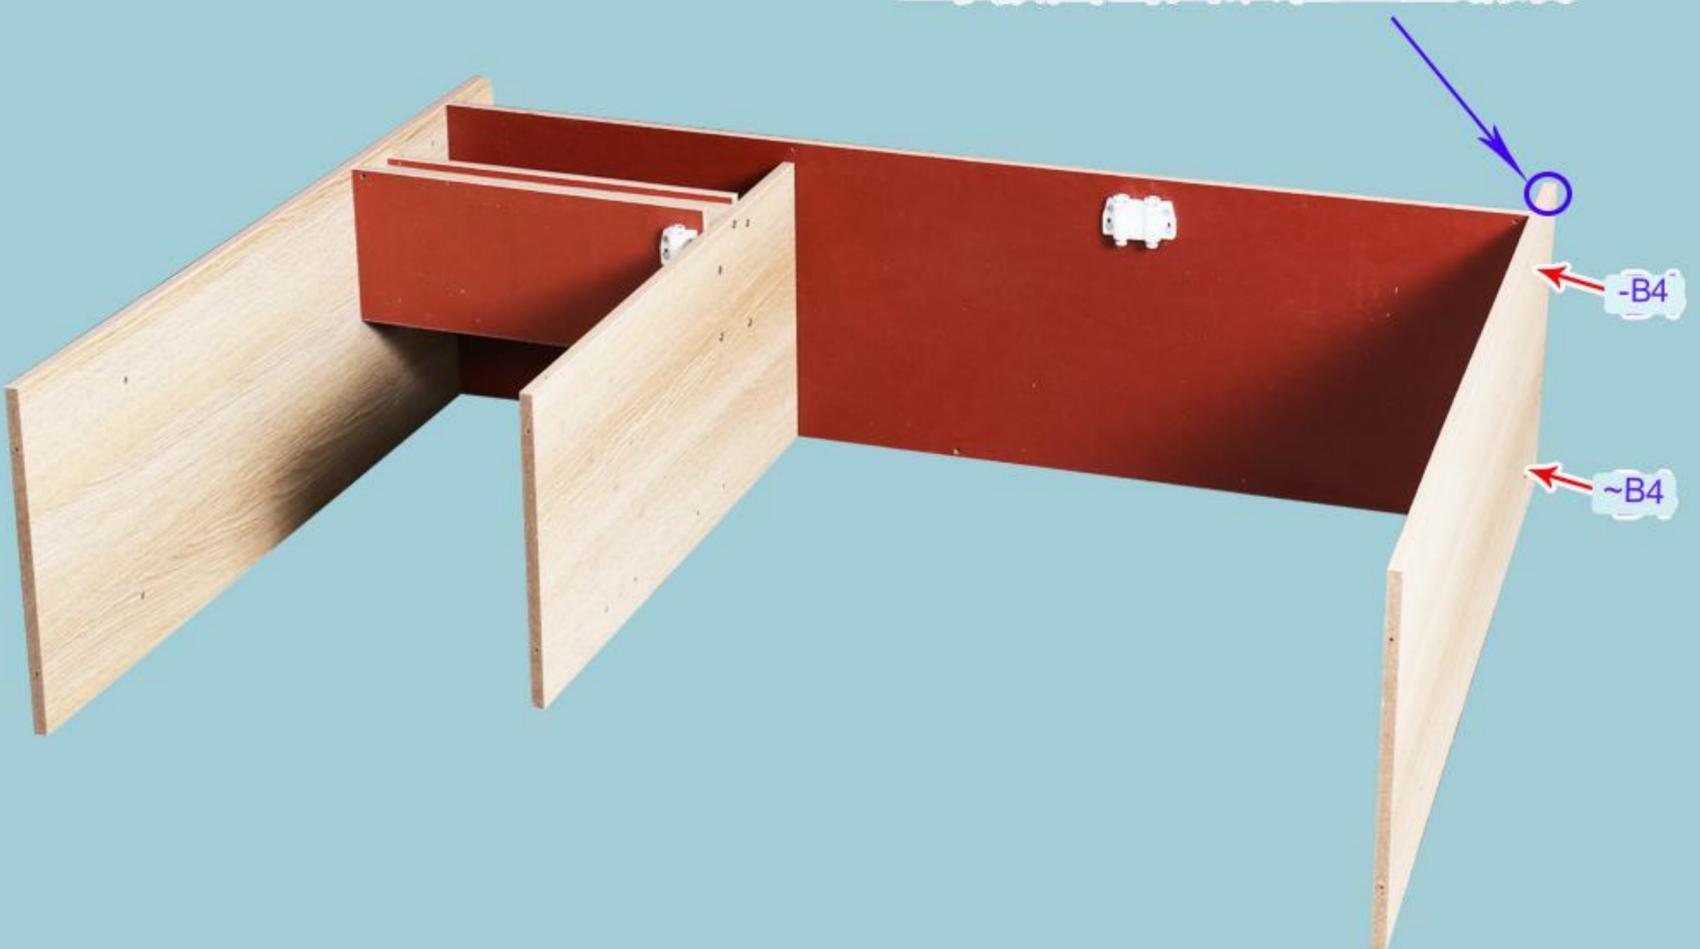


<6>



① Door lower laminate

4*40 self-tapping screws
B4*6

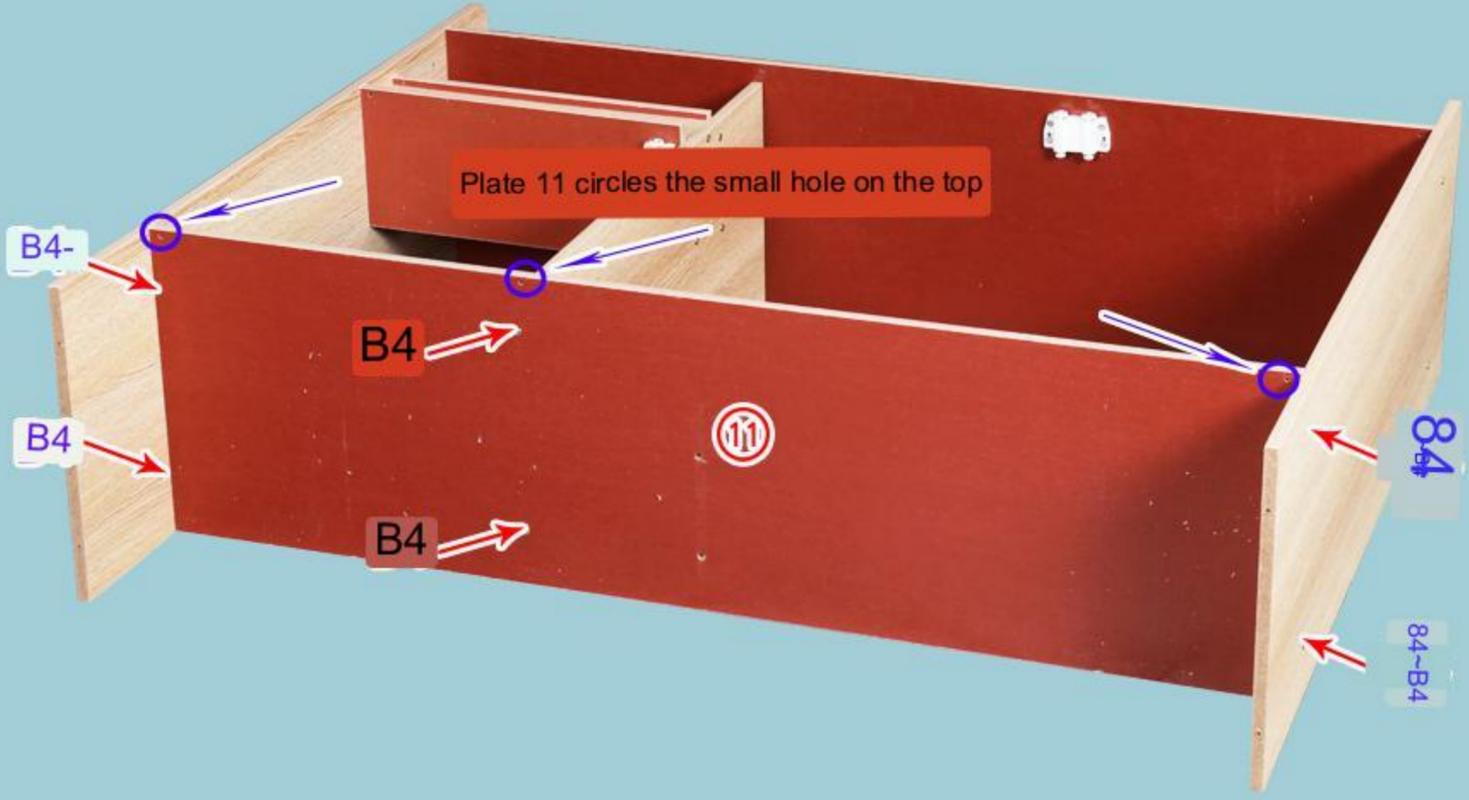


<7>




② Small vertical board

4*40 self-tapping screws
B4*2

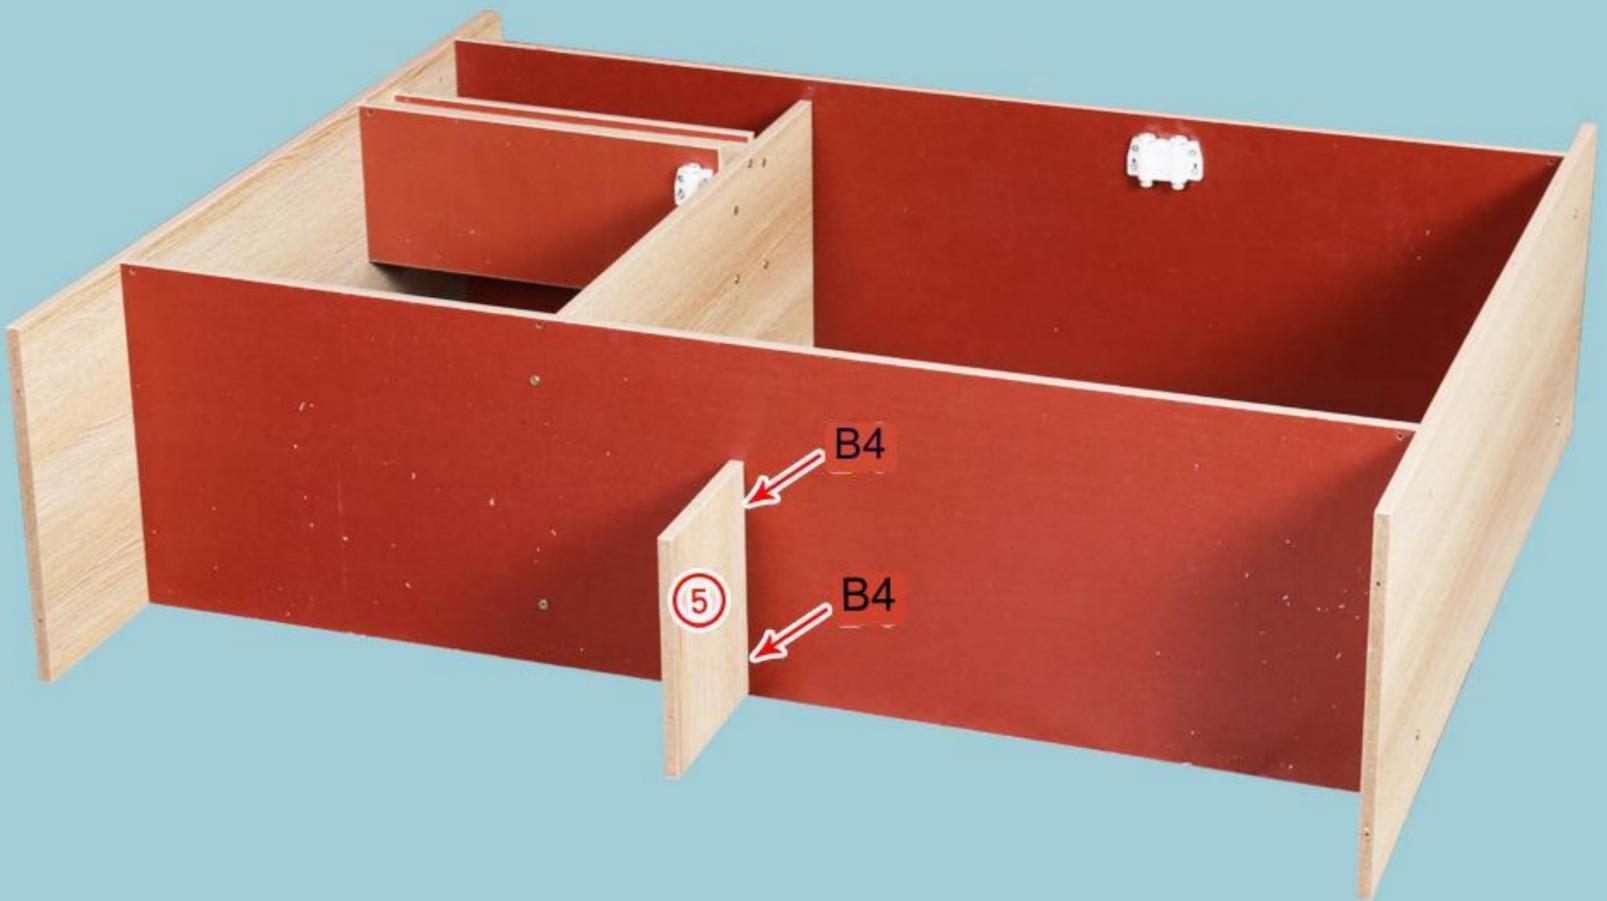

<8>

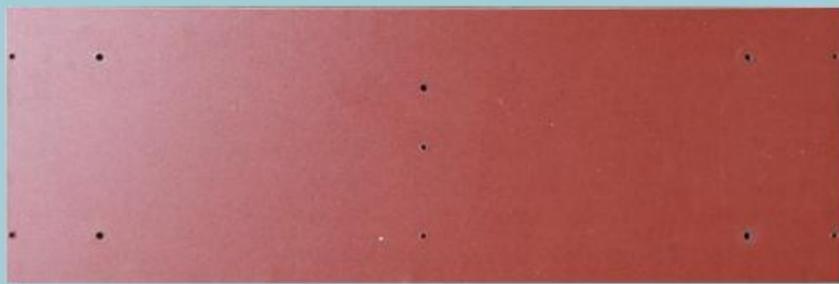

12 Bottom plate

4*40 self-tapping screws
B4*6




<9> overall flip



6*25 flat head screws
E4*5

Use 4 to fix wooden legs No. 26 on No. 12 board,

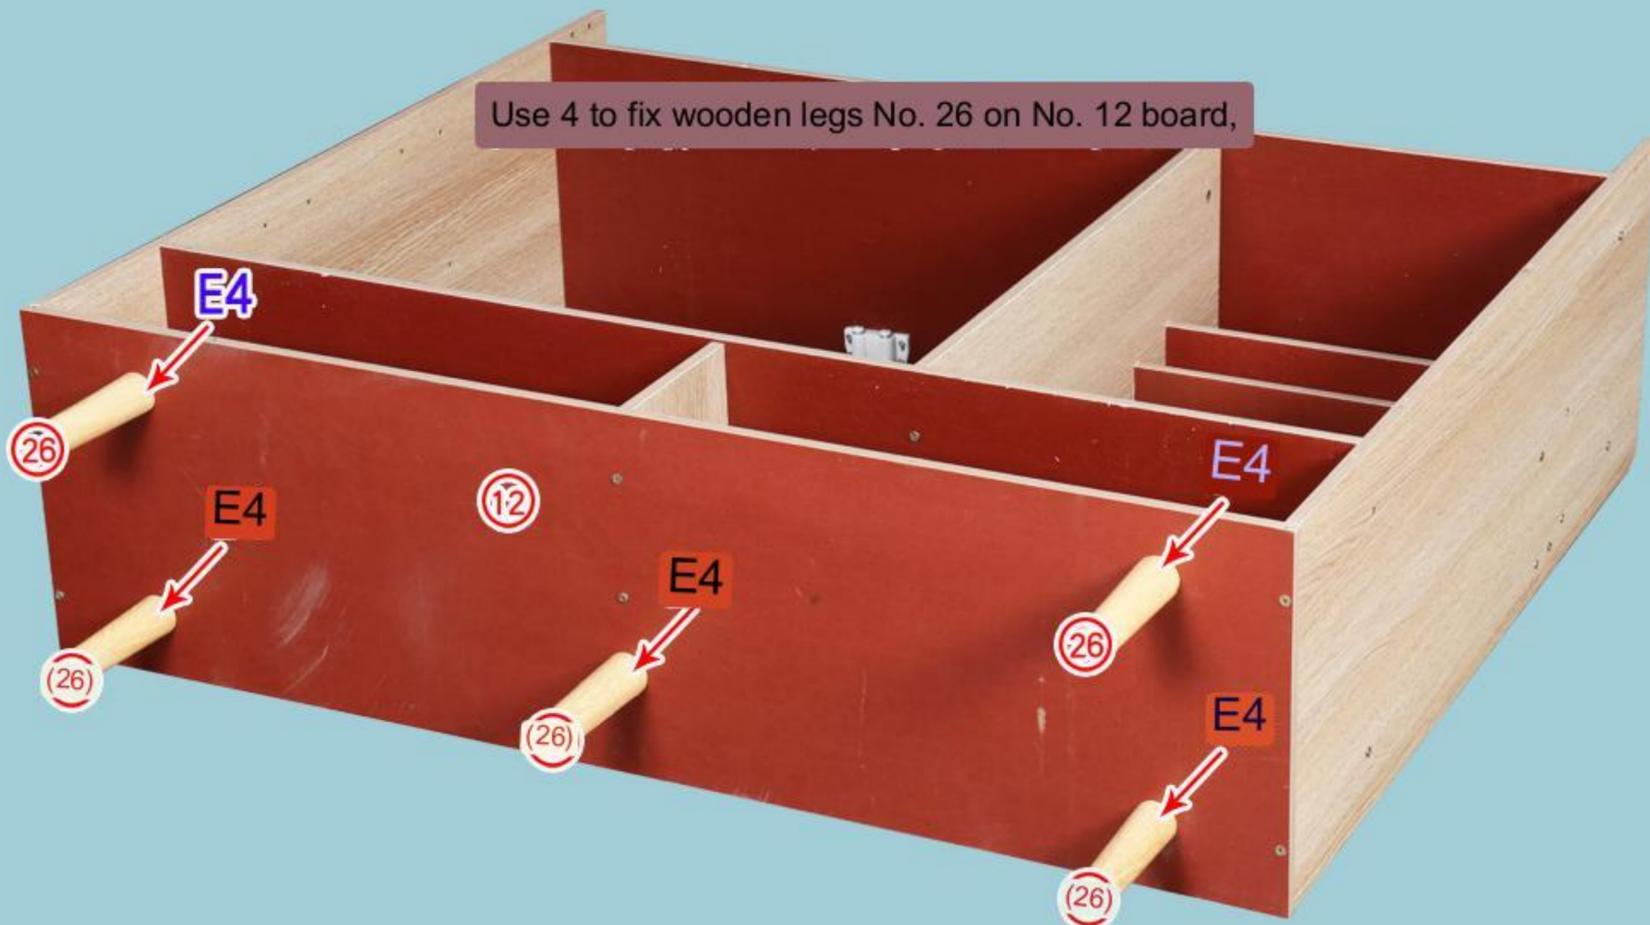


<10>




⑥ pull plate

4*40 self-tapping screws
B4*5

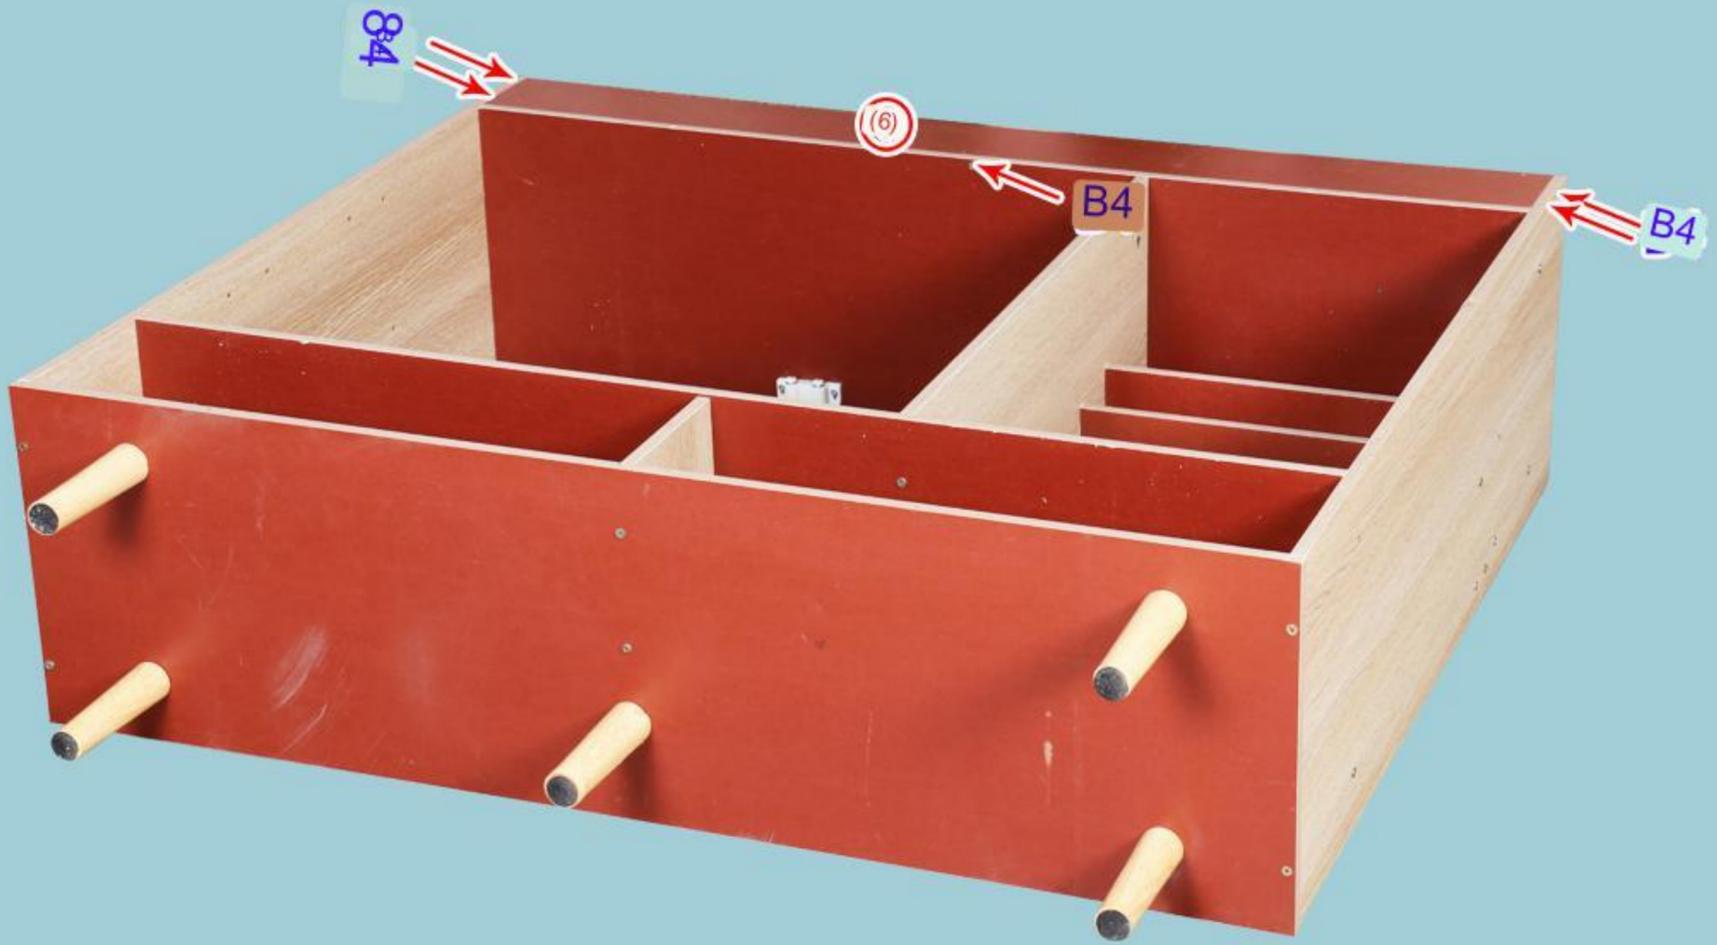


<11>

(Put K11 into the round hole)

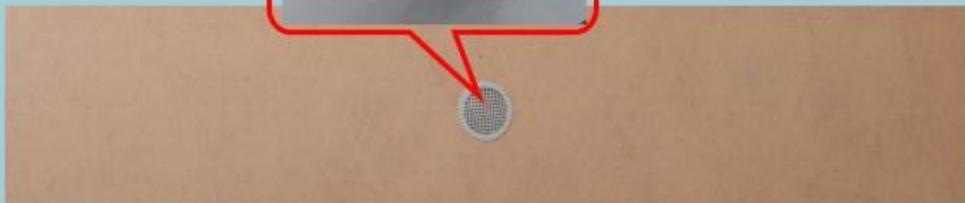

@backboard

air hole	small nail
K11*1	K20*18

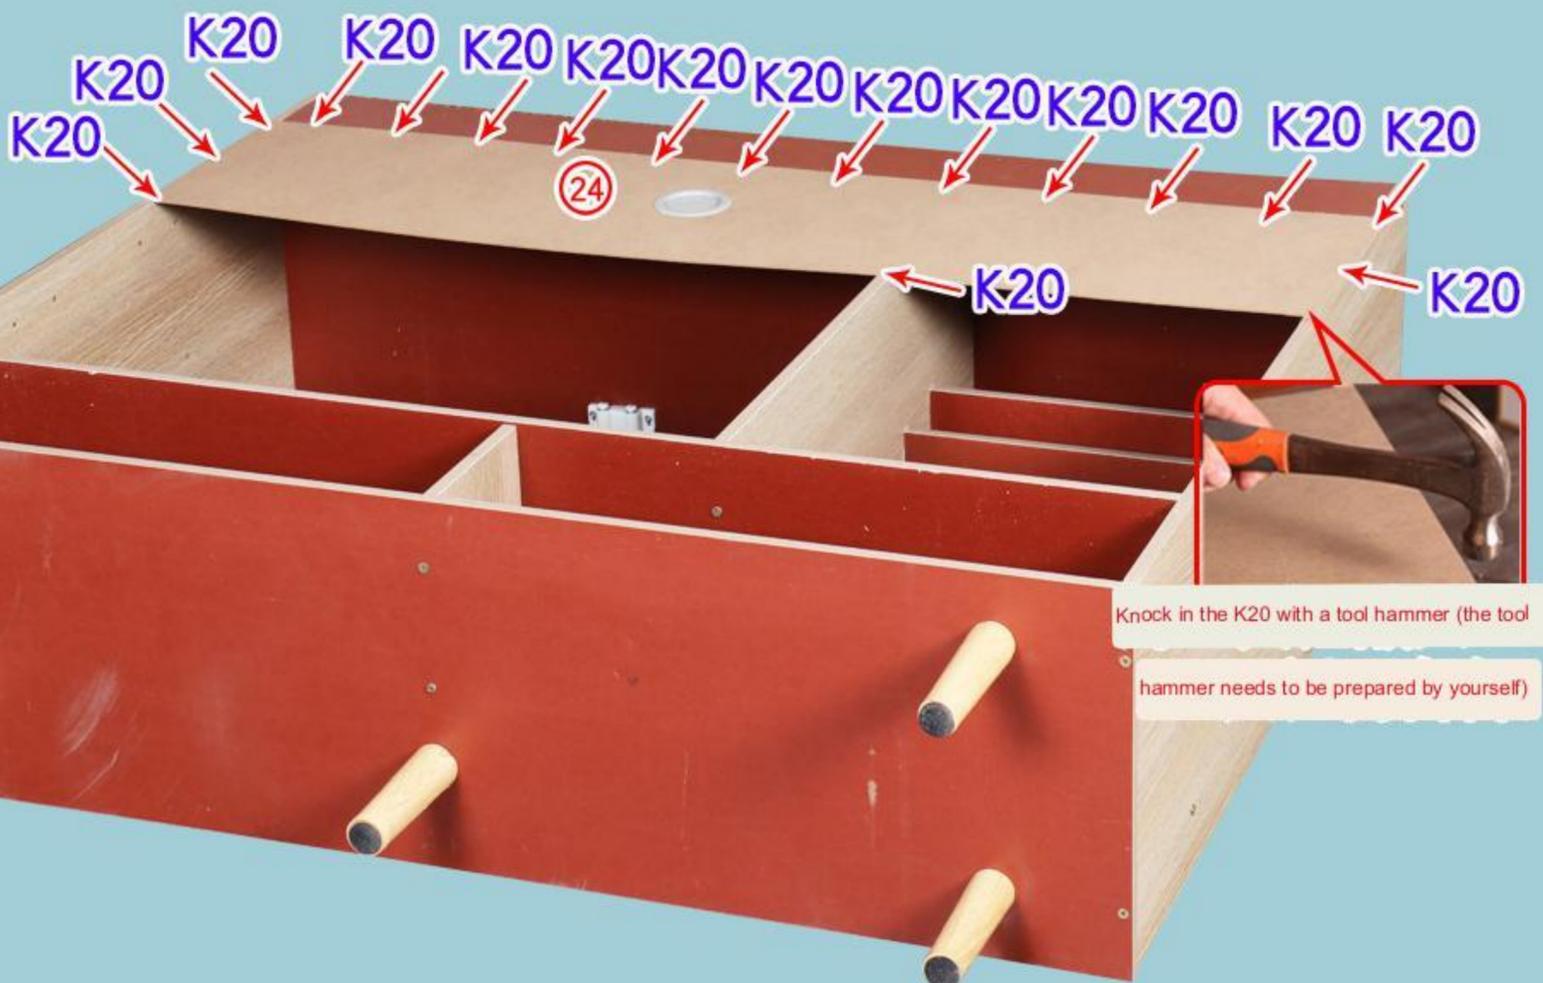


Knock in the K20 with a tool hammer (the tool hammer needs to be prepared by yourself)

<12>



③ Middle rear panel

air hole	small nail
K11*1	K20*8

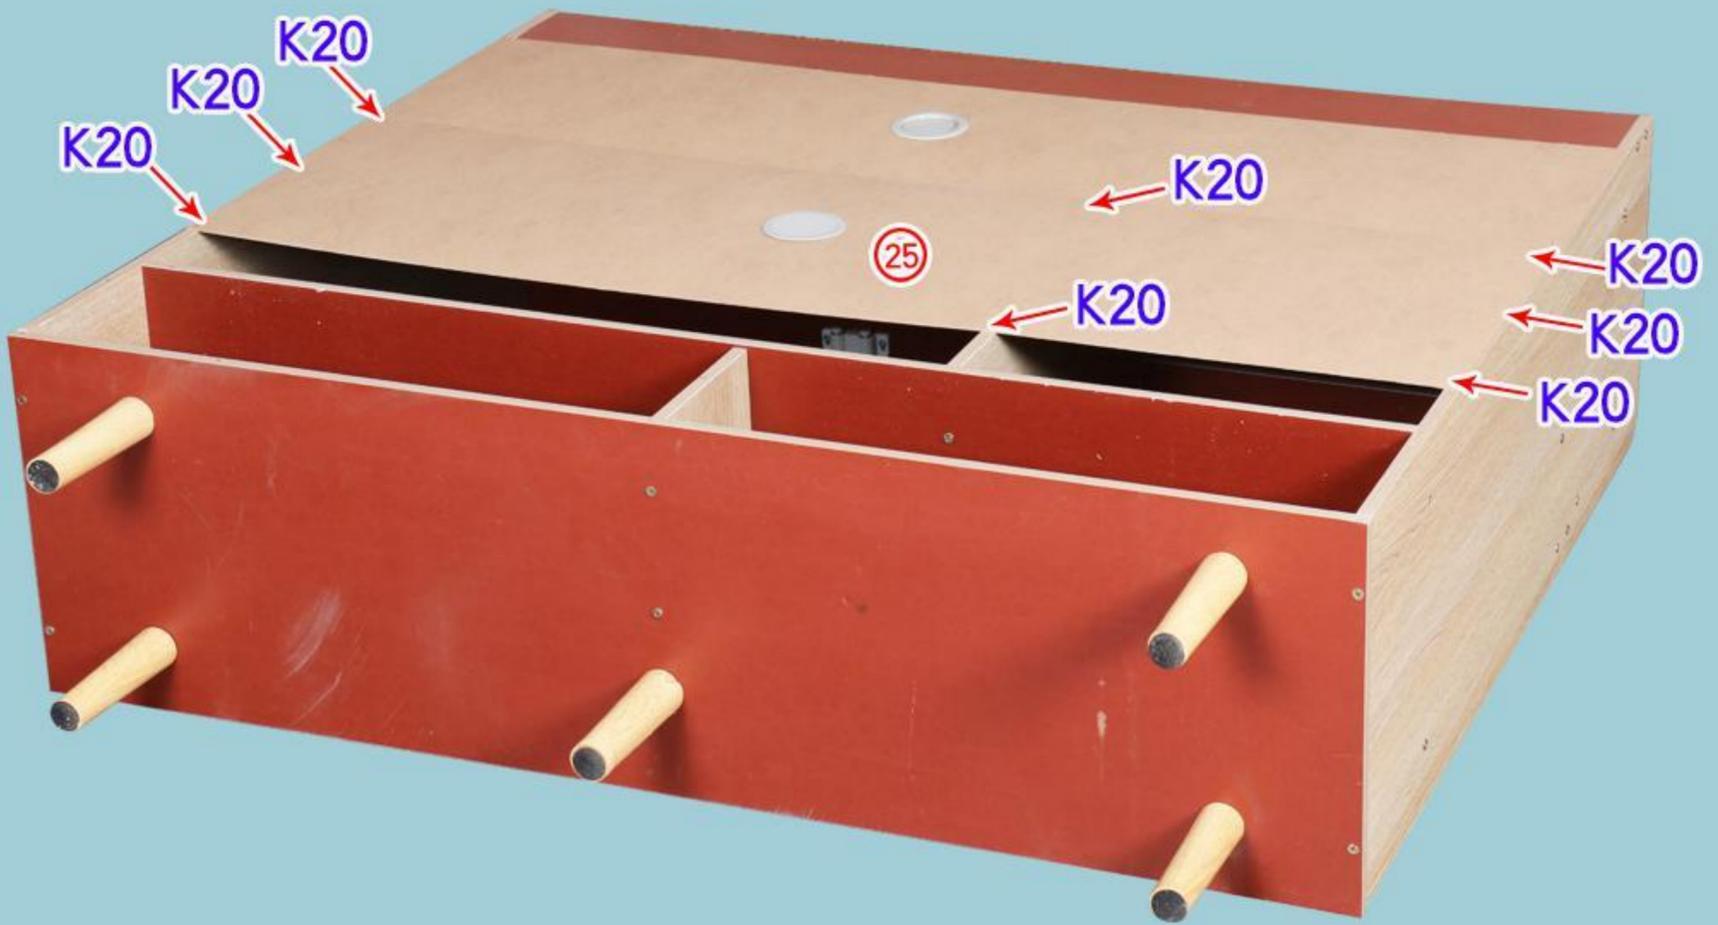


<13>



④ back panel

air hole	small nail
K11*1	K20*18

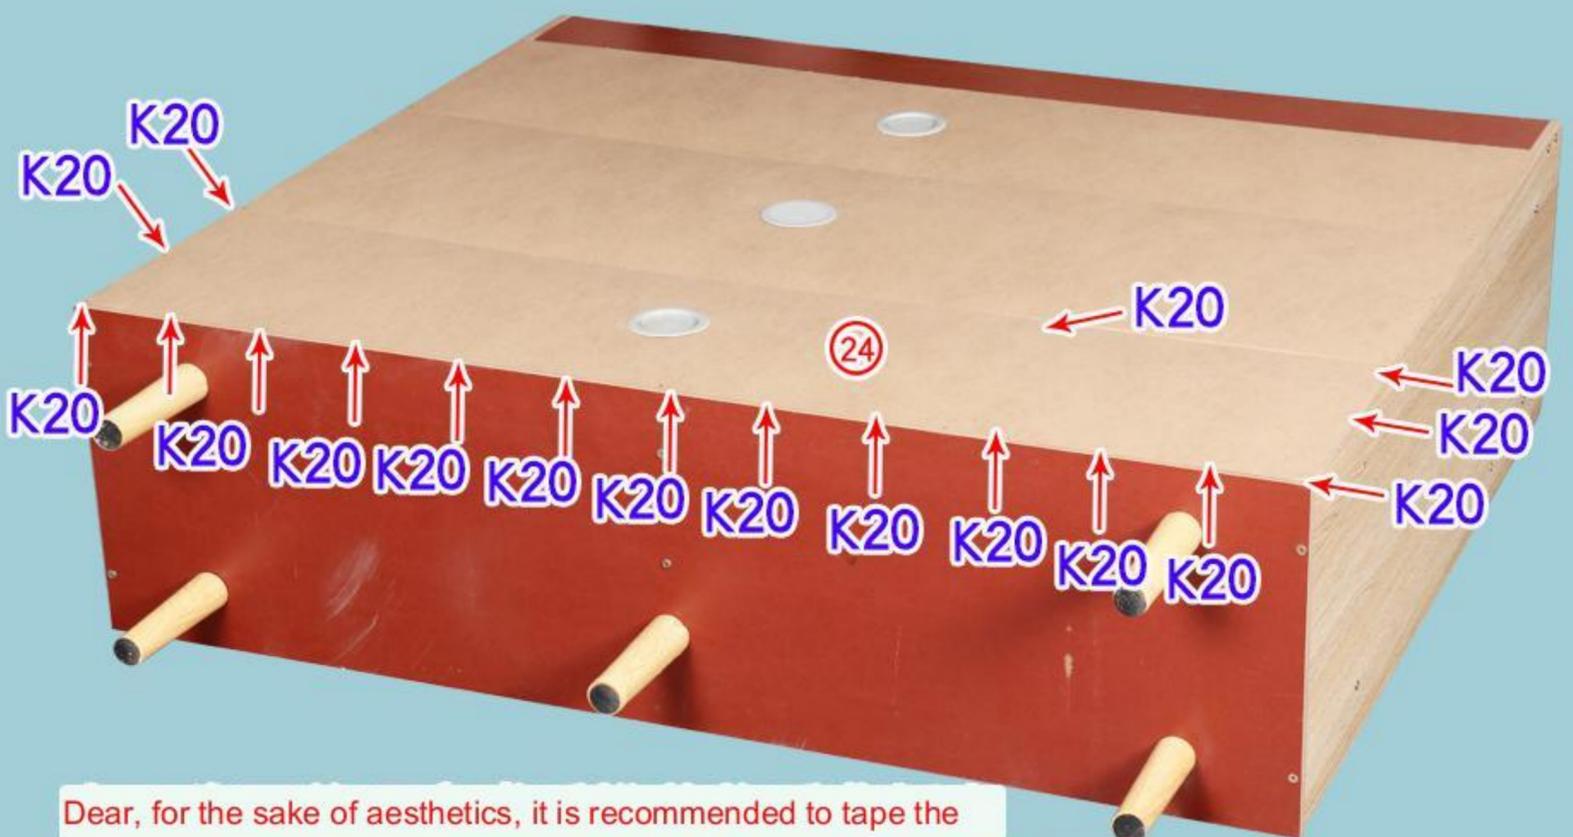


Dear, for the sake of aesthetics, it is recommended to tape the gap on the back panel until it is flush (you need to bring your own tape)

<14> overall alignment



Iron partition pin

KO\*8

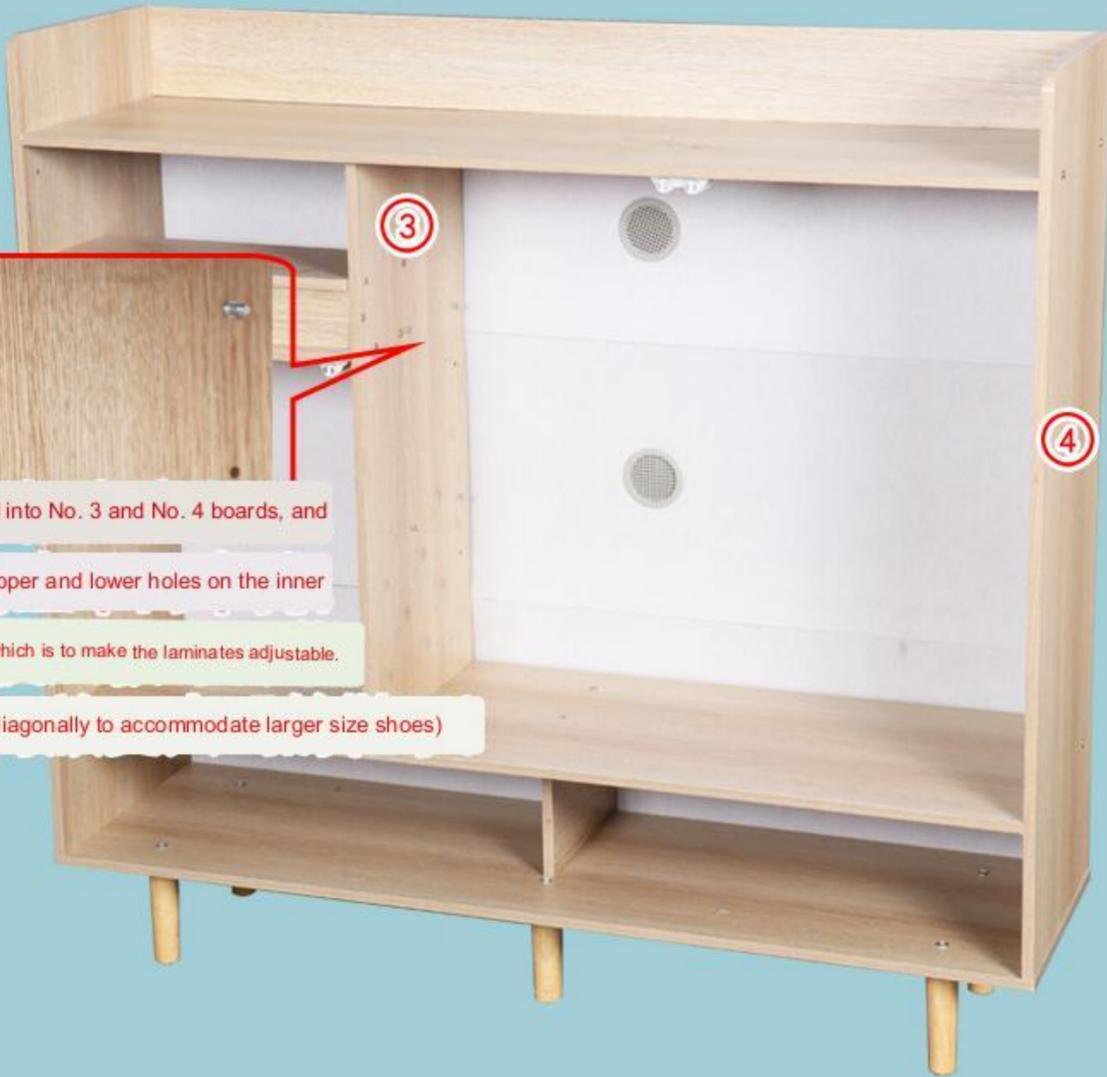

KO is plugged into No. 3 and No. 4 boards, and there are two upper and lower holes on the inner side, the purpose of which is to make the laminates adjustable.

(Laminates can be placed diagonally to accommodate larger size shoes)

<15>



④ laminate



Place plate number 14 on KO

14


14


Iron partition
pin KO*3

The small holes on the upper side of the door are all plugged into KO



⑦ ⑩ Door panel

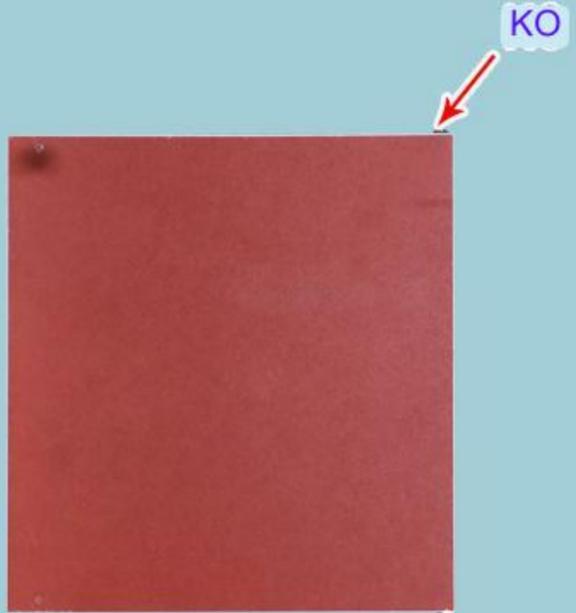

⑤ Left door panel

		
door hinge	Single hole door magnet	3.5*12 Self-tapping
K2*3	L19*3	A1*9

Use A1 to fix the eye mark on the door panel 19

1. Align the KO on the top of the door panel with the small hole on the bottom of No. 7 and No. 10 boards and insert



2. Insert K2 into the small hole on the number plate first, then align the guide hole on the door plate with the hole of K2 and fix it with A1 first. After the door plate is adjusted,

Tighten all

<17>

stuffed into KO, the function of KO is to prevent the drawer from

falling out when pulled



Iron partition pin

KO\*2

<18> Completion diagram

