


## CC021-80CM Installation Instruction


		1		1	<b>Common</b>		_	
A*24	B*24	C*52	D*2	E*4	F*4	G*8	H*40	I*2
			handle	Handle screw	3CM flat head screw	Hinge small nails		nails


The installation principle of the eccentric part: Reminder: When installing the screw, tighten it seven times, and then tighten it after all is completed!

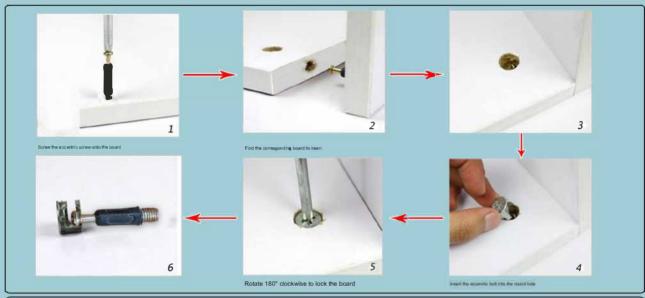


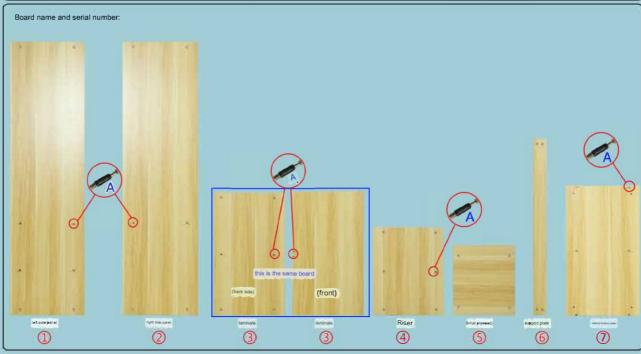


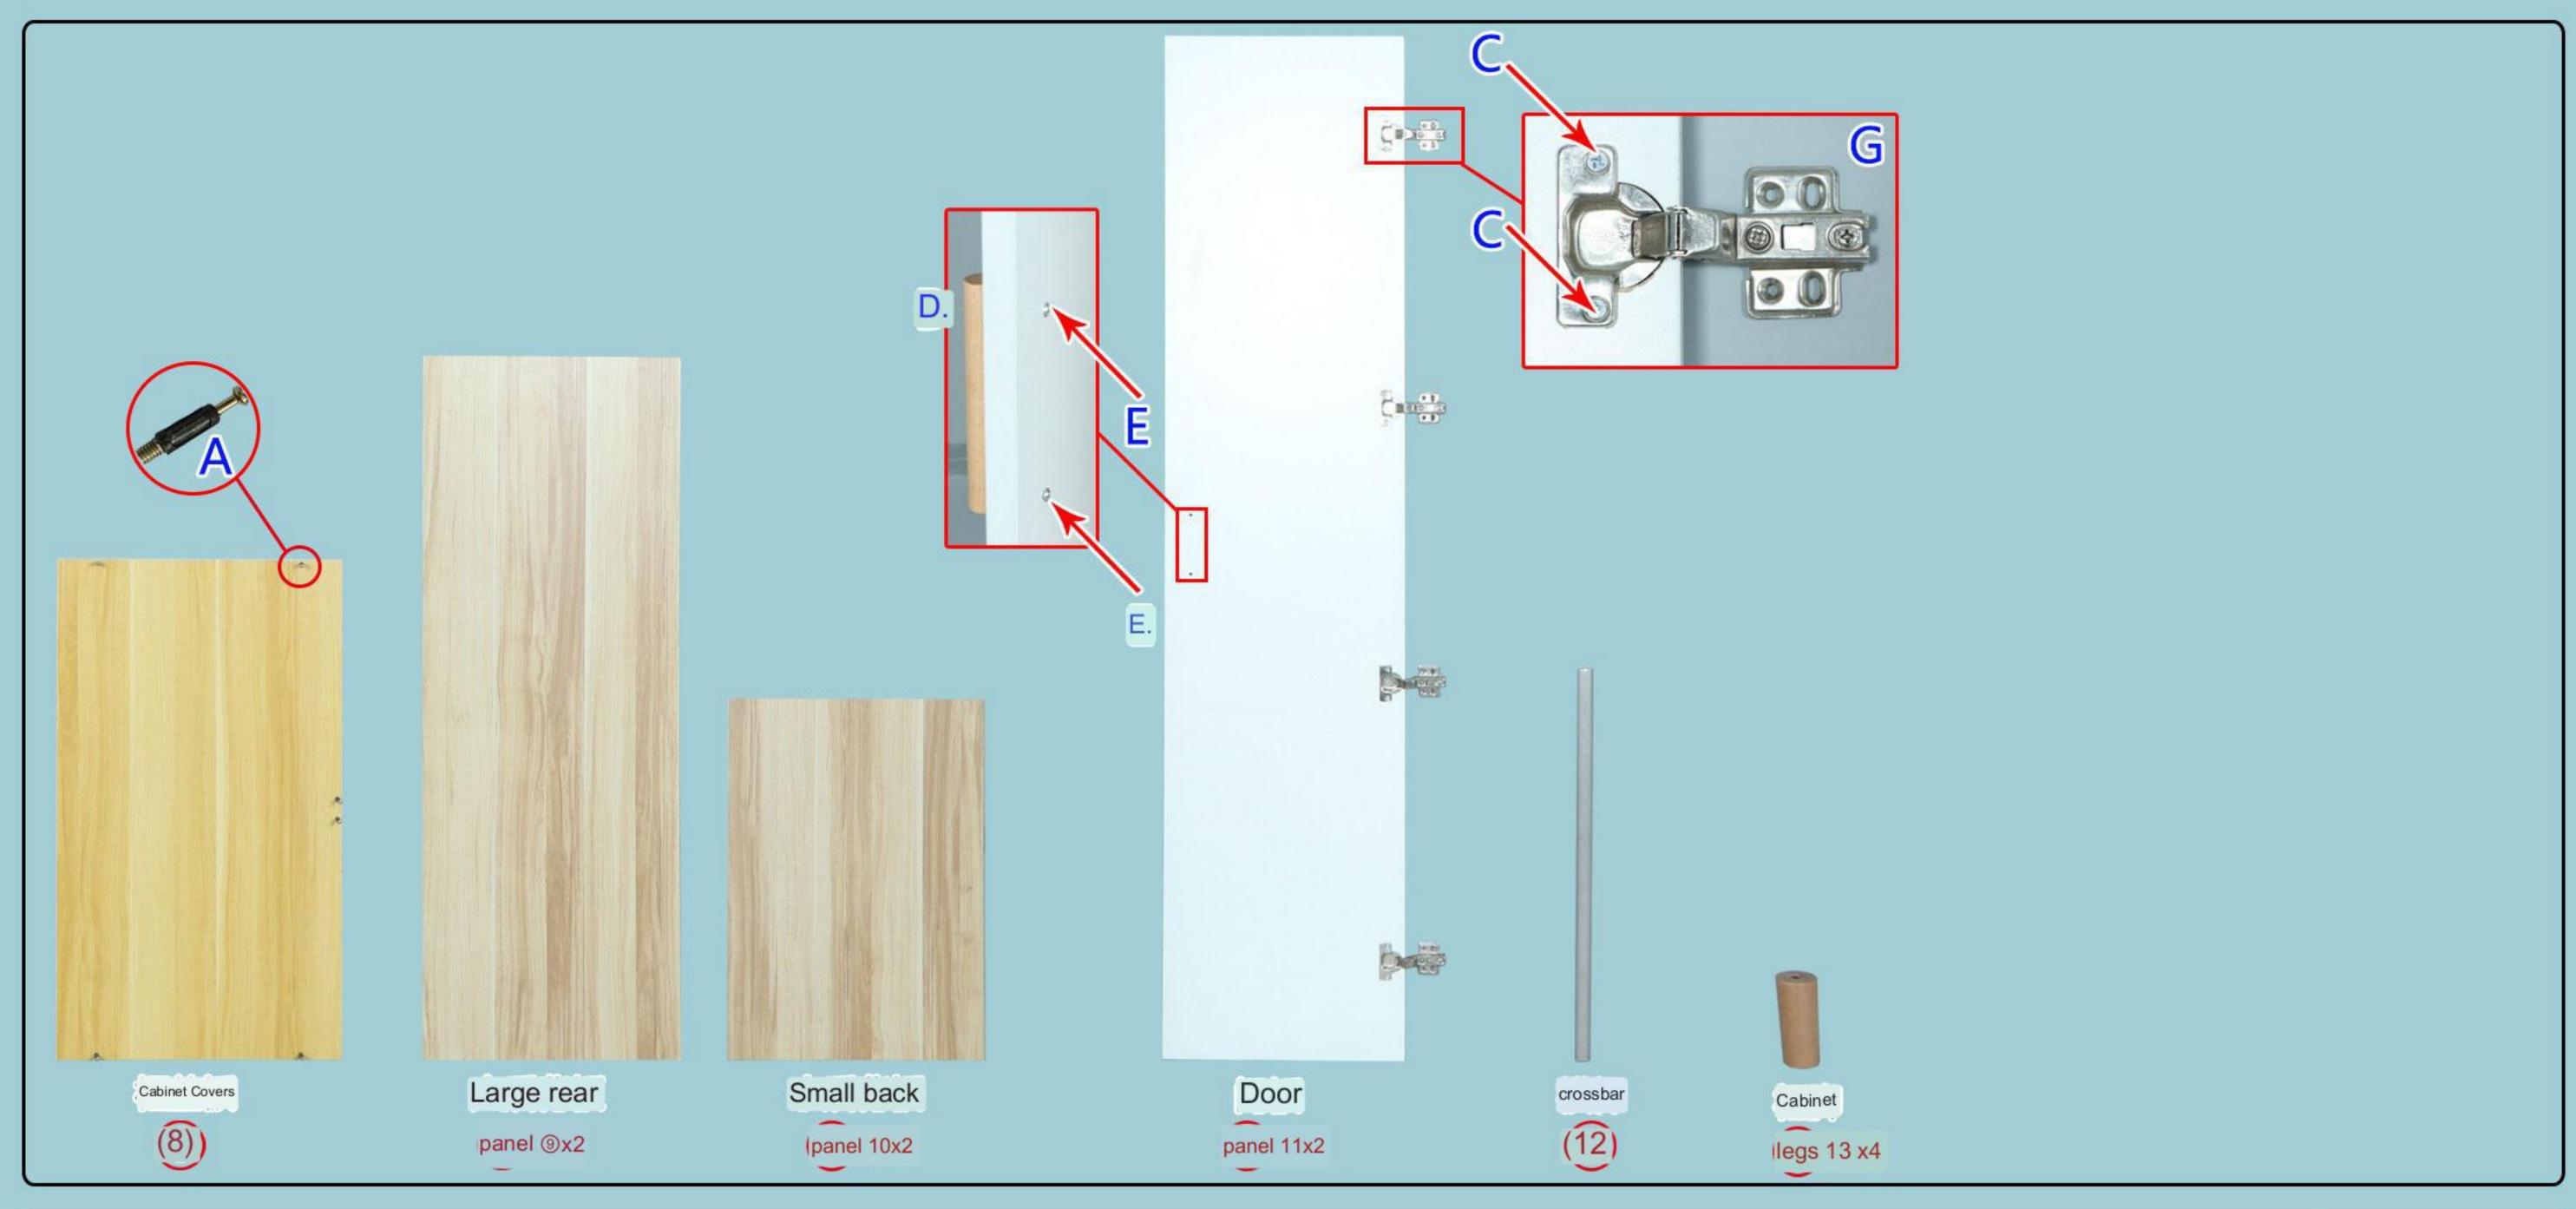


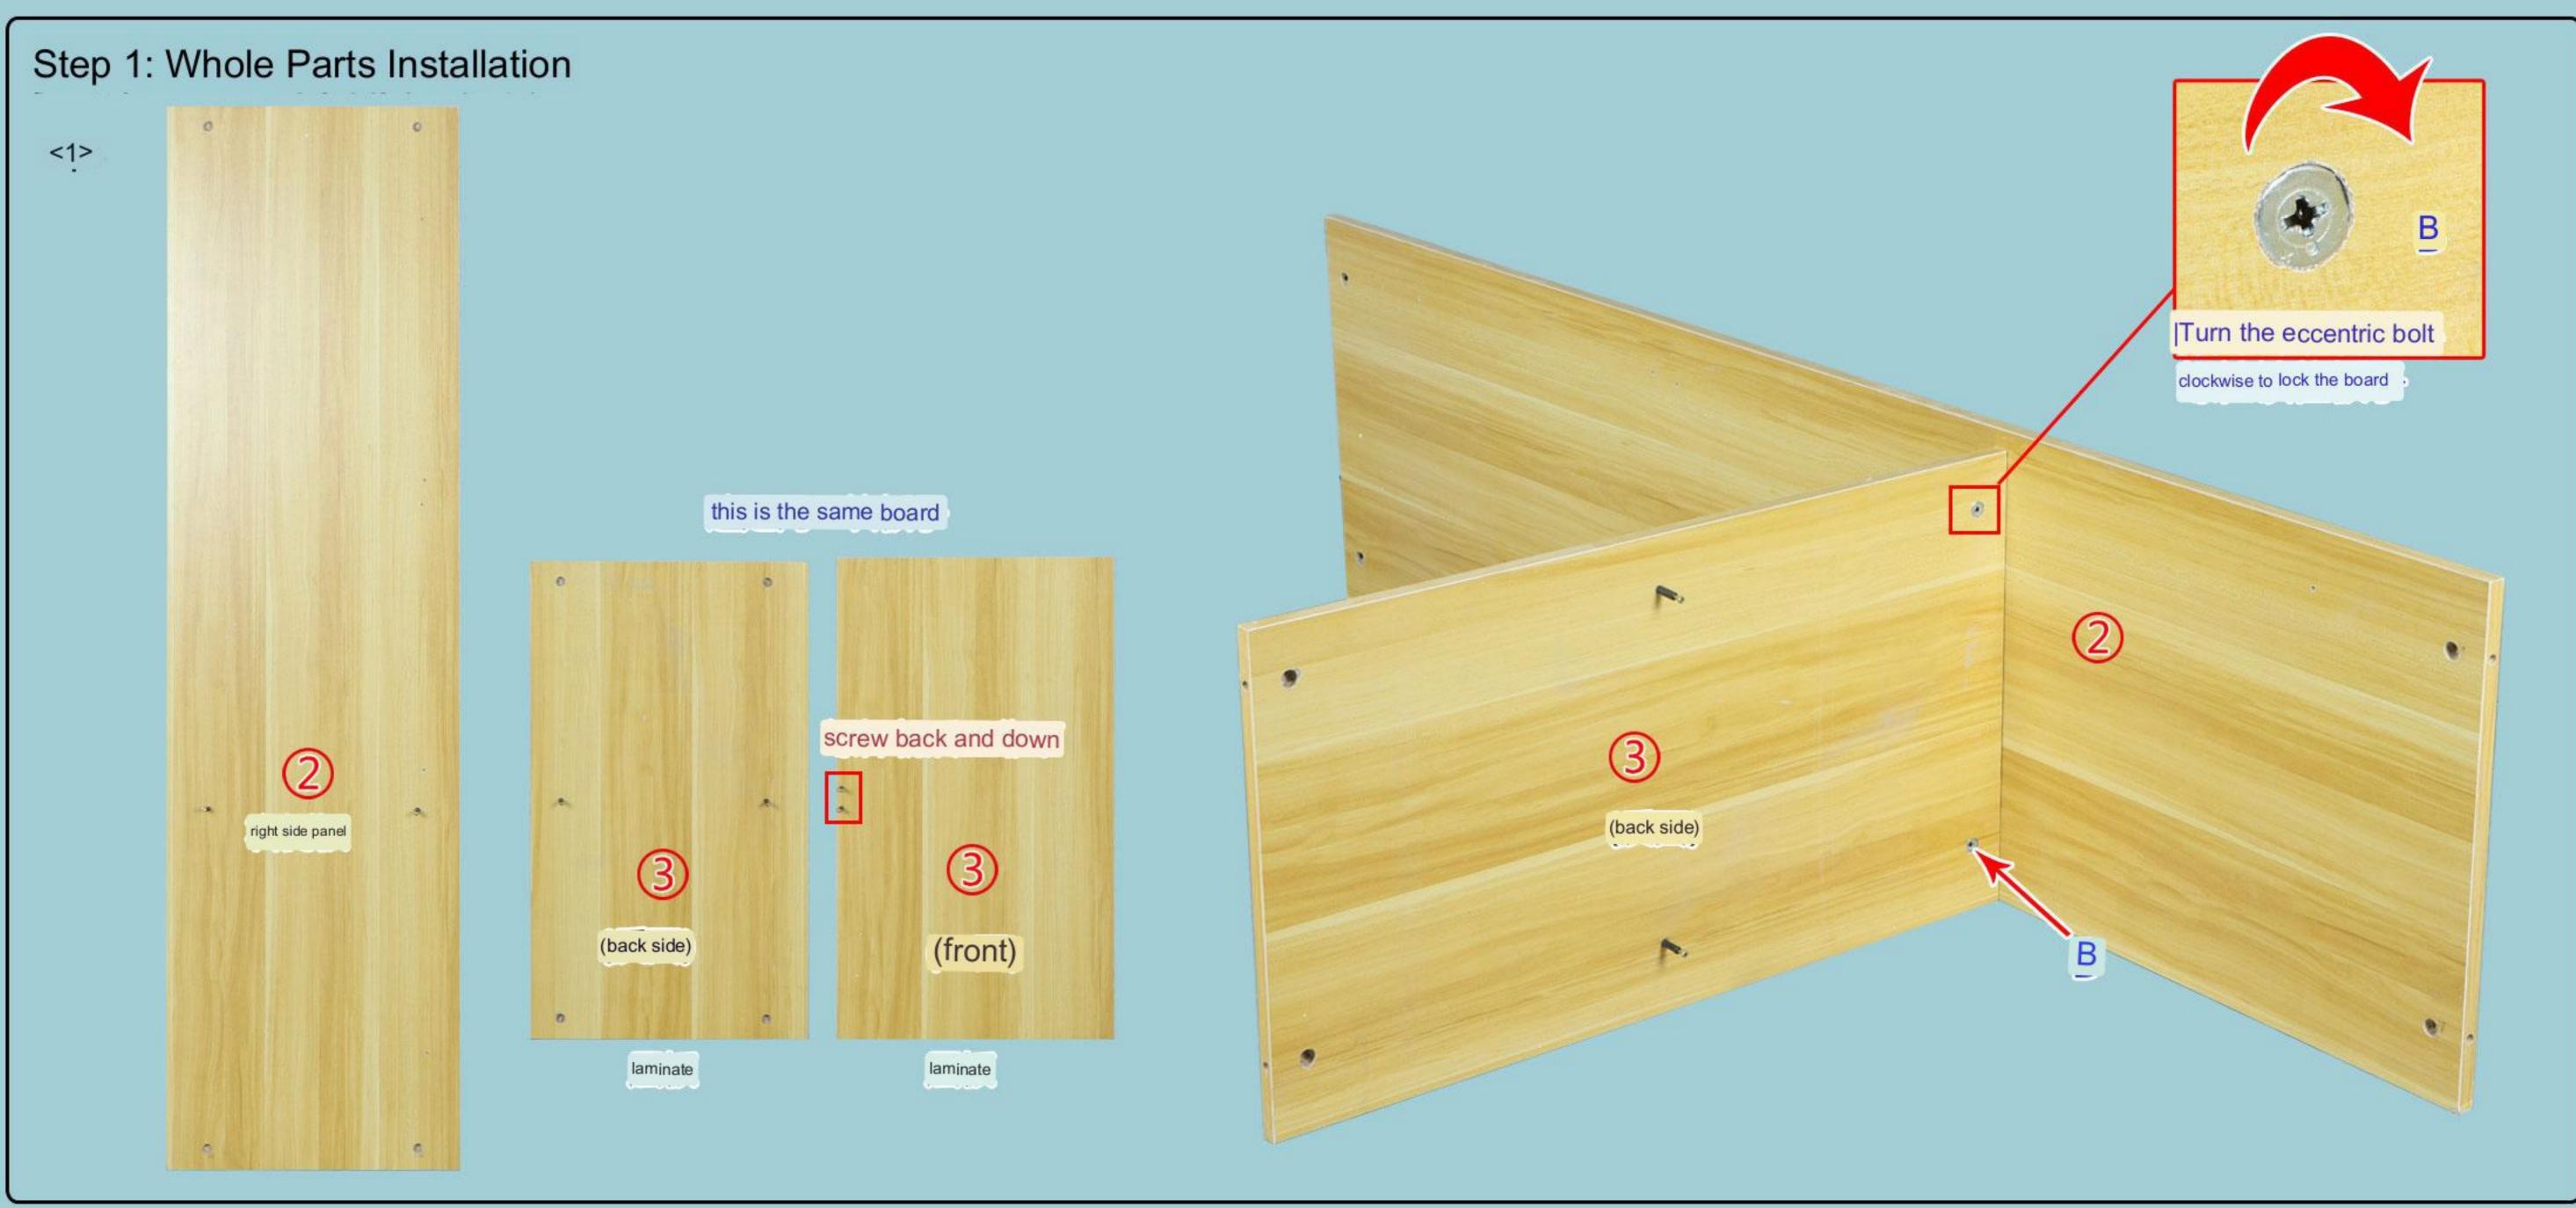


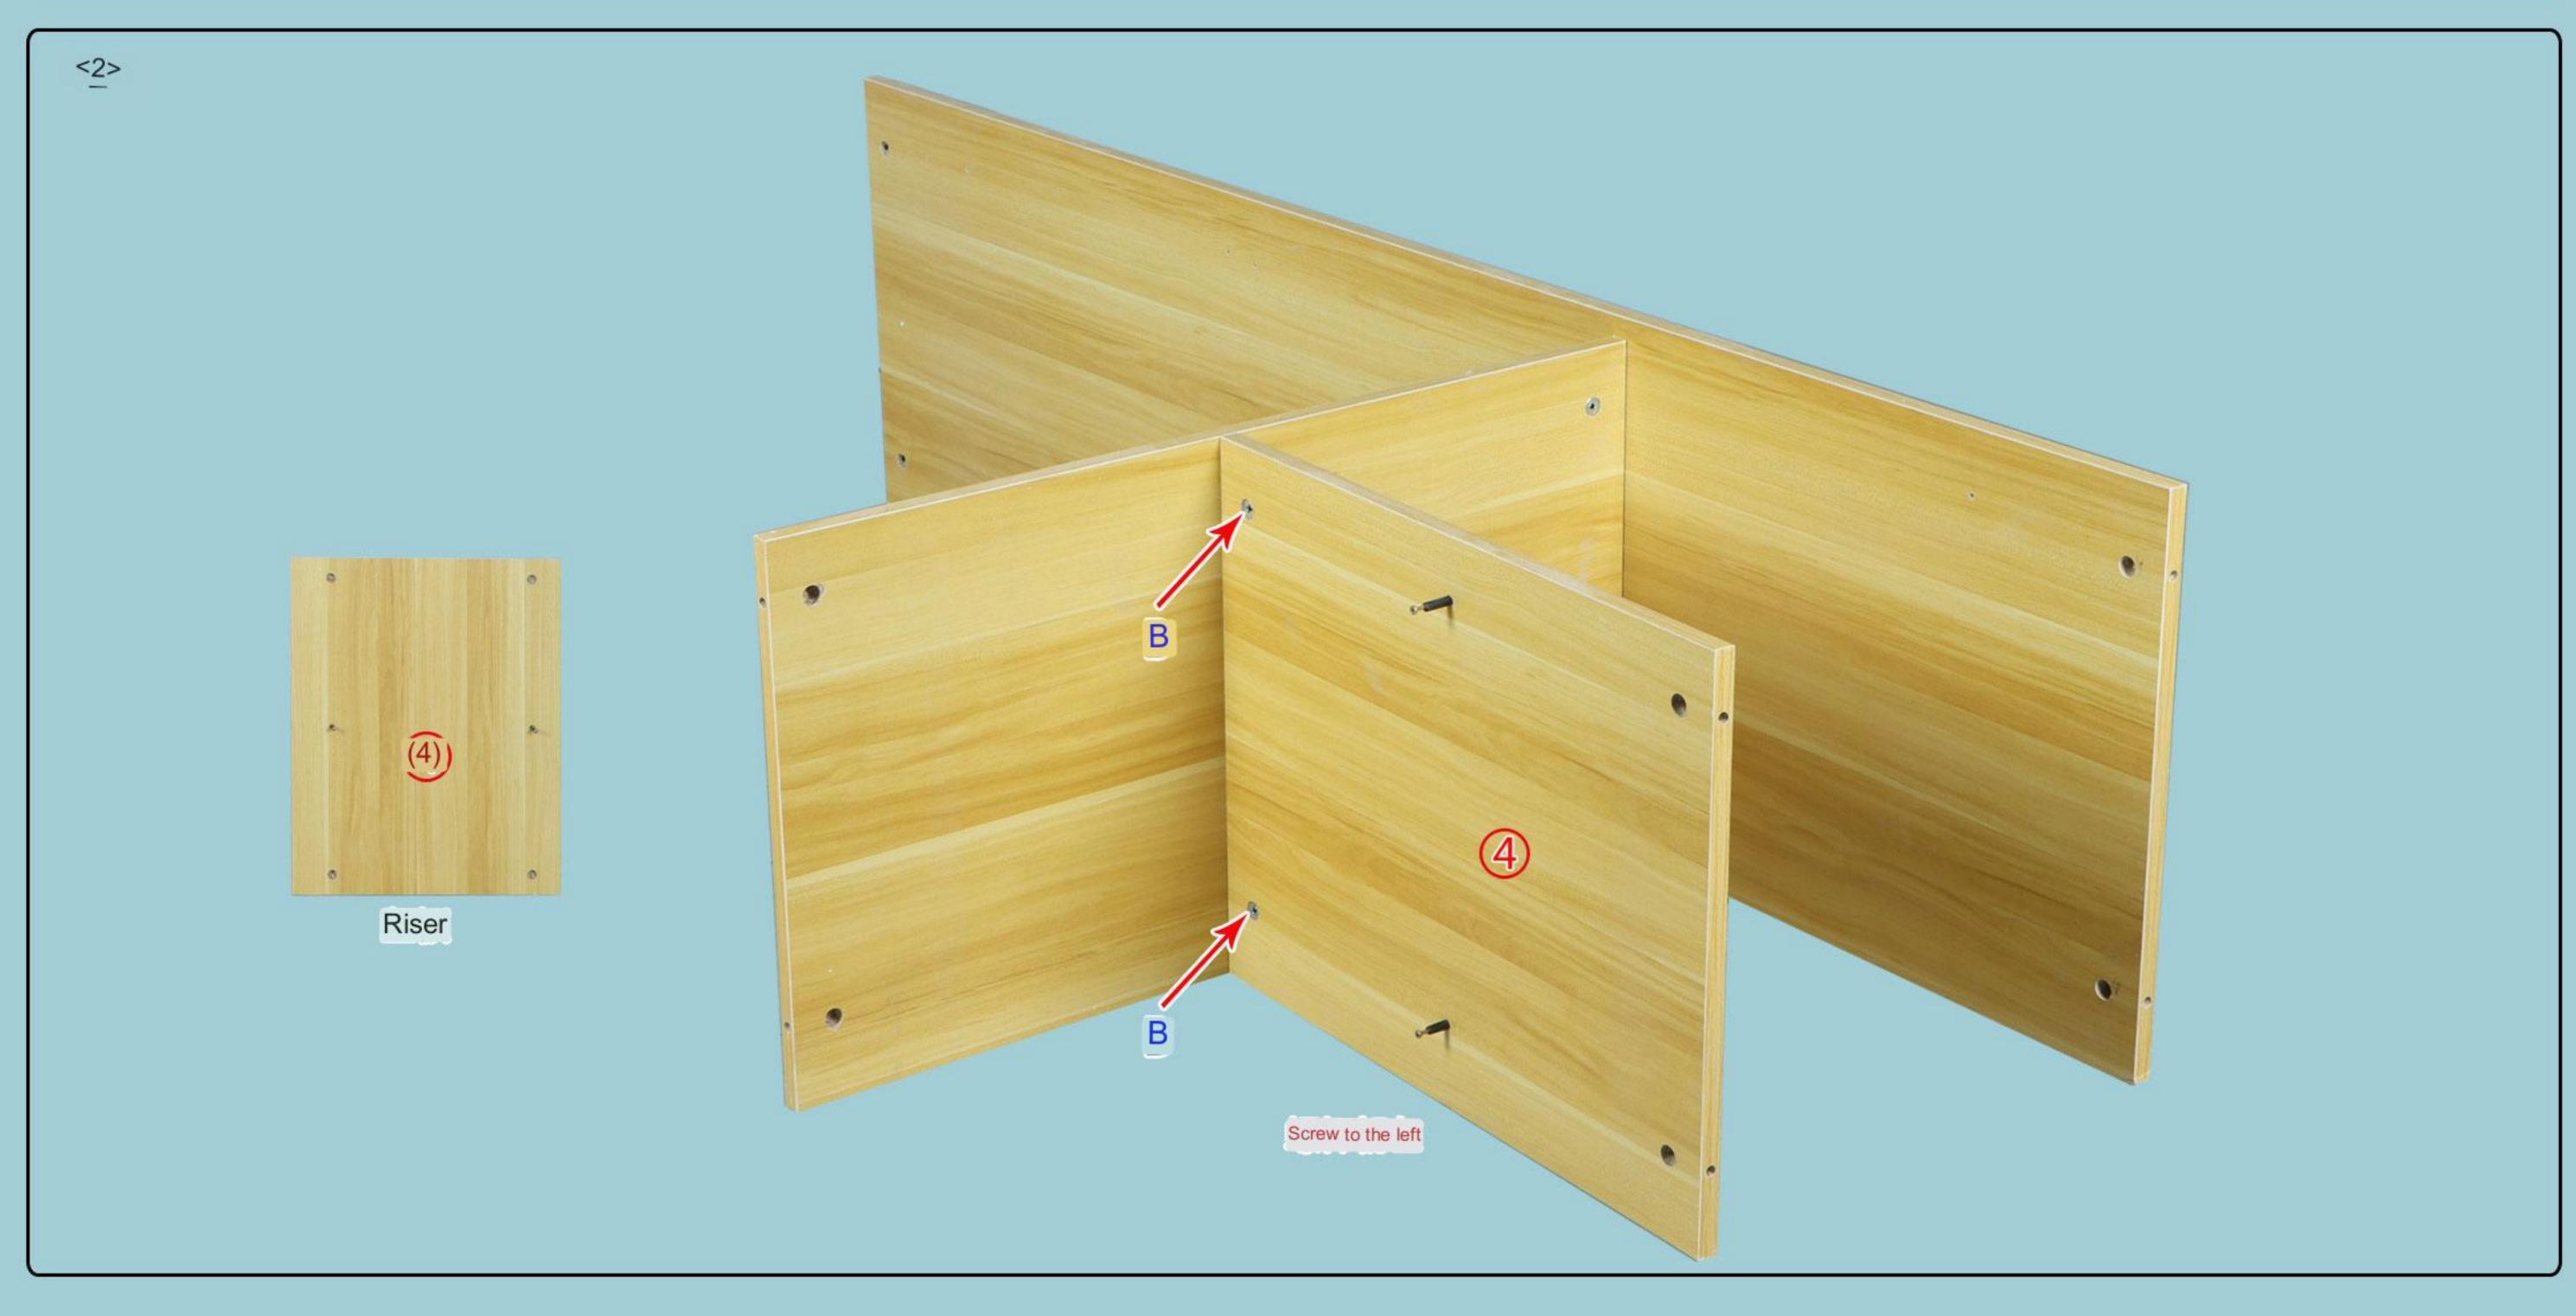


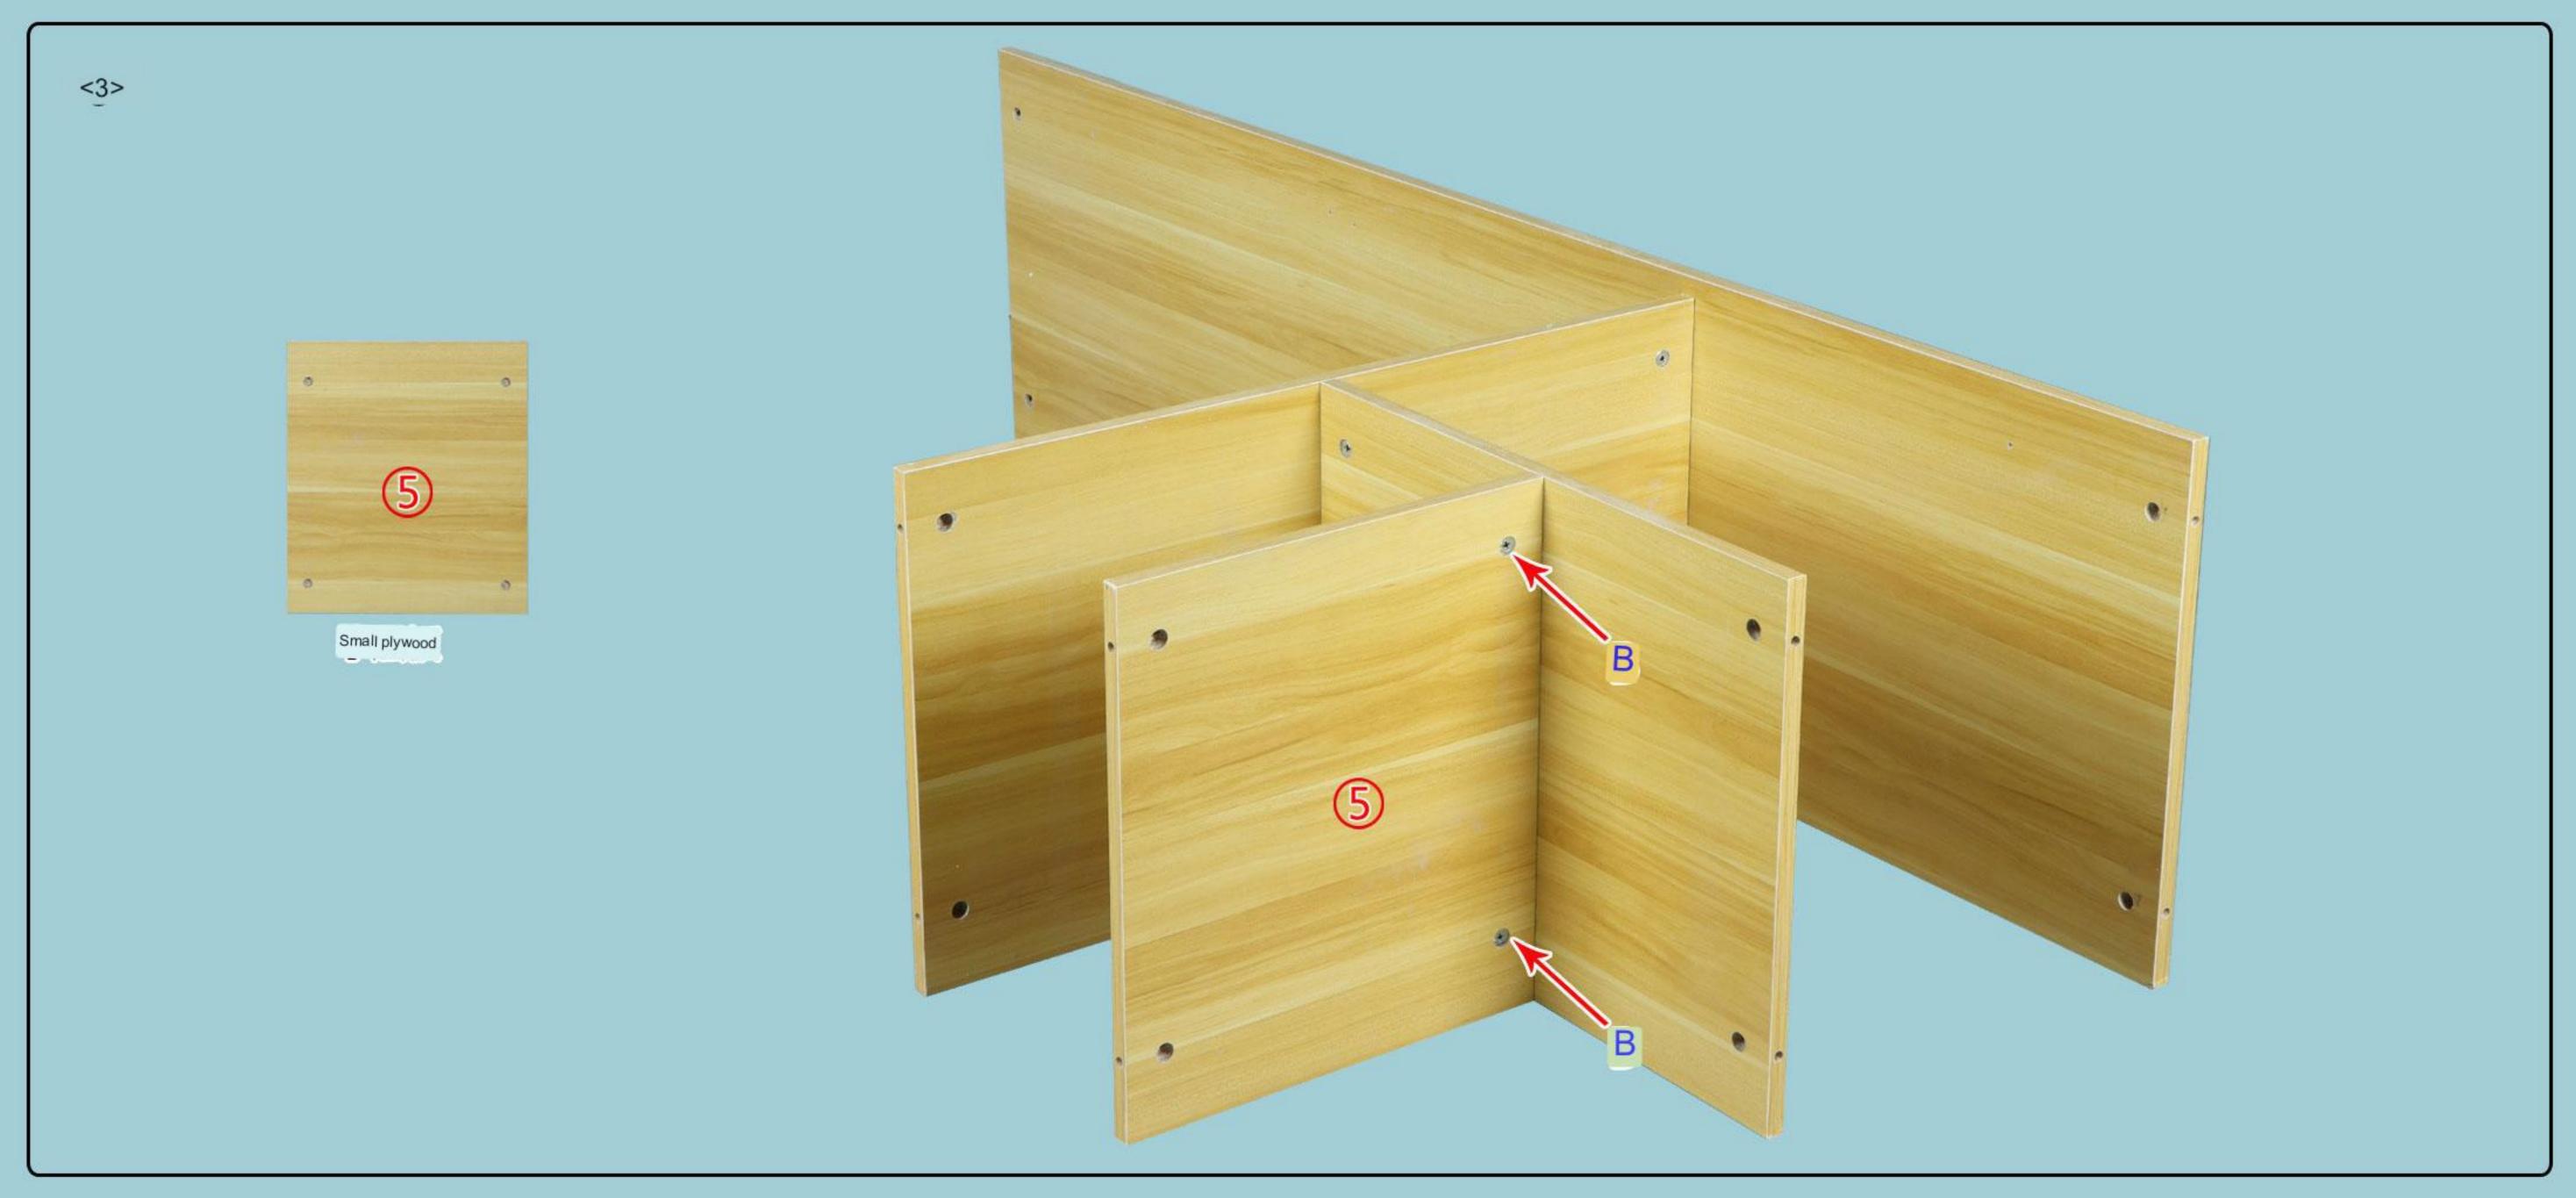


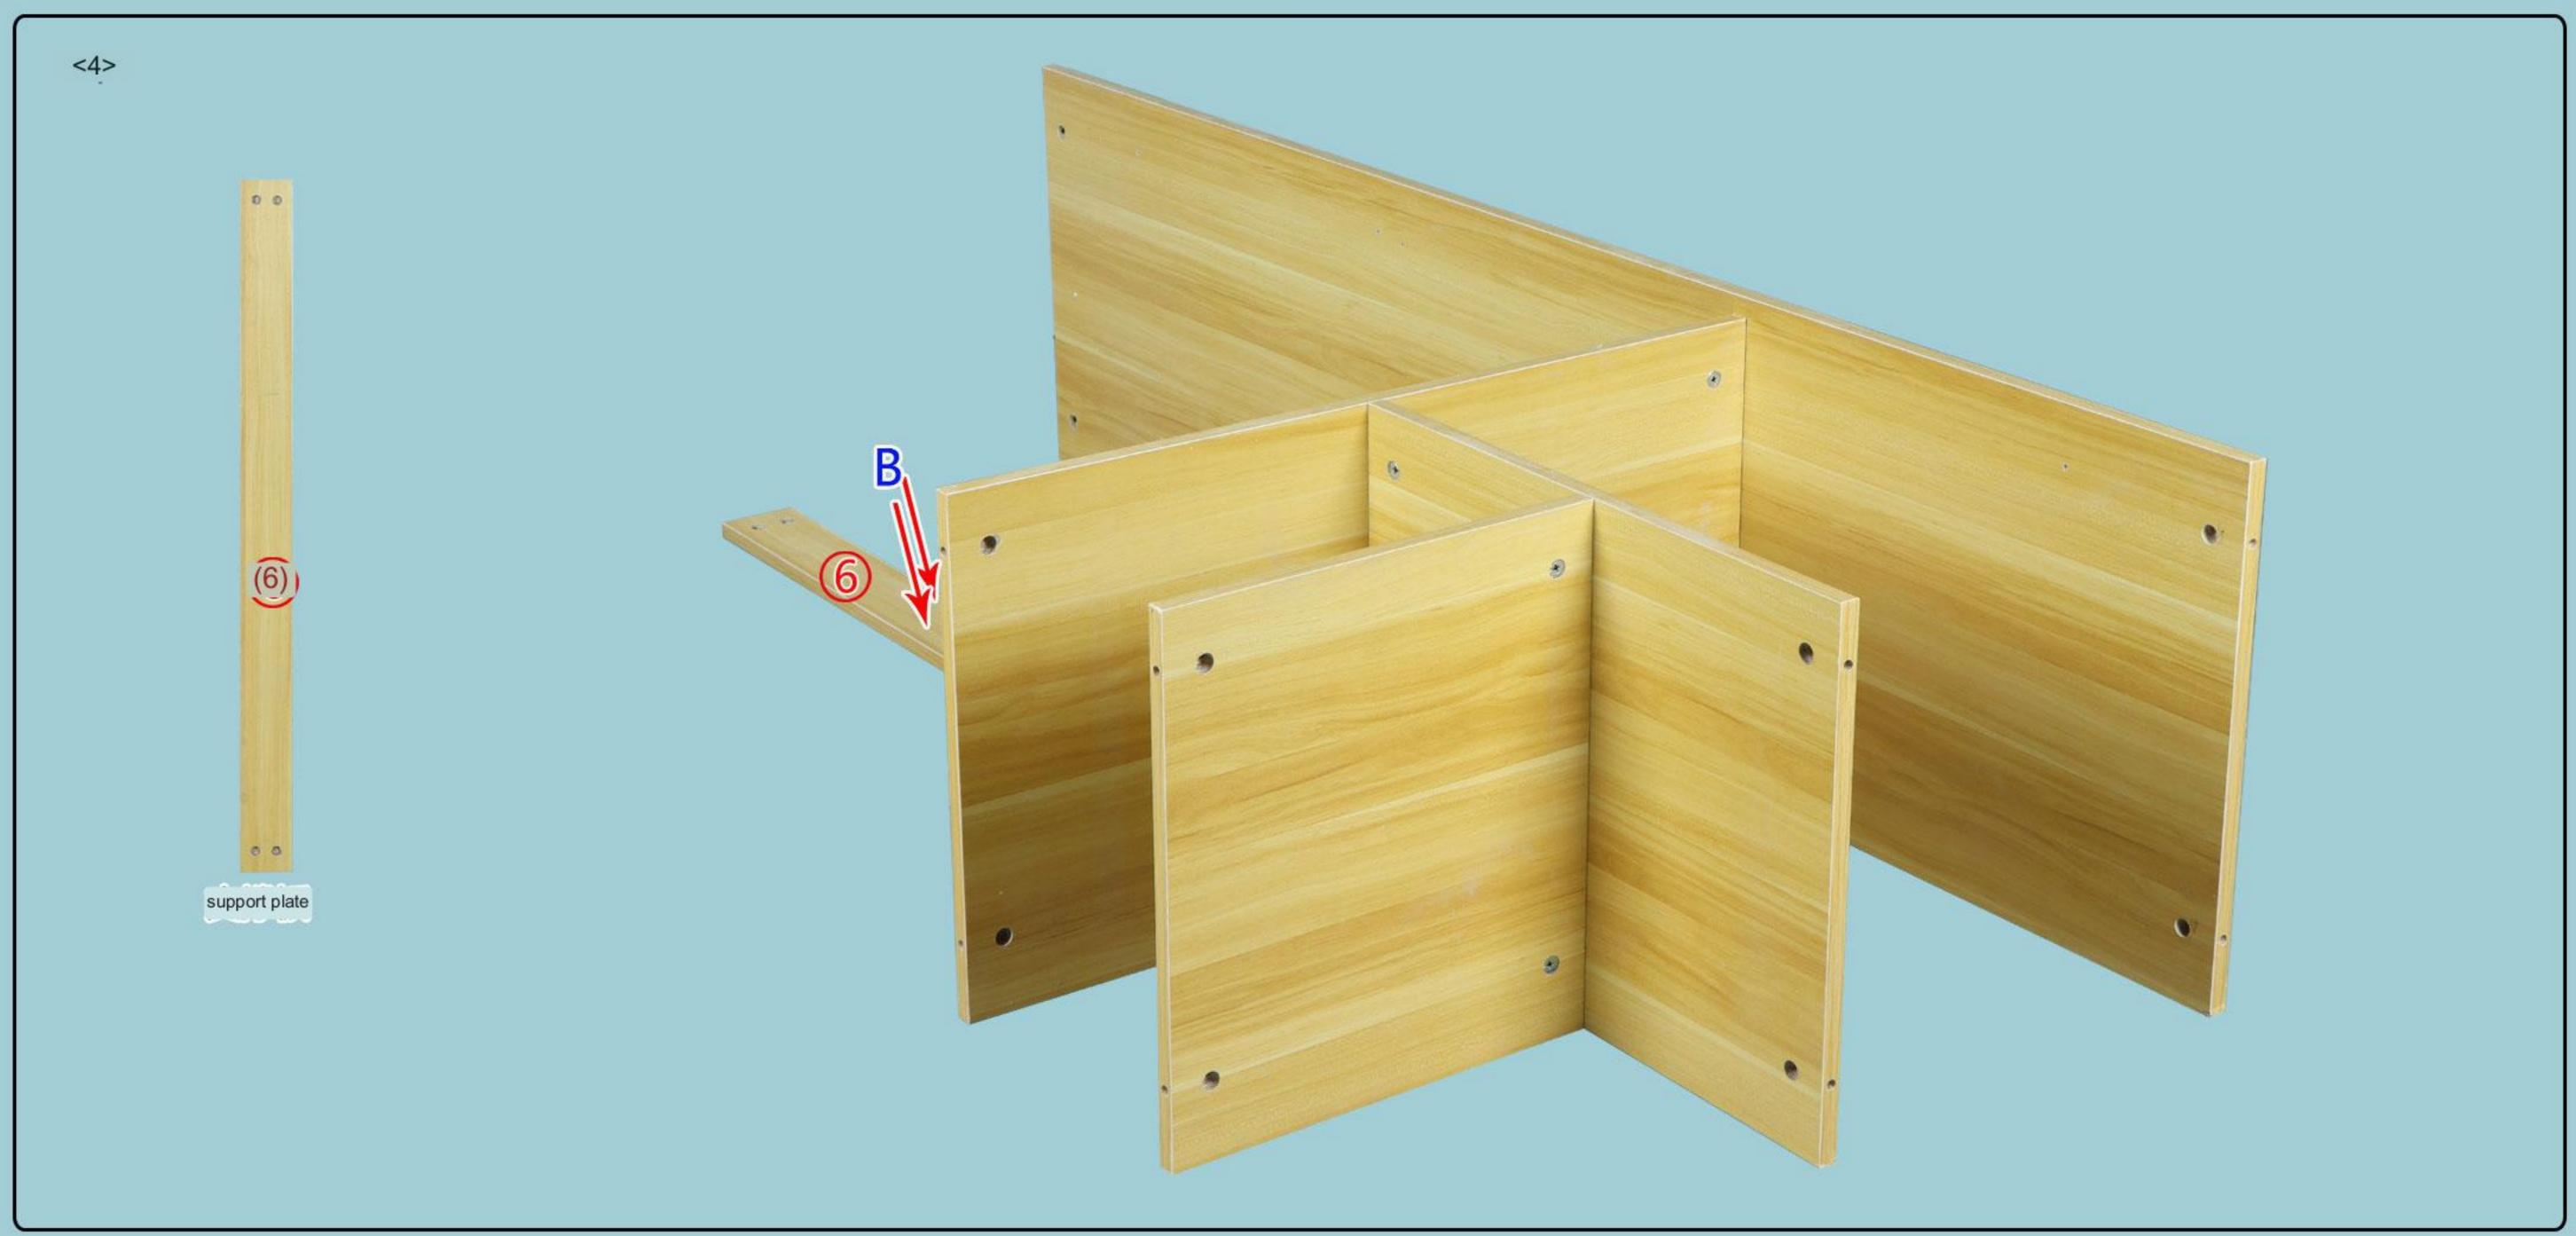


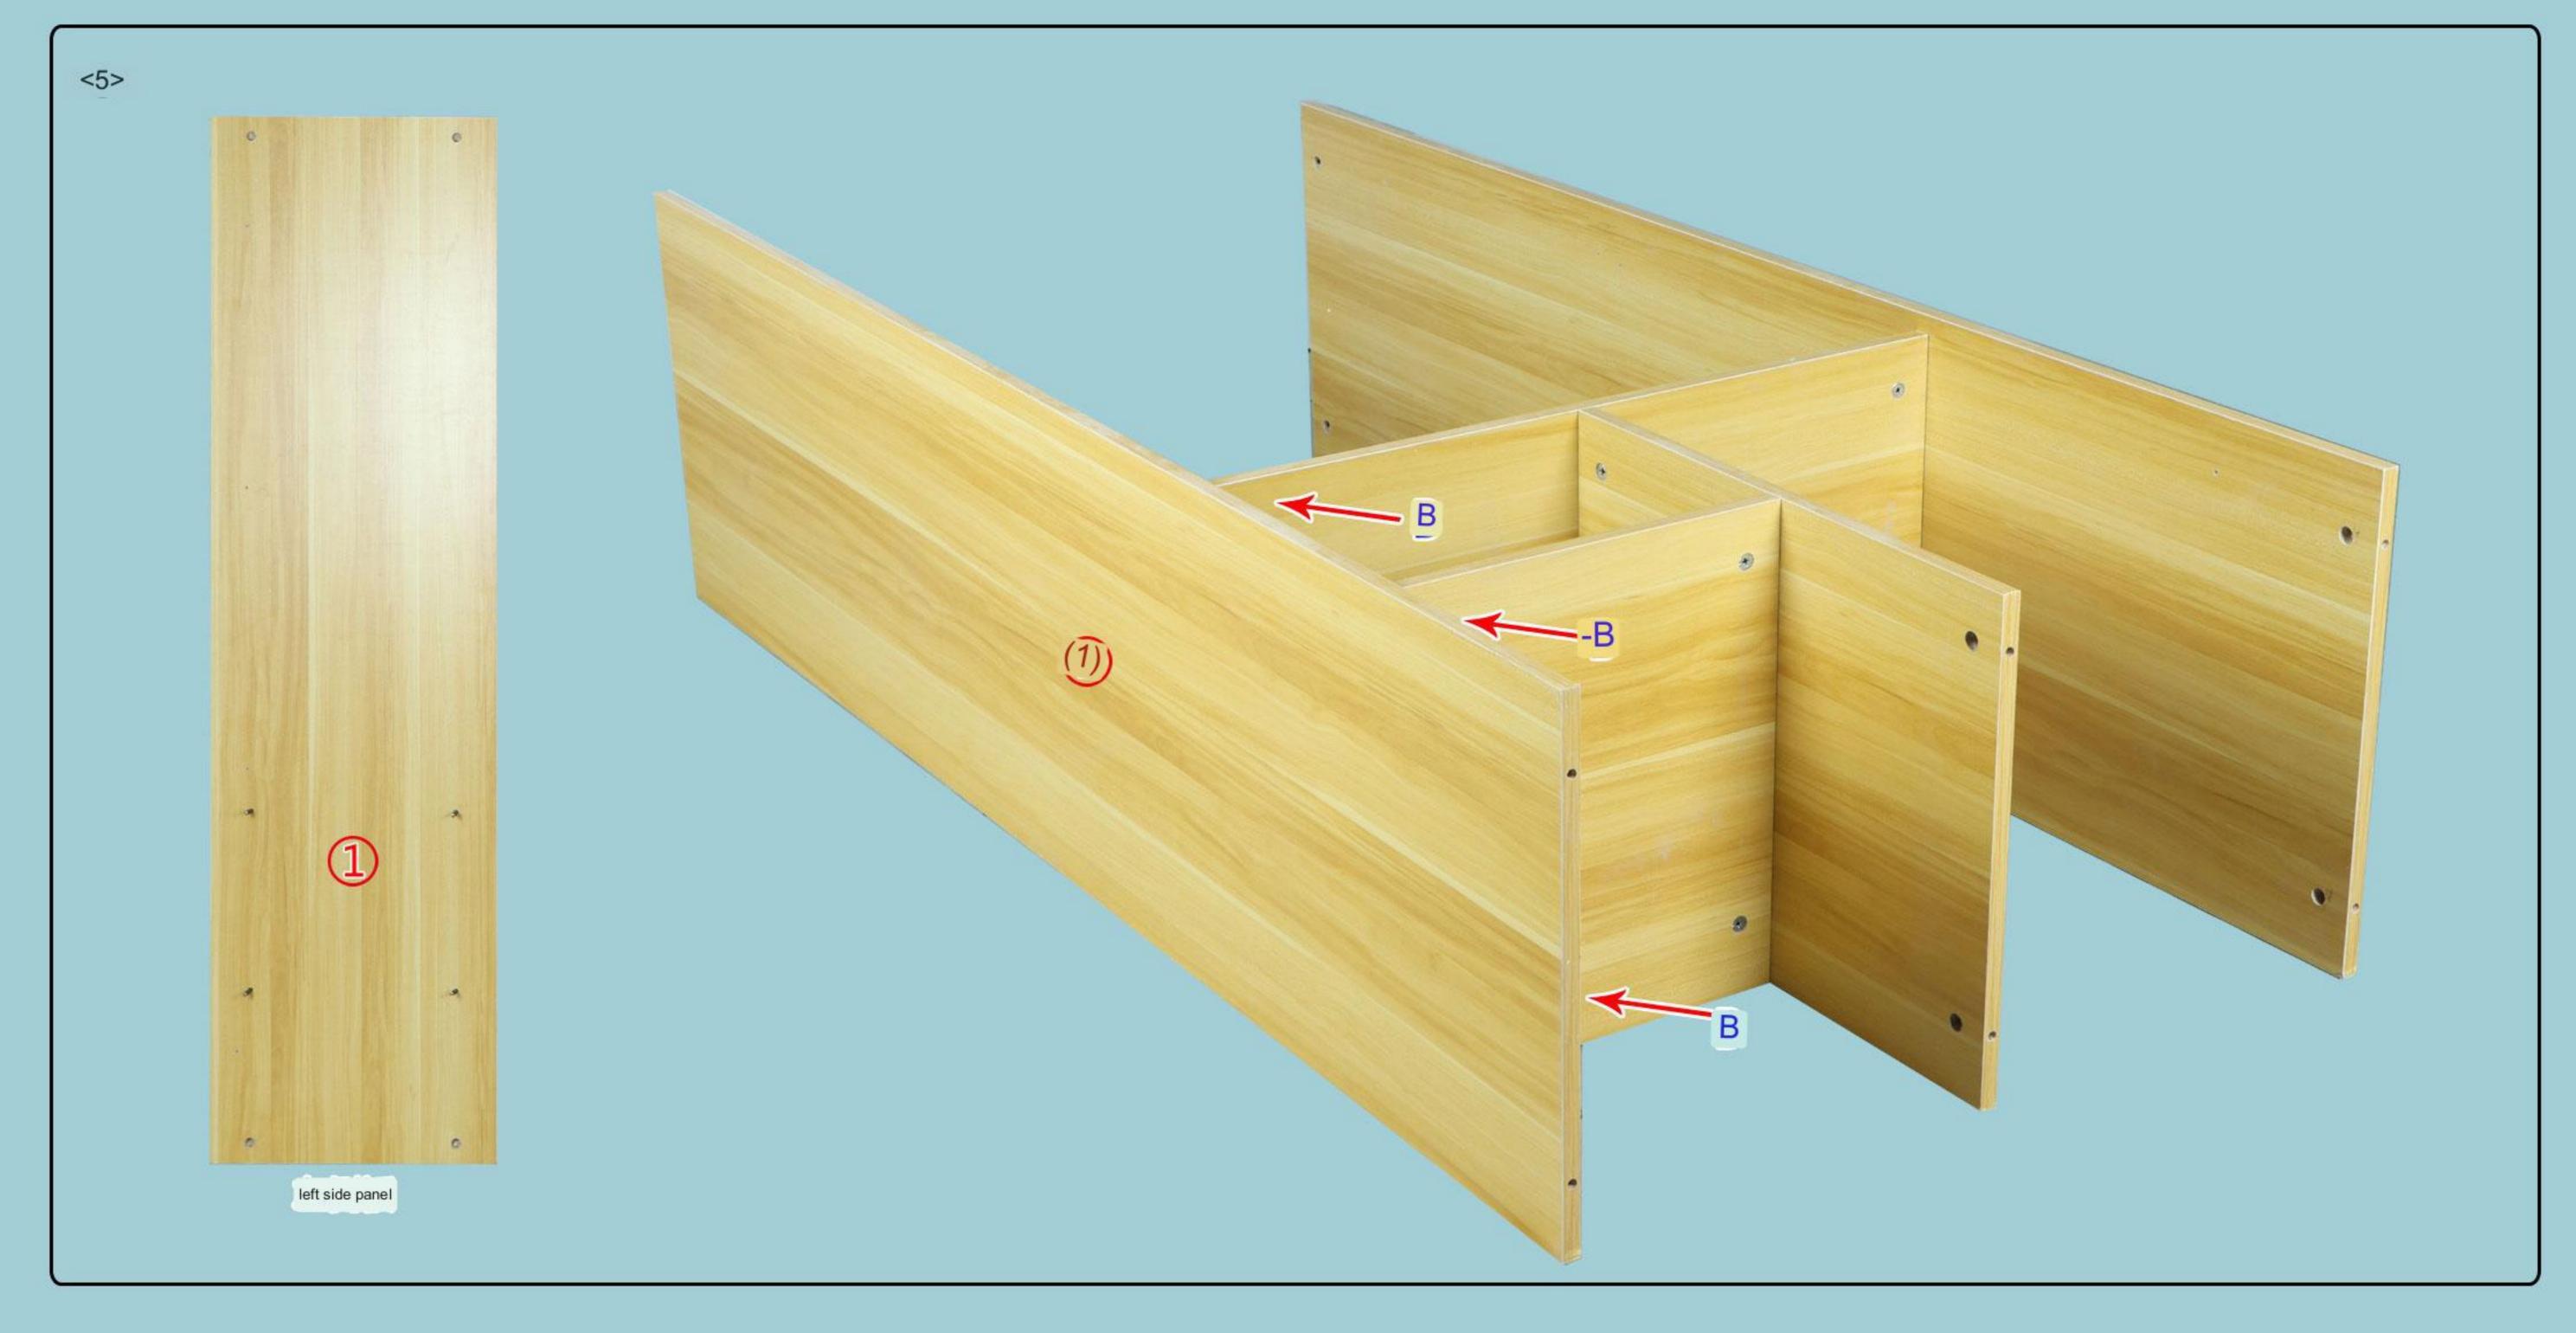

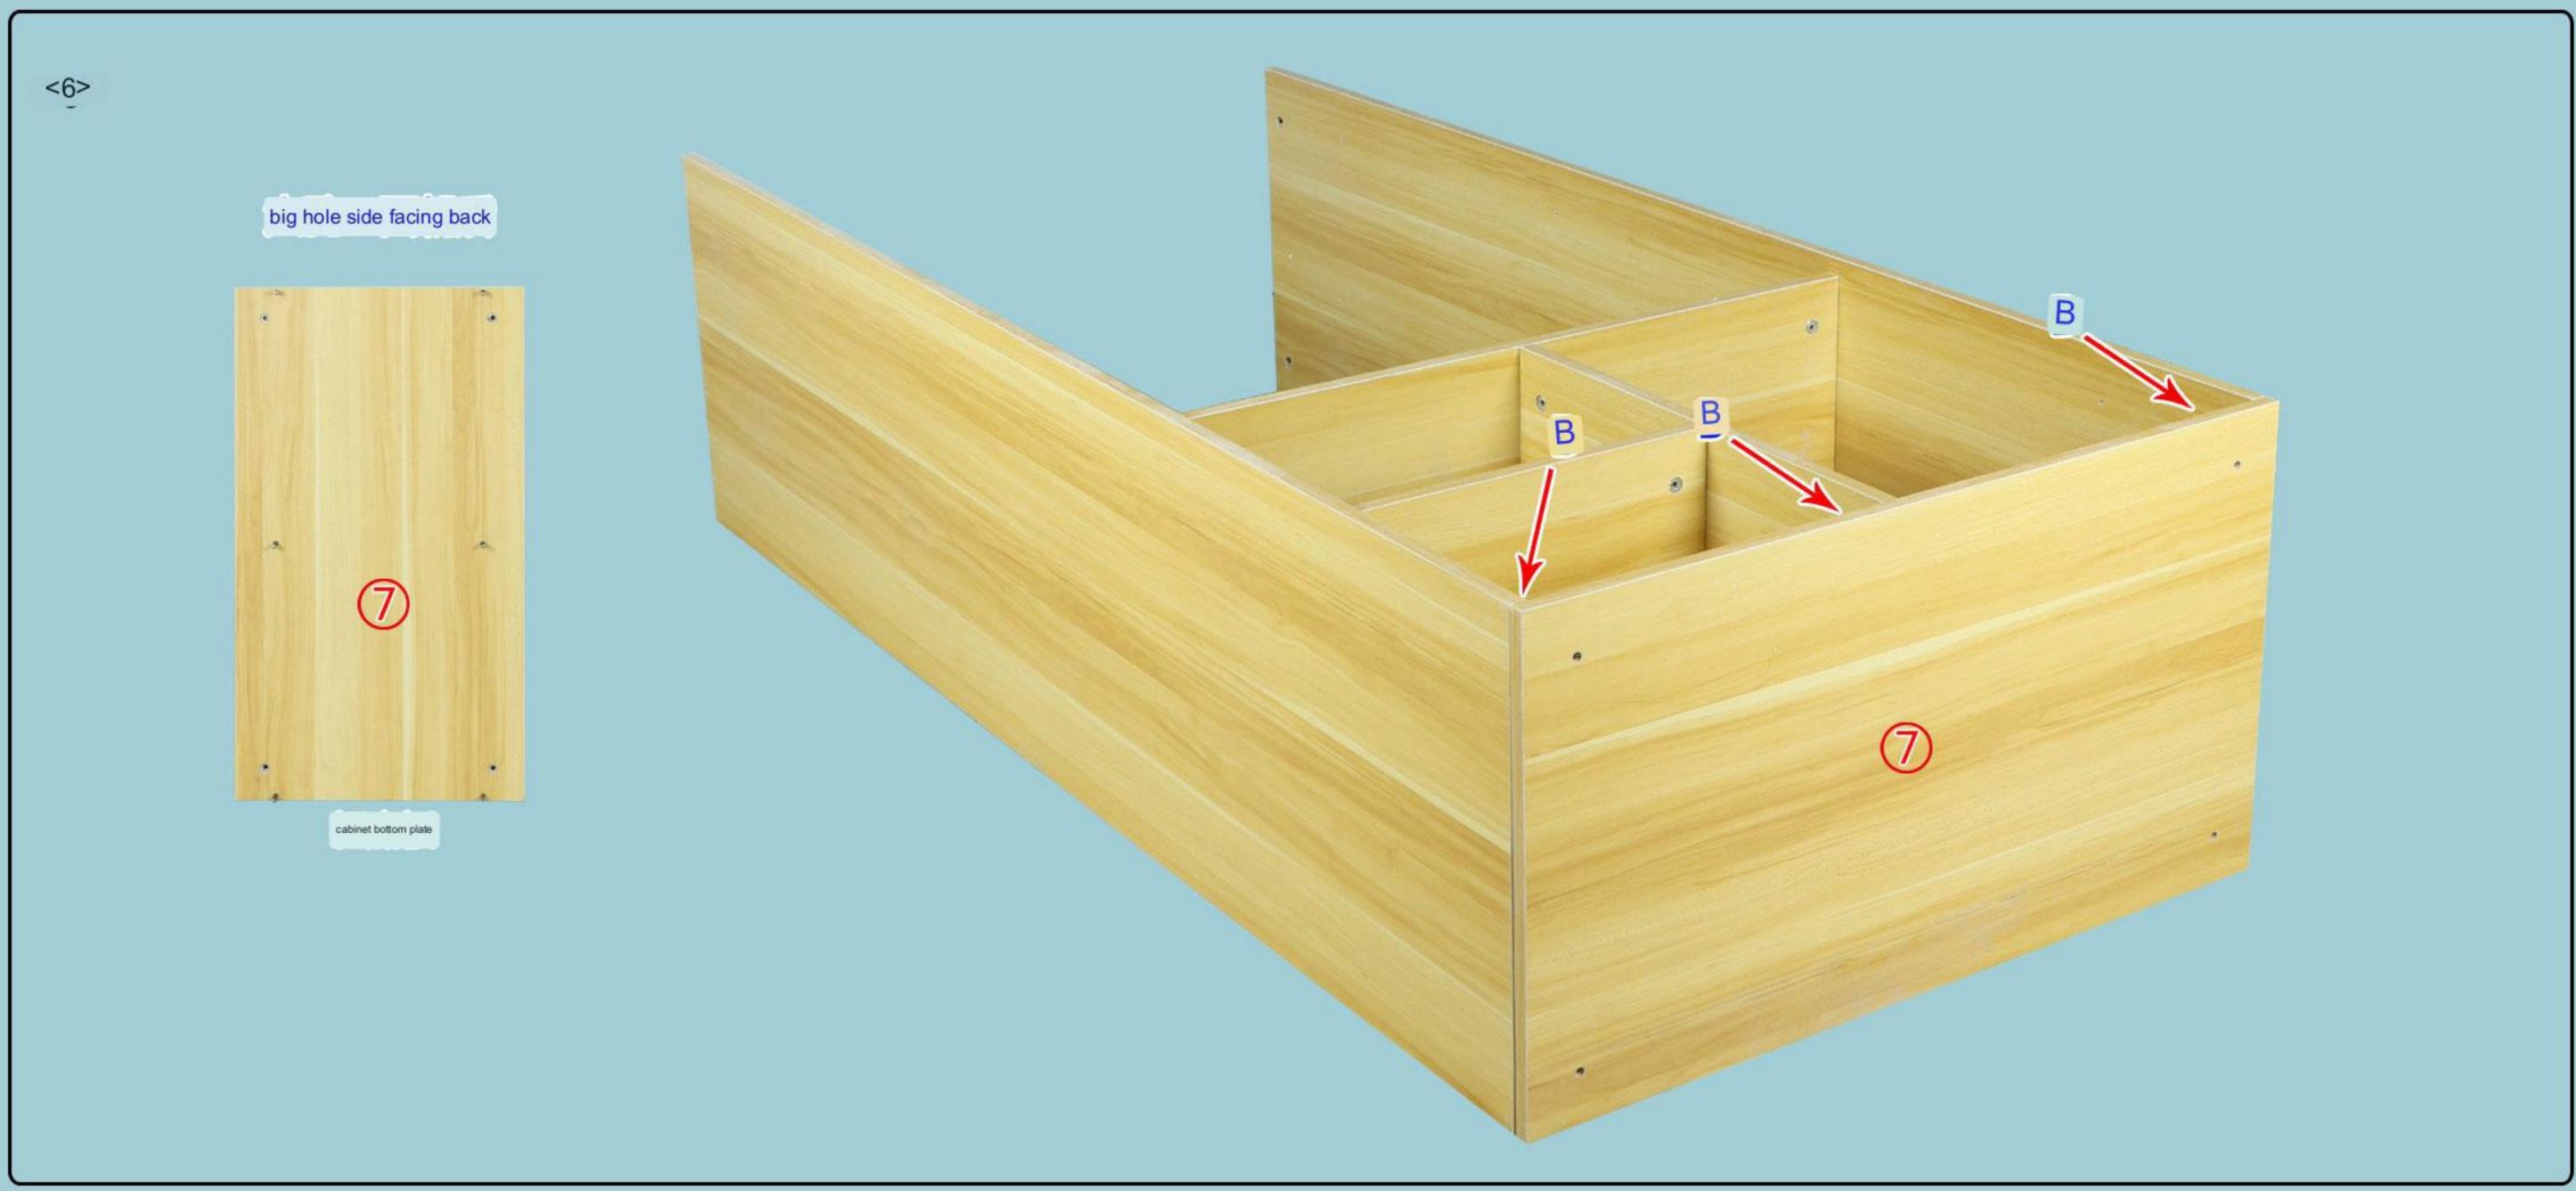

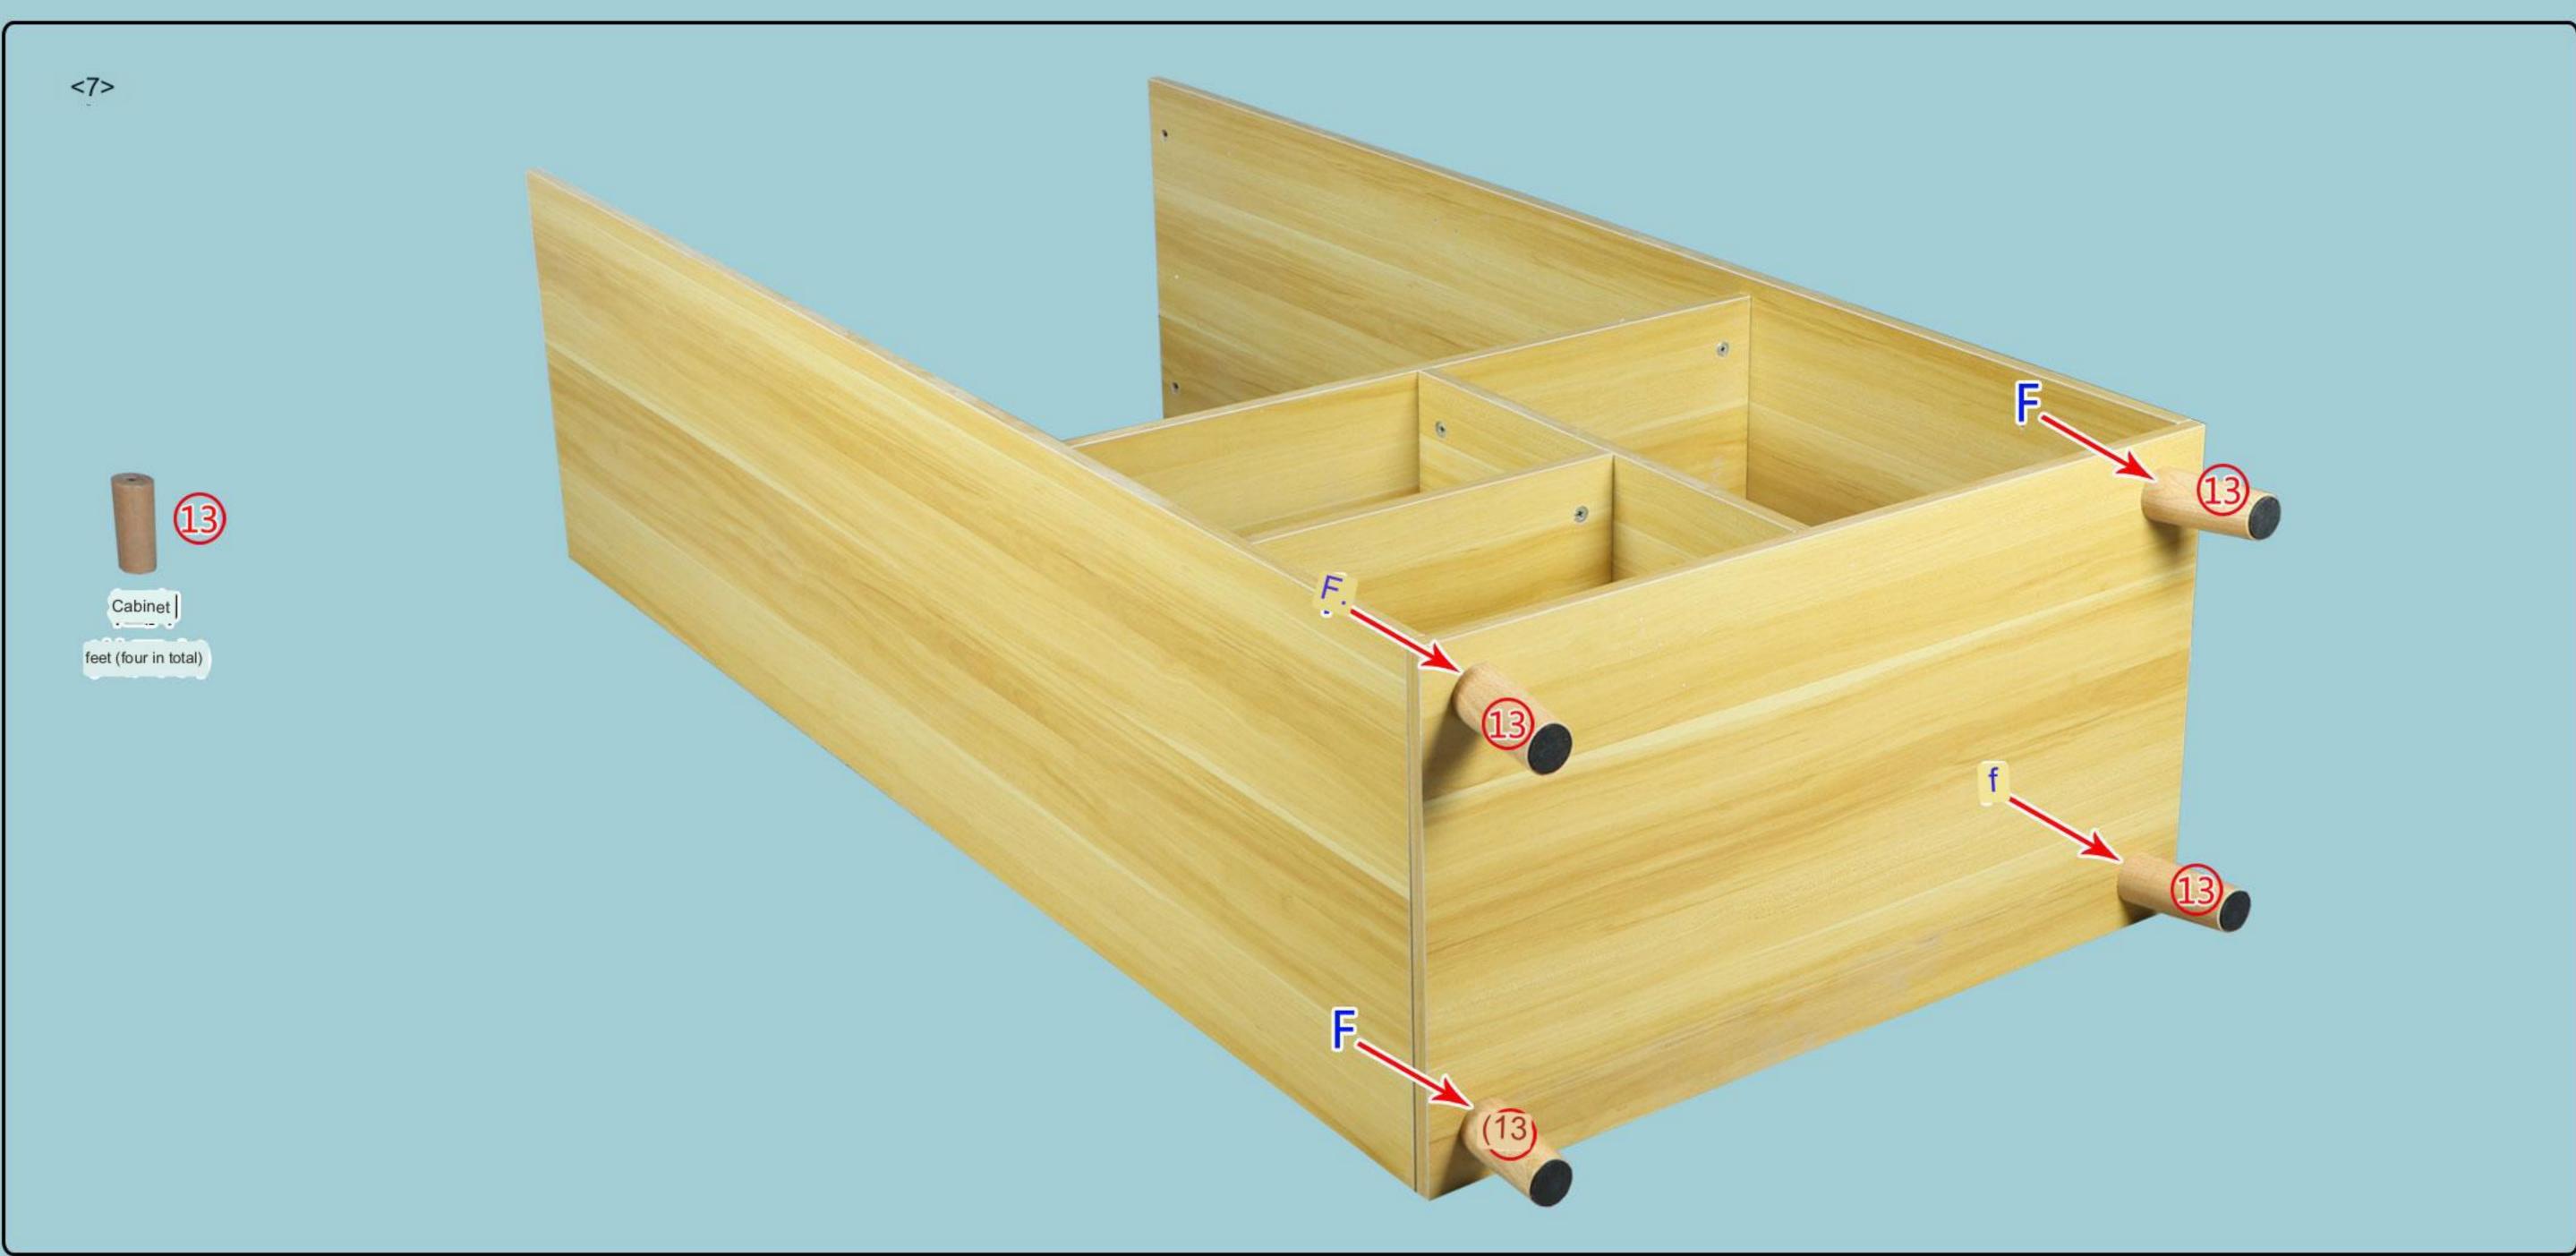

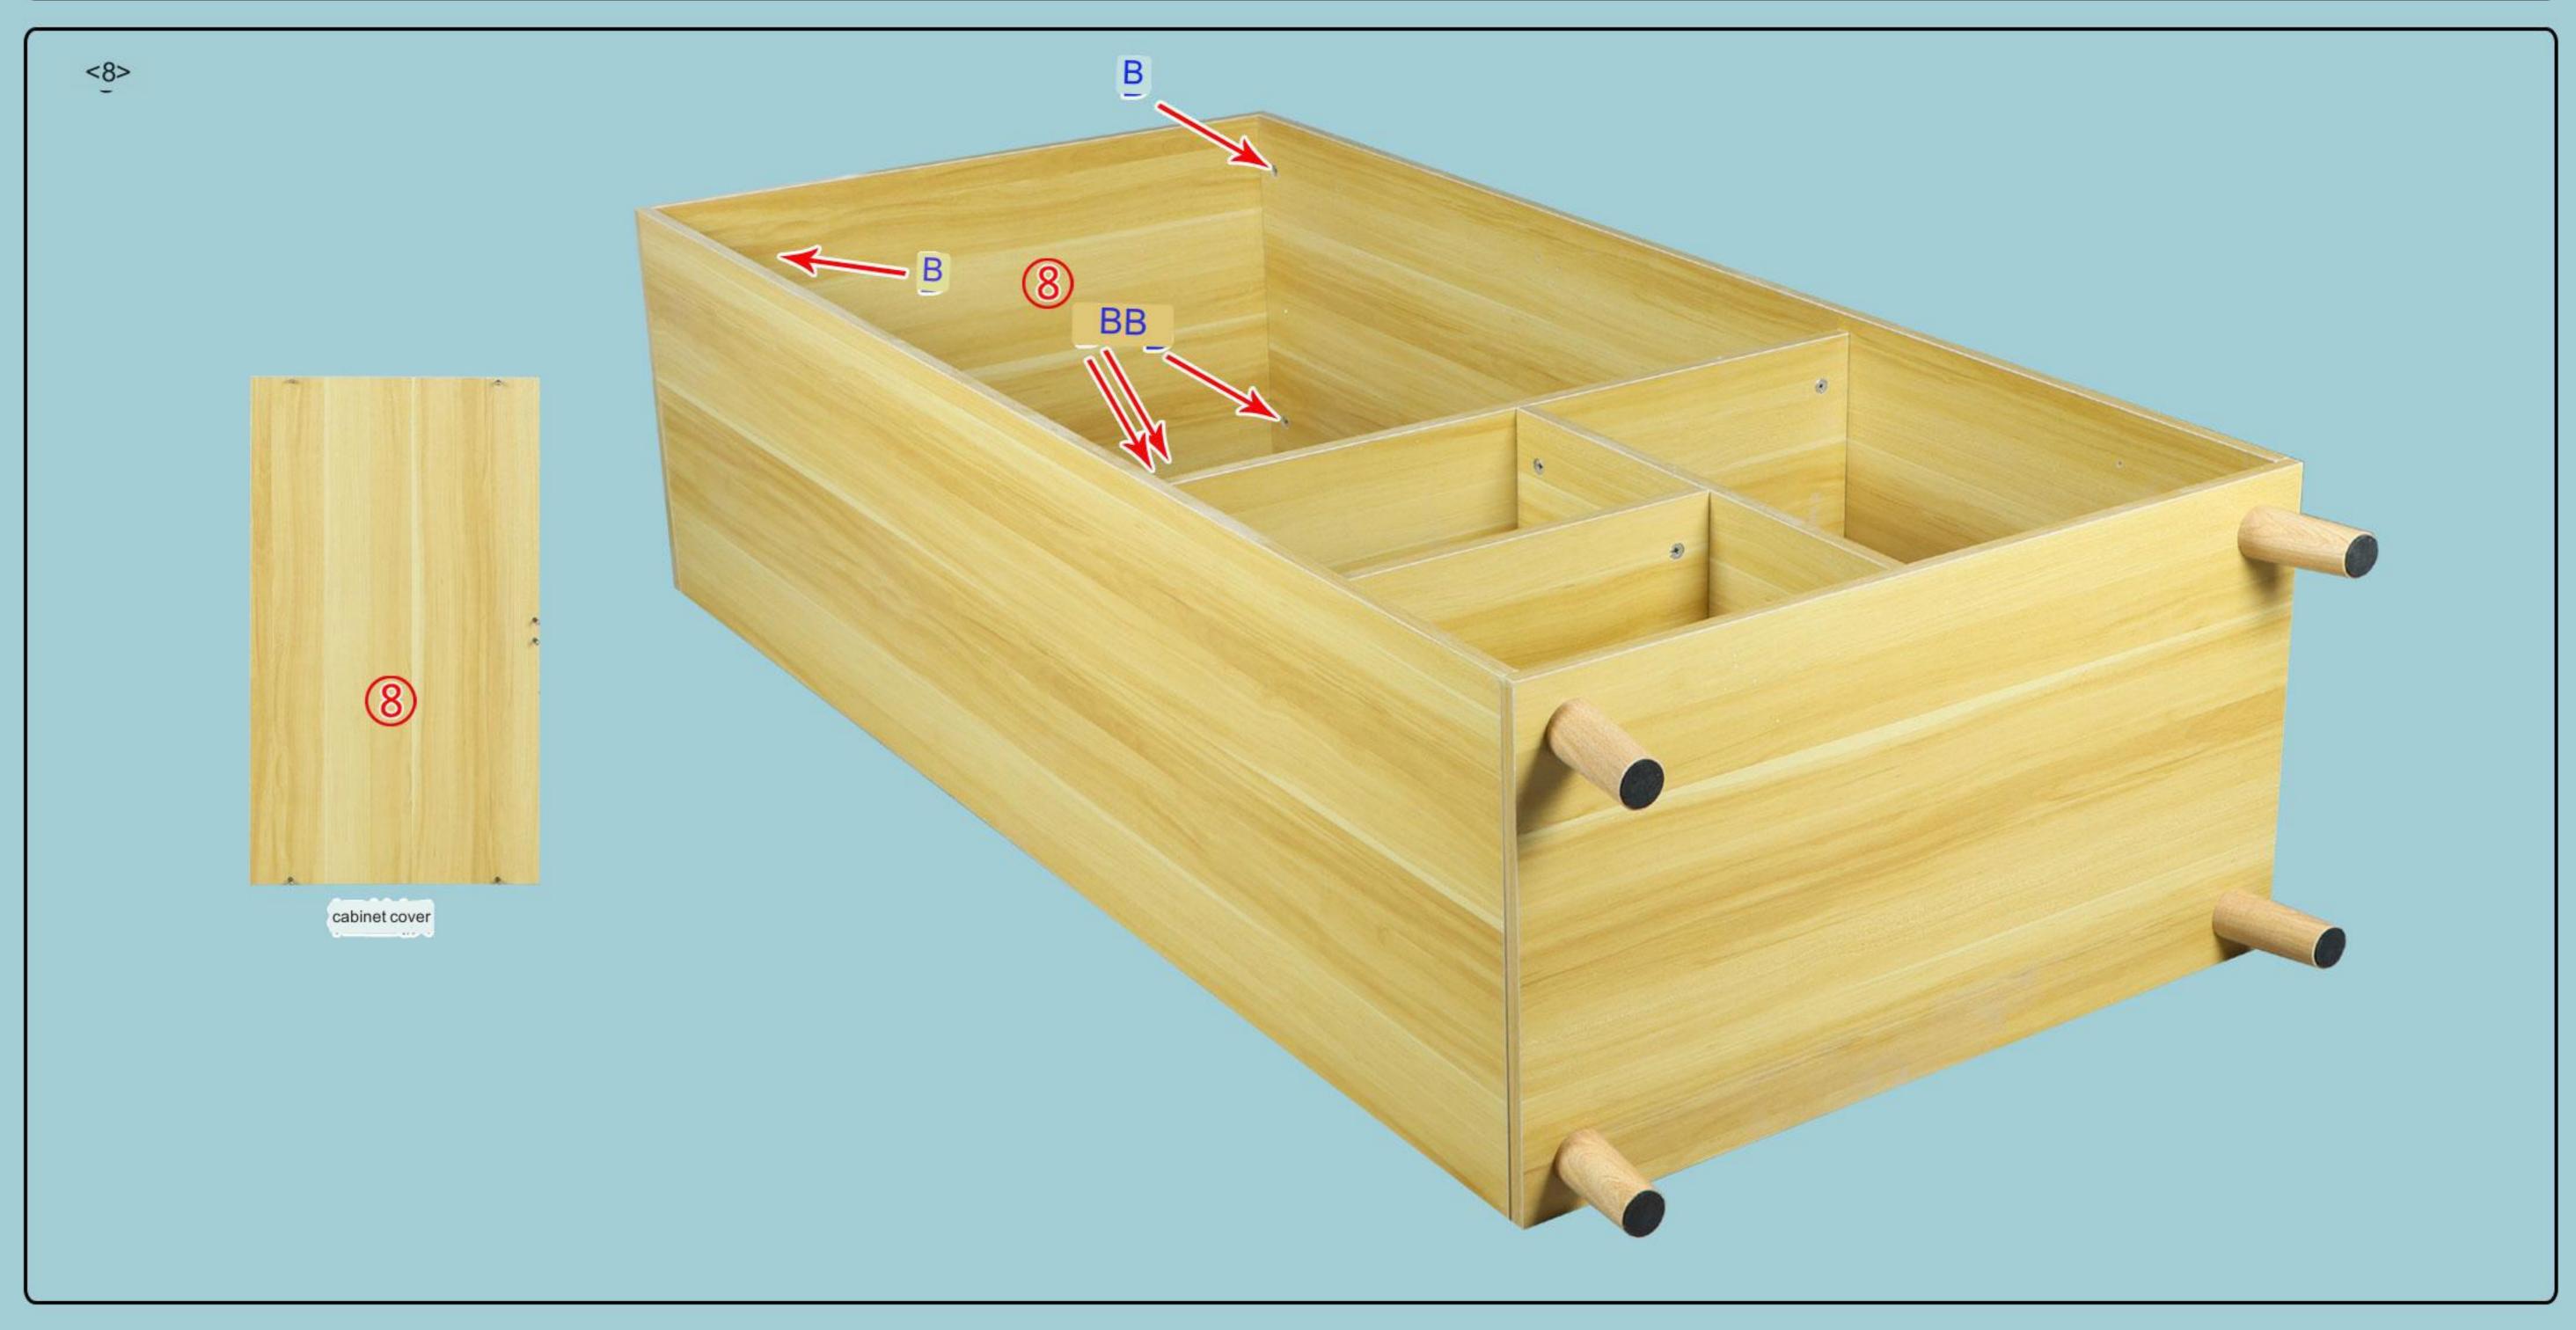

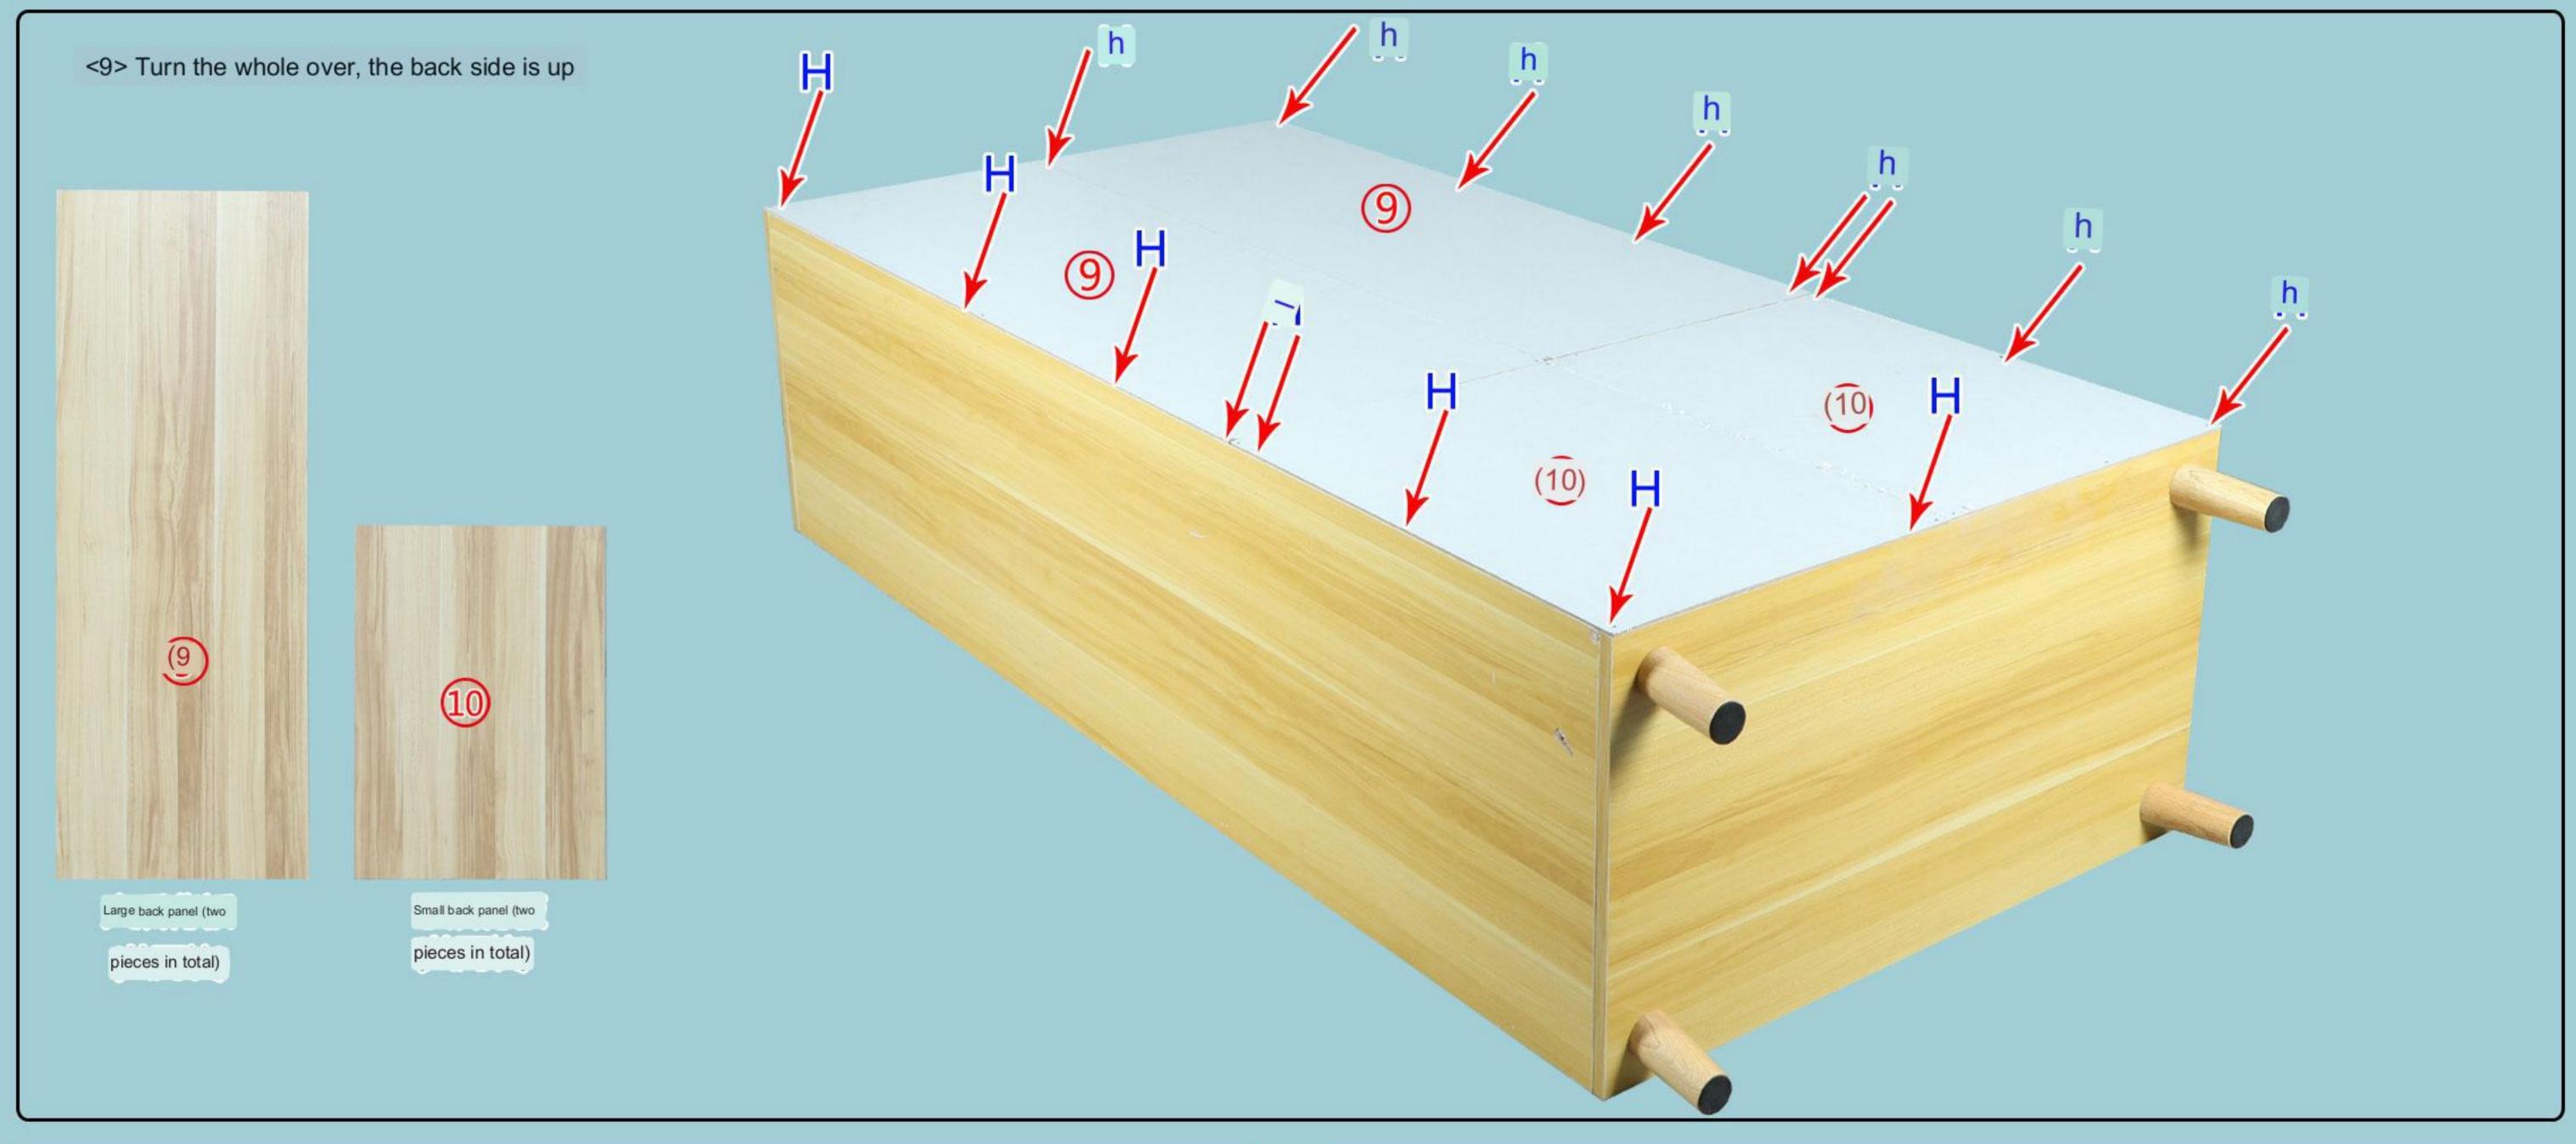








## door adjustment

The door gap is too large



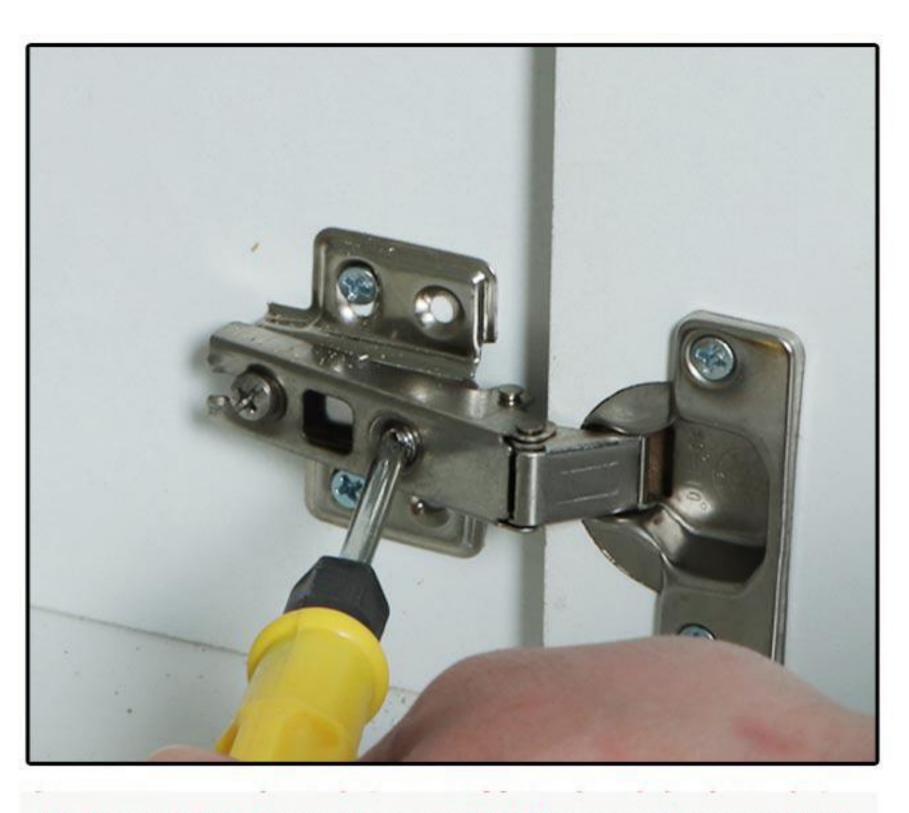


As shown in the figure, the screw that the screwdriver points to,

It is to adjust the left and right movement of the door

panel, and the clockwise rotation is to adjust the door panel to move to the middle.

The gap between the door panel and the side panel is too large

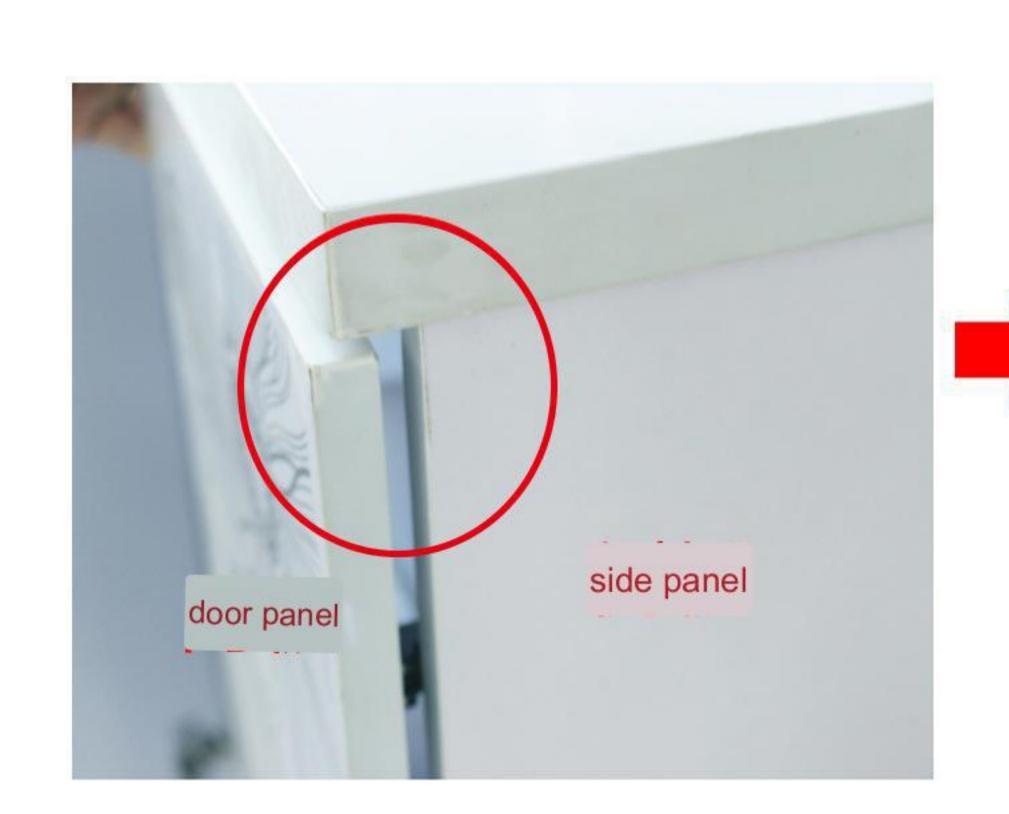




As shown in the picture, loosen the screw pointed by the screwdriver, push the door panel in or pull it out, and then

The height of the door



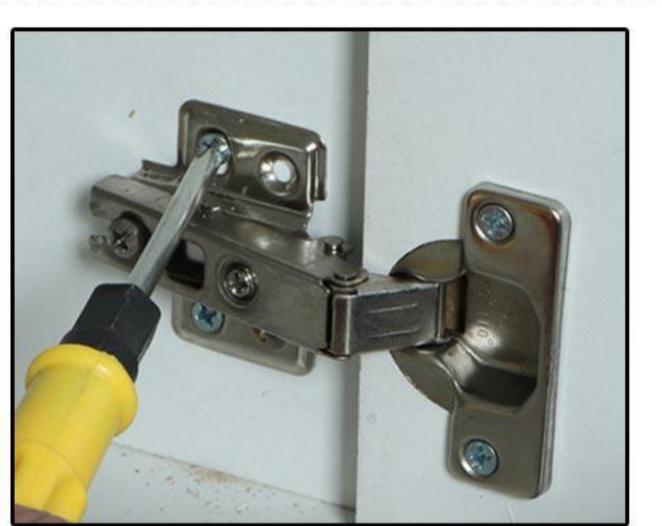

tighten it to solve the above problem.



As shown in the picture, loosen the screw pointed

by the screwdriver, push the lower door panel and hinge upward, and then tighten the screw. Push the higher door panel and hinges down and tighten the screws.



