

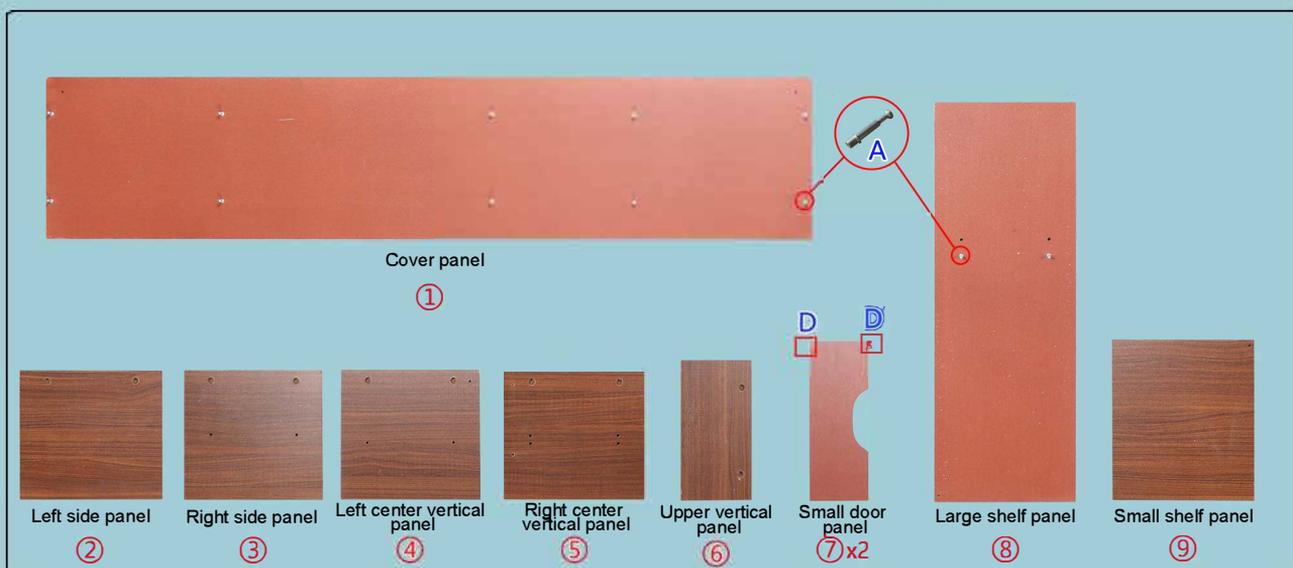
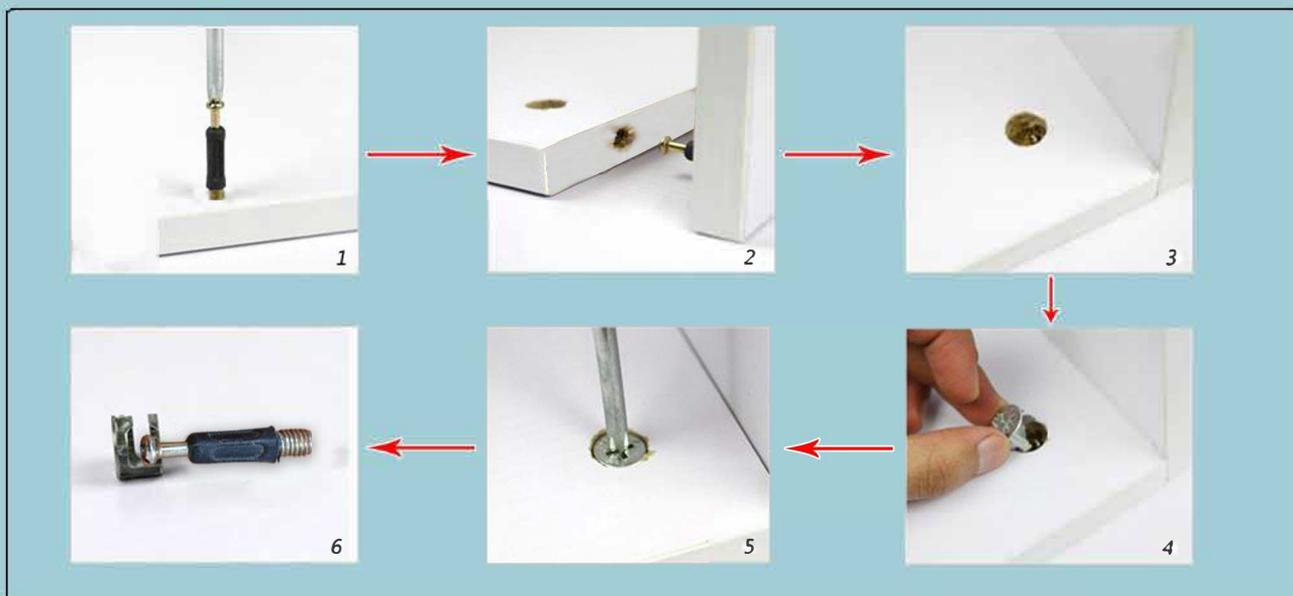
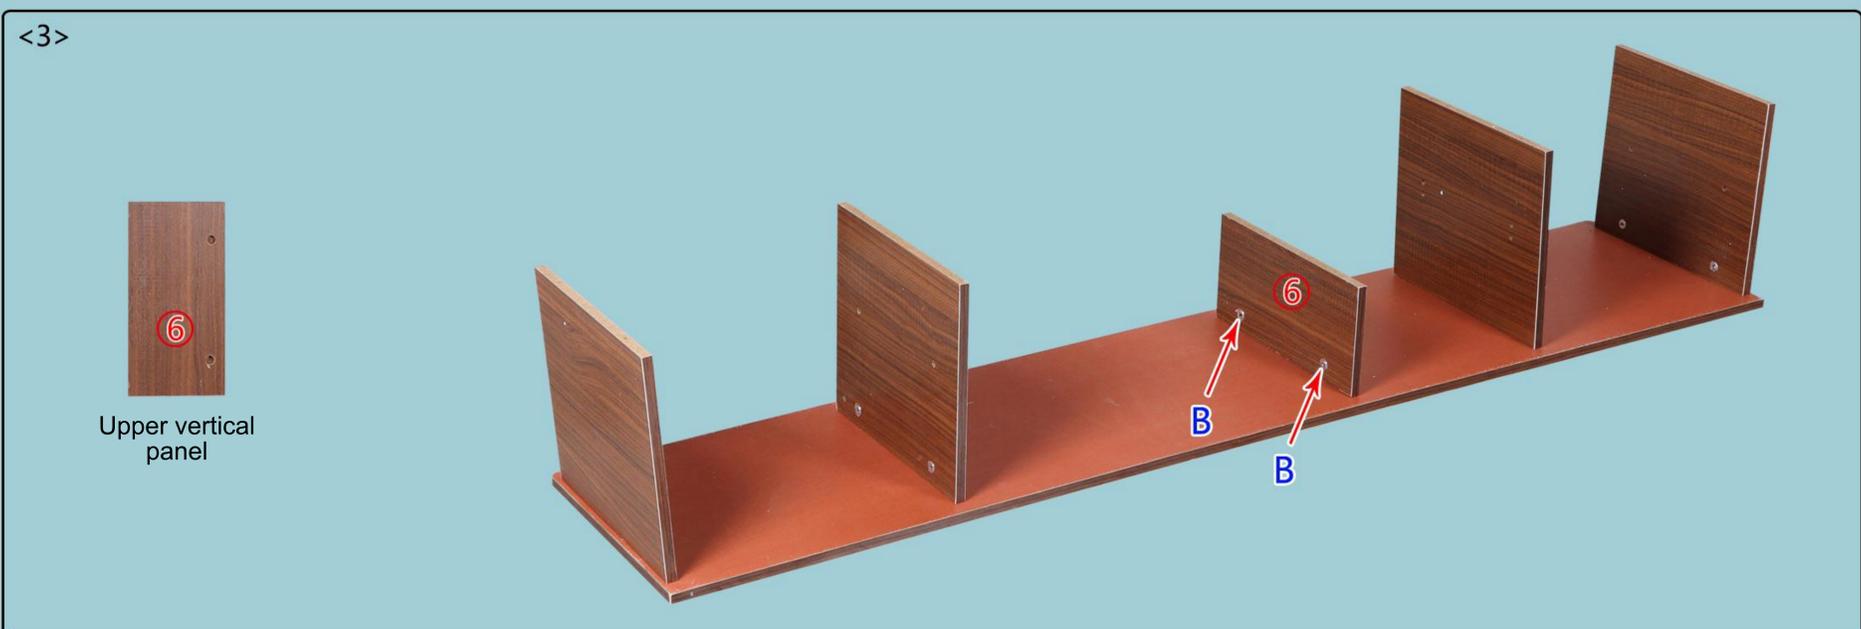
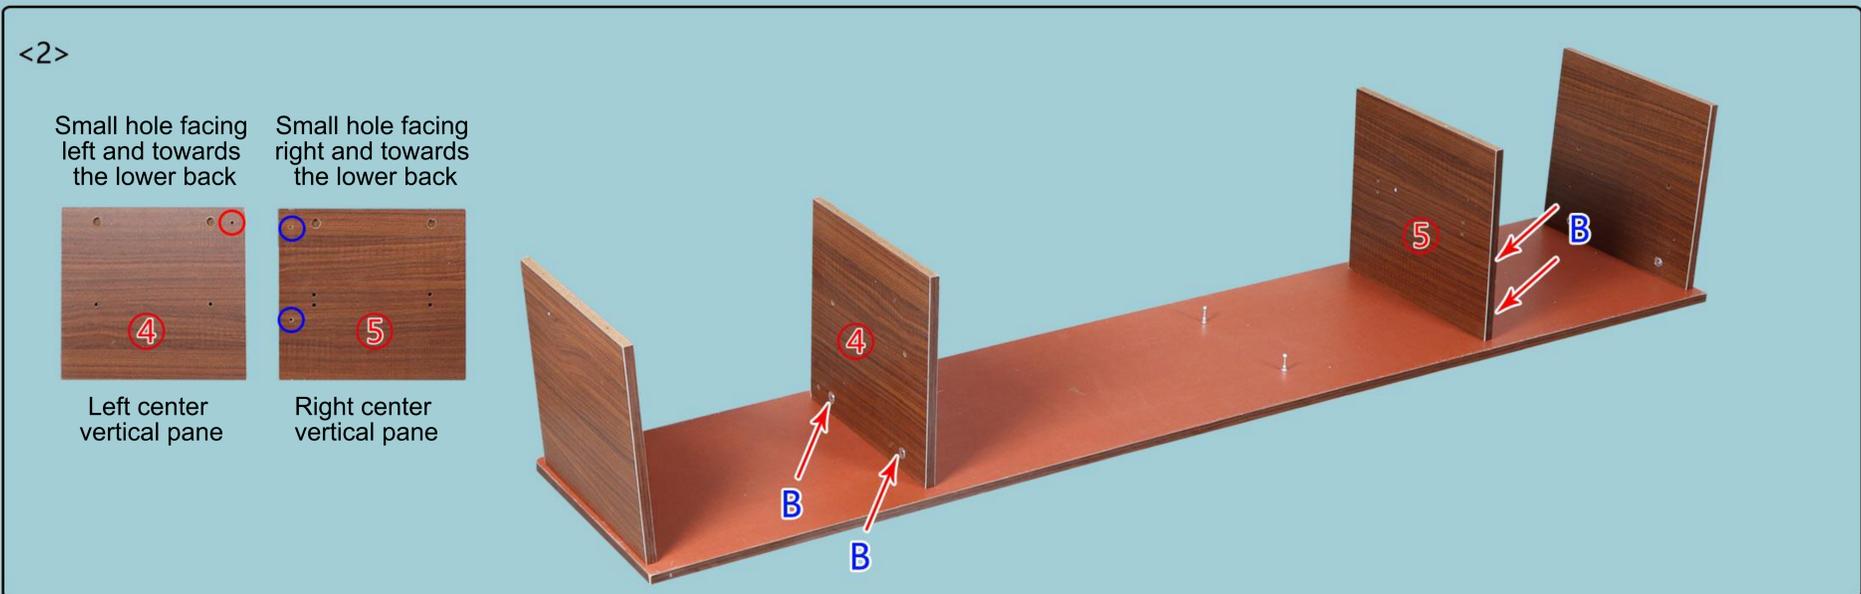



# TV002-140CM Installation Instruction

					
Eccentric Screw	Eccentric Bolt	3.5cm Self-tapping Screw	Metal Pin	3cm Flat Head Screw	Small Nail
A*12	B*12	C*20	D*12	E*5	F*30

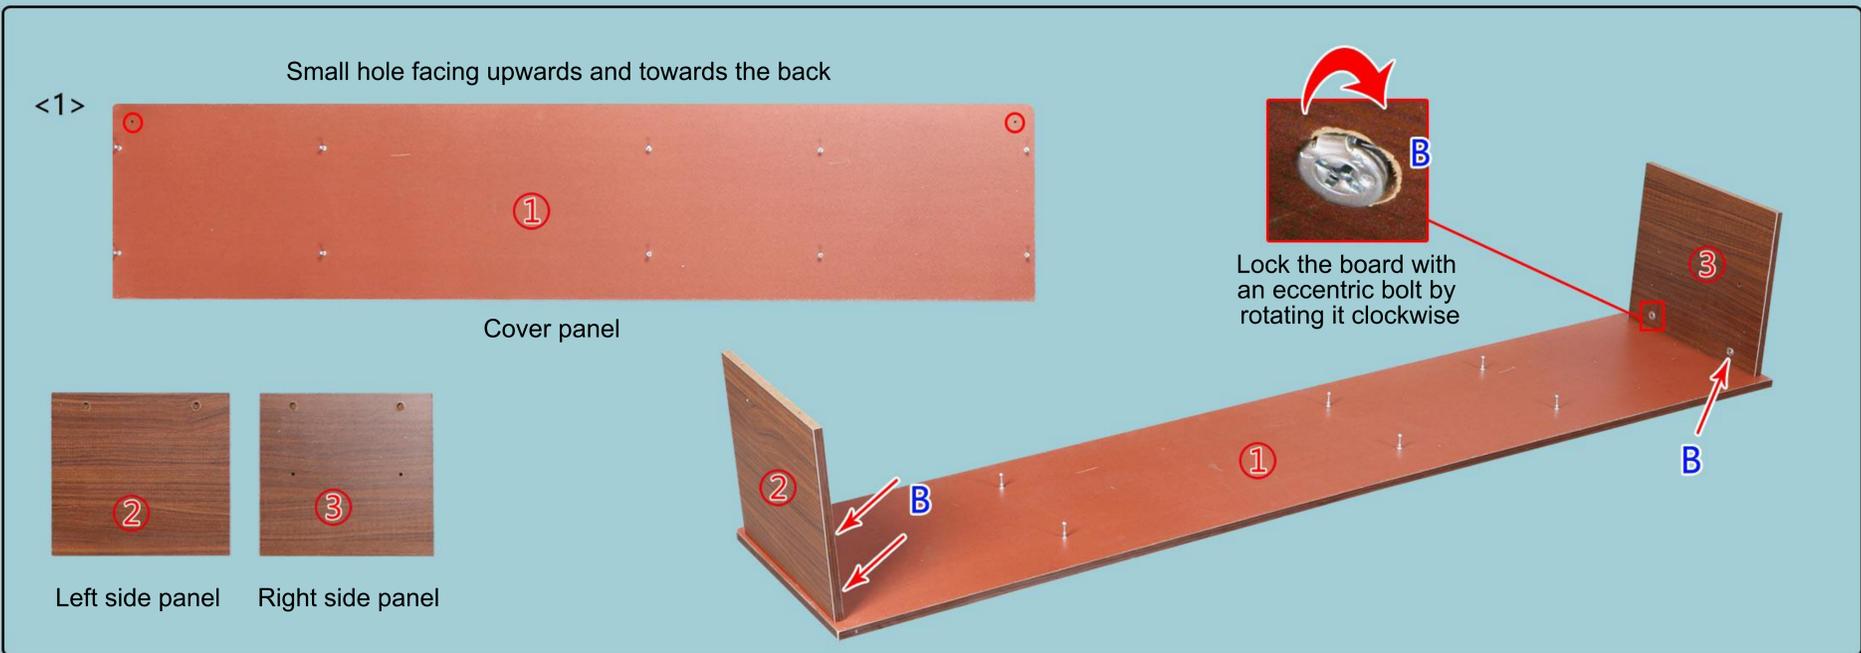

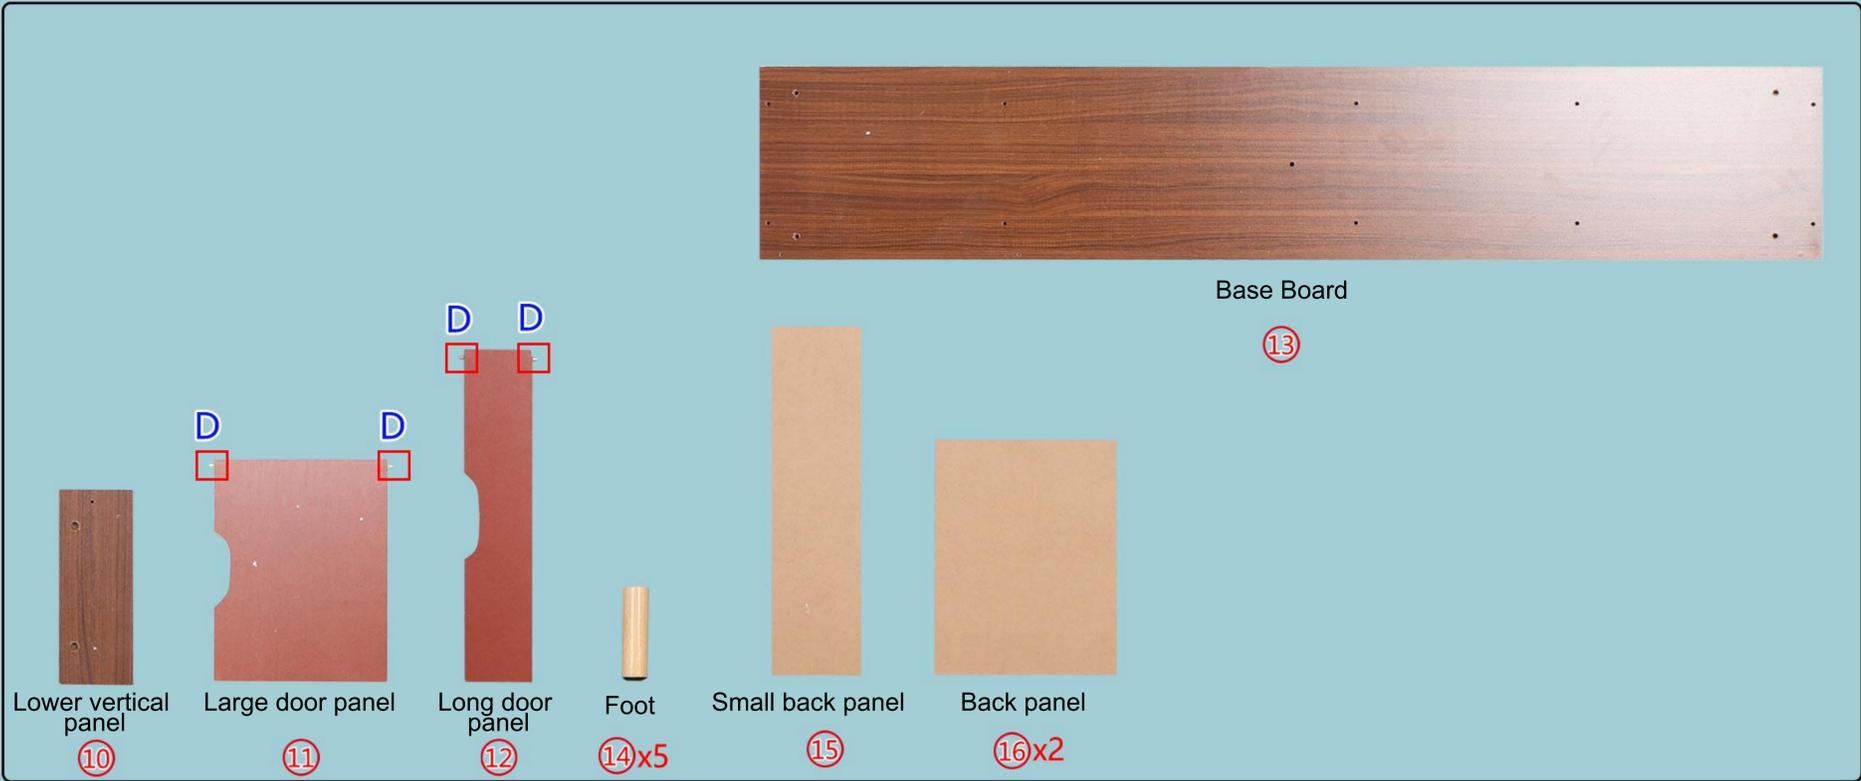

<4>

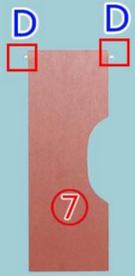

Arc facing downwards

Small door panel  
X 2




Align the metal pin on the small door panel with the small hole on the cover panel and insert it

<5>



Small shelf panel

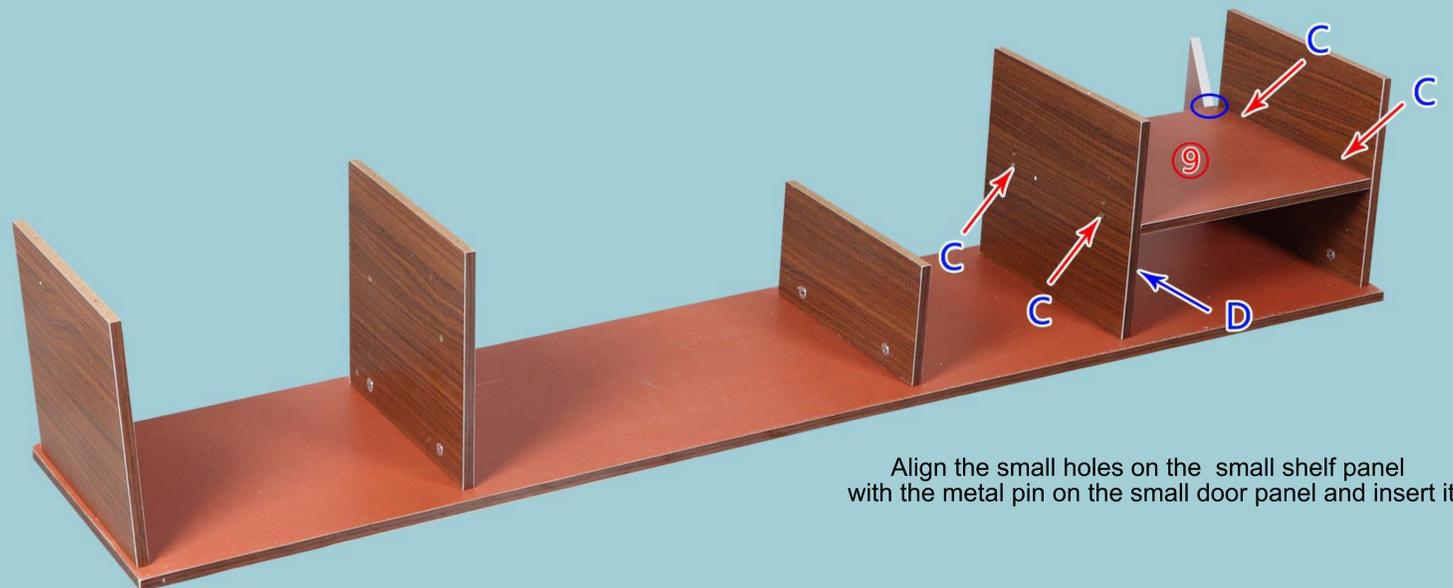


Align the small holes on the small shelf panel with the metal pin on the small door panel and insert it

<6>

The small hole is located in the rear left corner



Large shelf panel

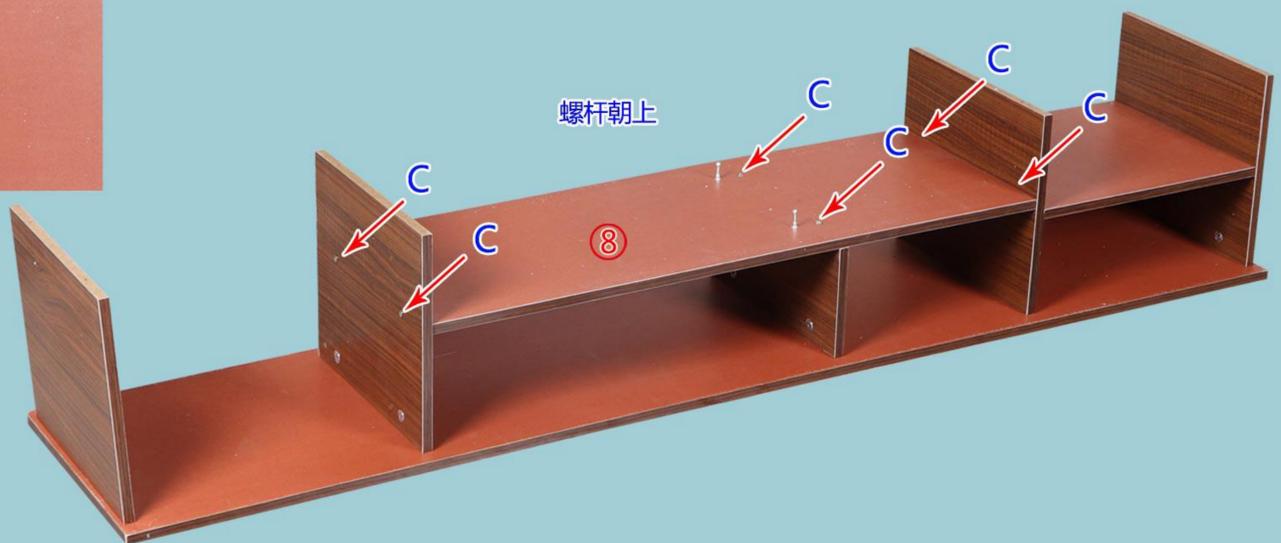


<7>


The small hole is located towards the back




Lower vertical panel

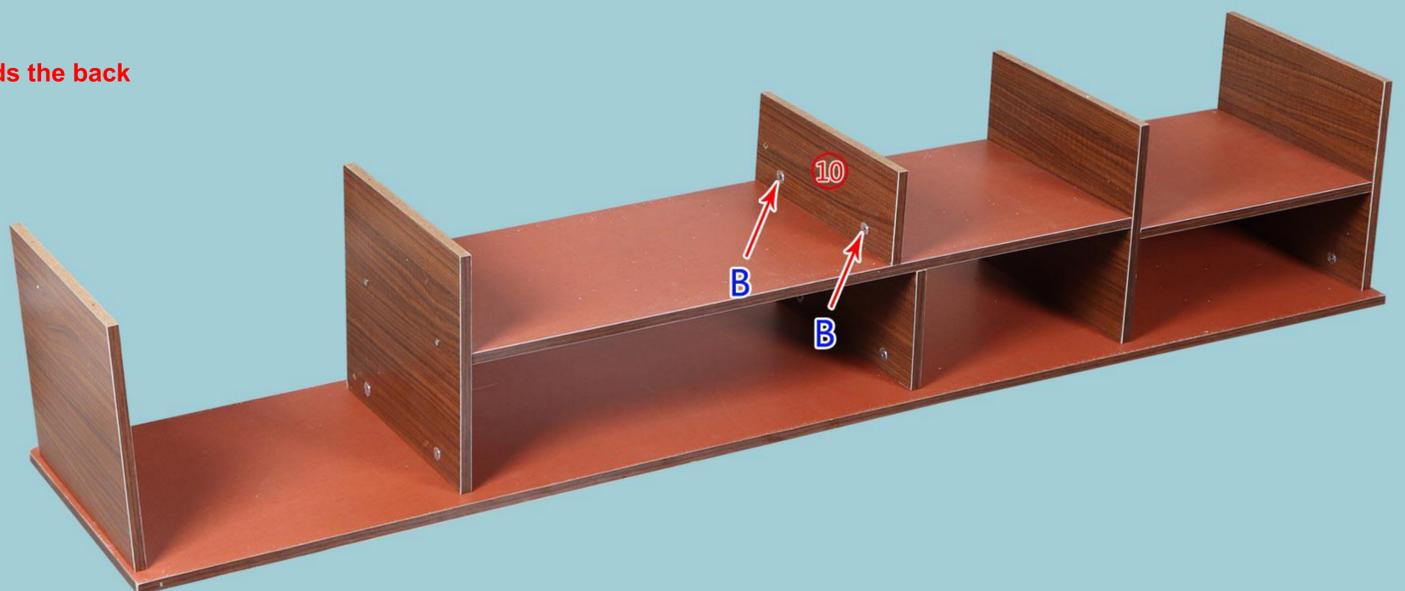


<8>

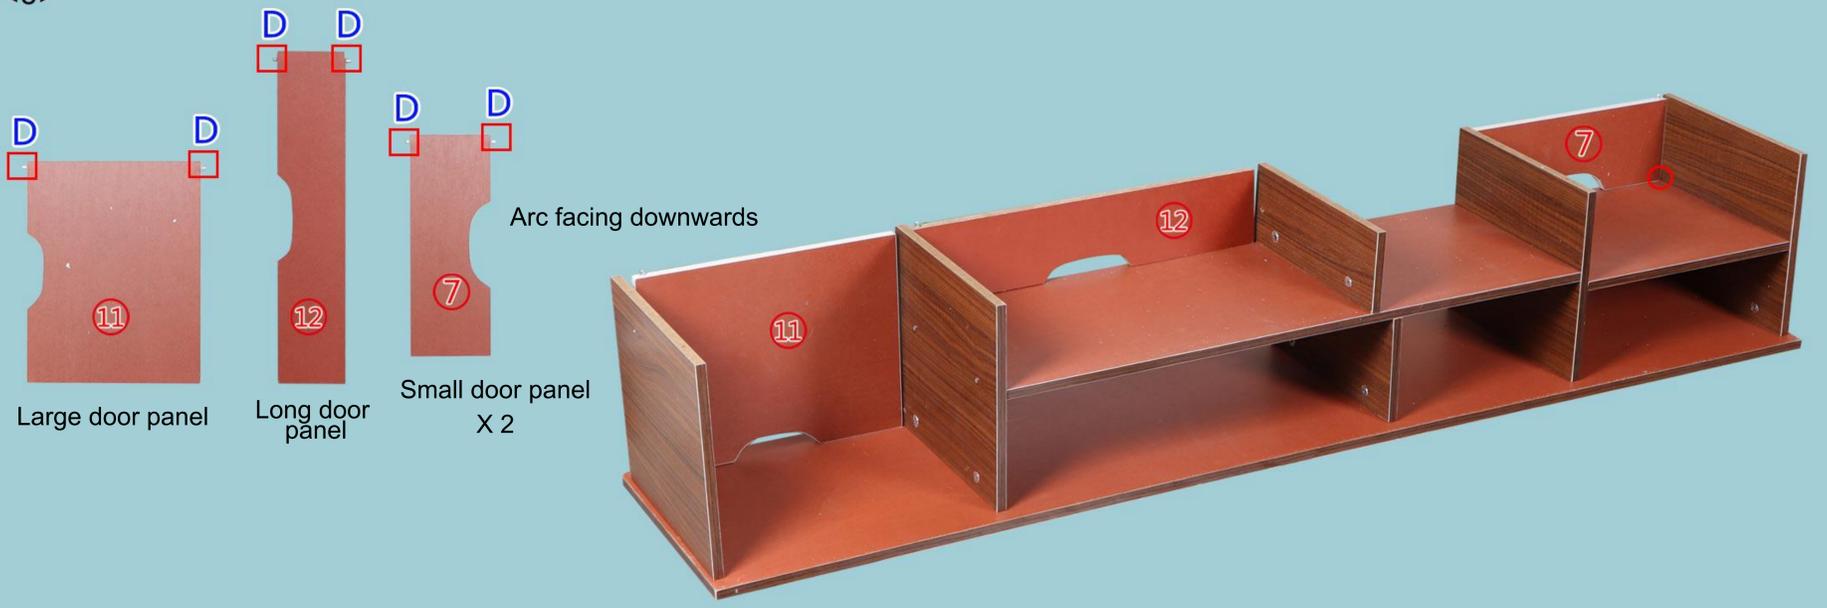


<9>

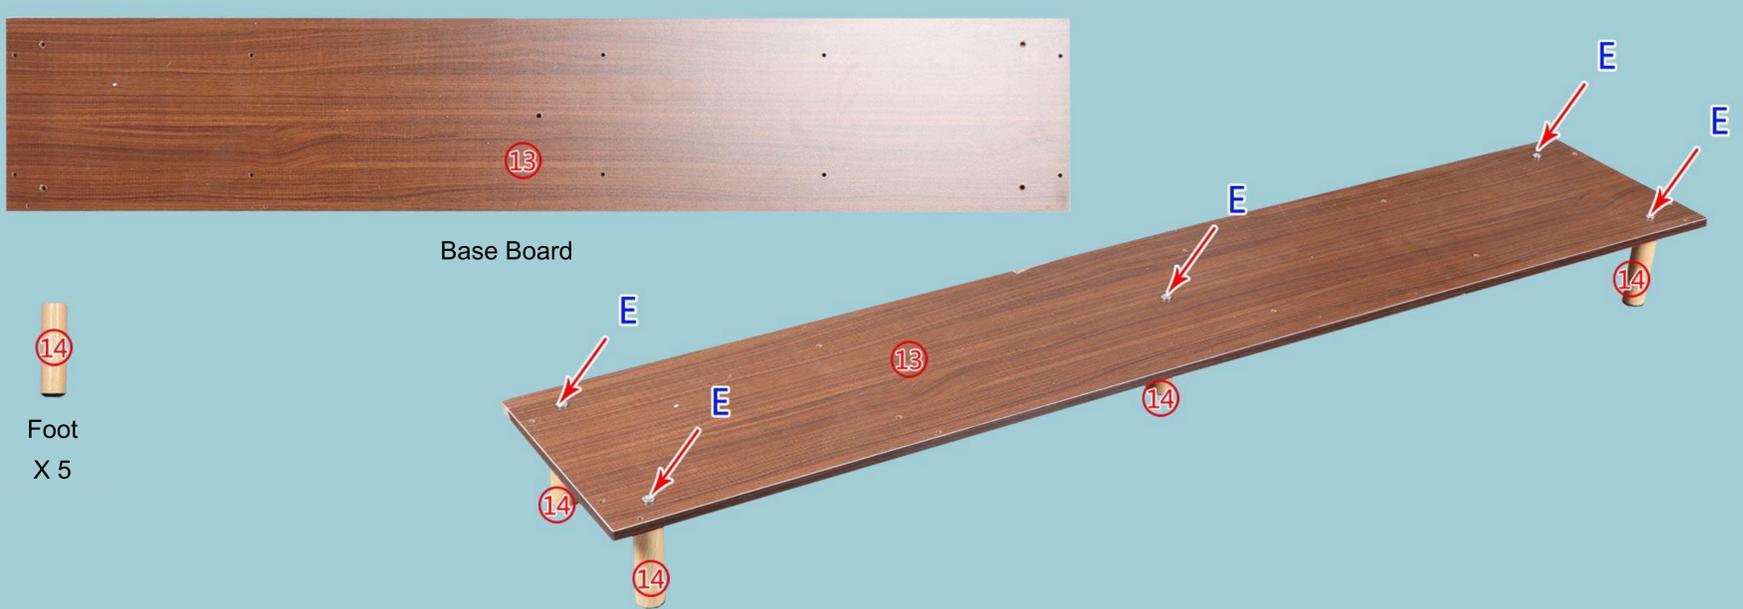

<10>

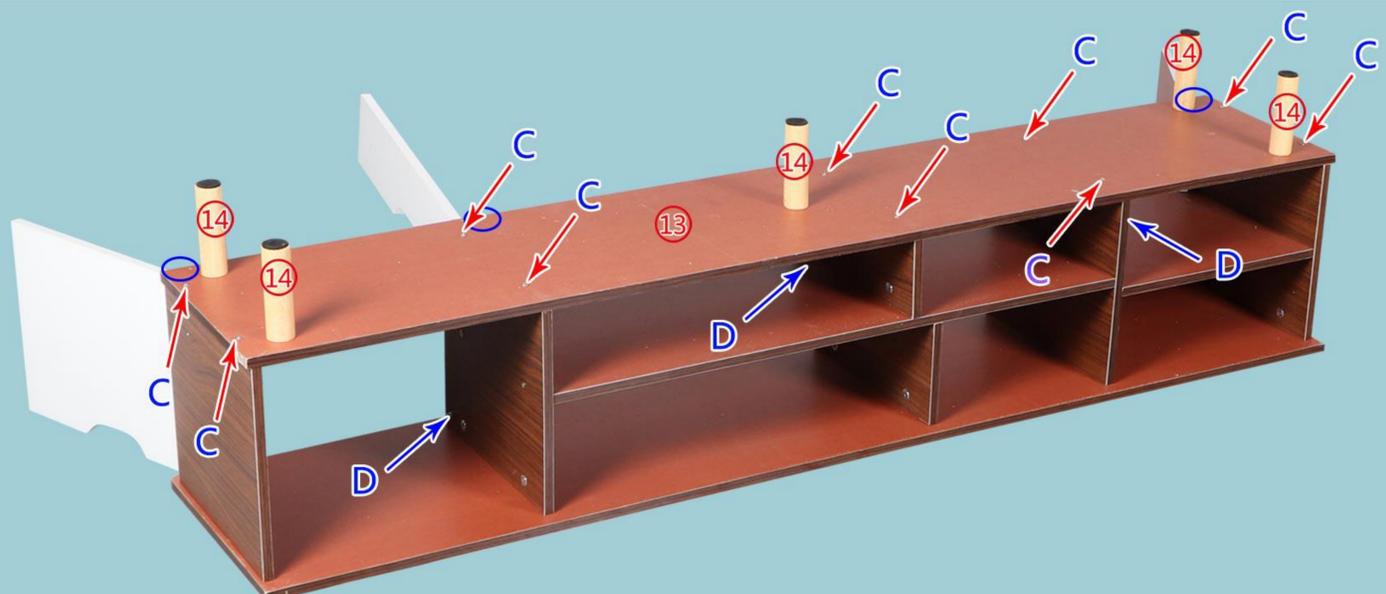

<11>

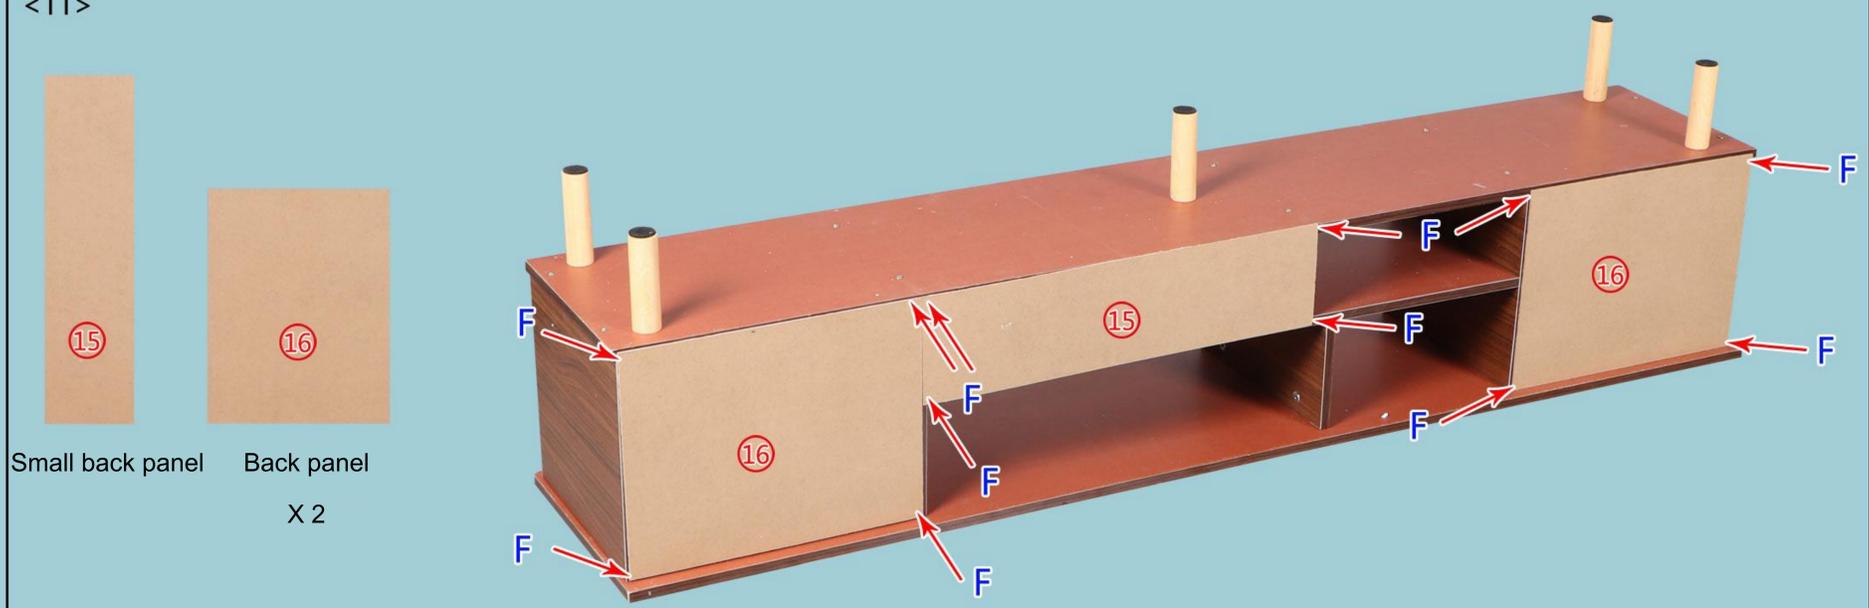

<12>

