


SOB012 Installation Instruction

Please be sure to use a manual screwdriver and refrain from using an electric drill.


							
4CM fine hexagon socket head screw	Large nut	small nut	Wheel	4CM thick inner hexagon screw	9CM hexagon socket screw	large hex wrench.	Small hex wrench
A*4	nut B*10	C*4	D*4	E*6	F*4	G*1	H*1

Kind tips : Tighten the screws seven times when installing, Tighten it when you're all done!

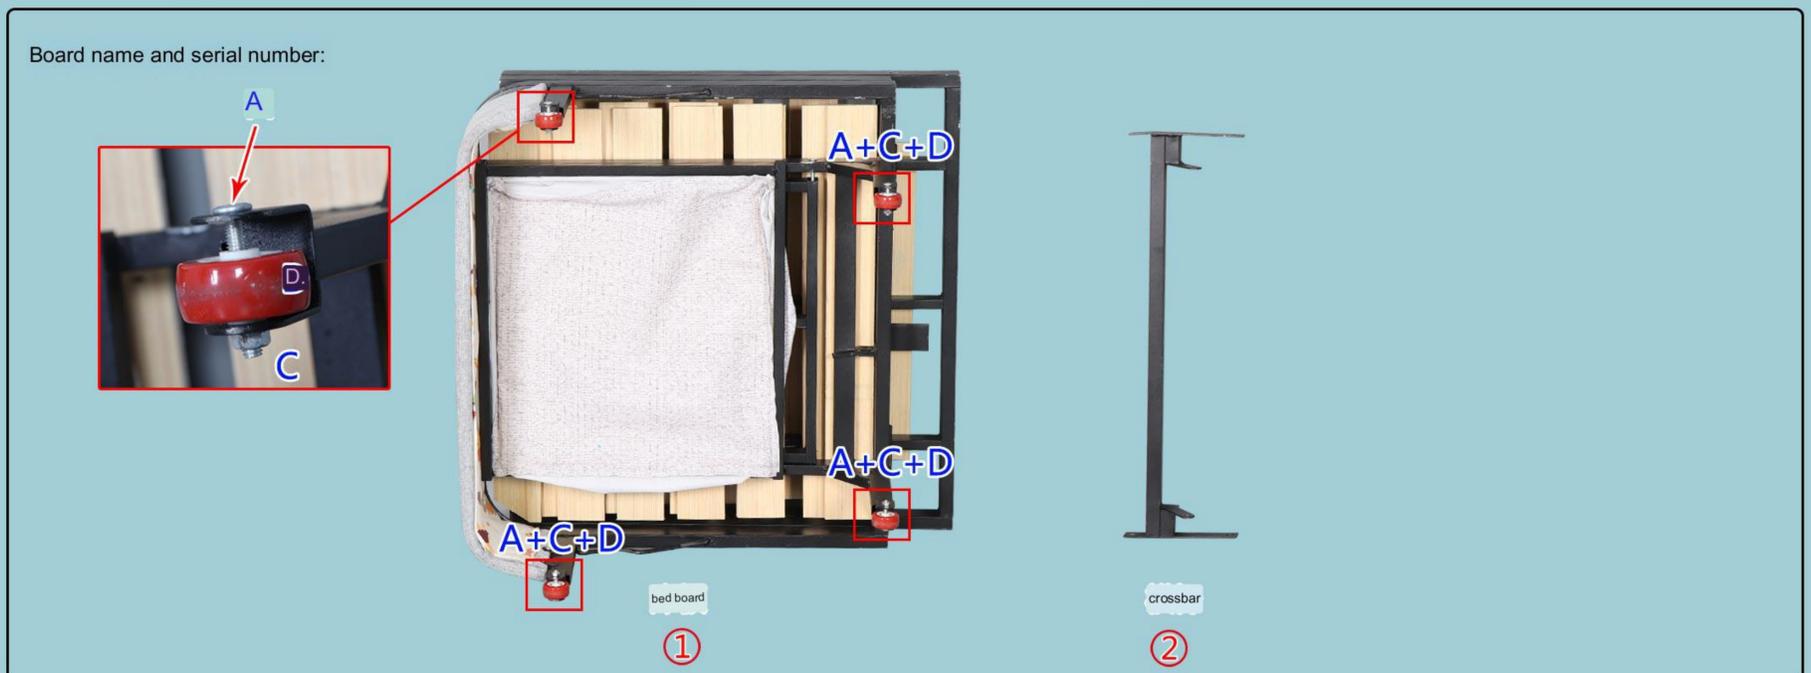

Step 1: Installation of the whole part

<1> Expand the bed board

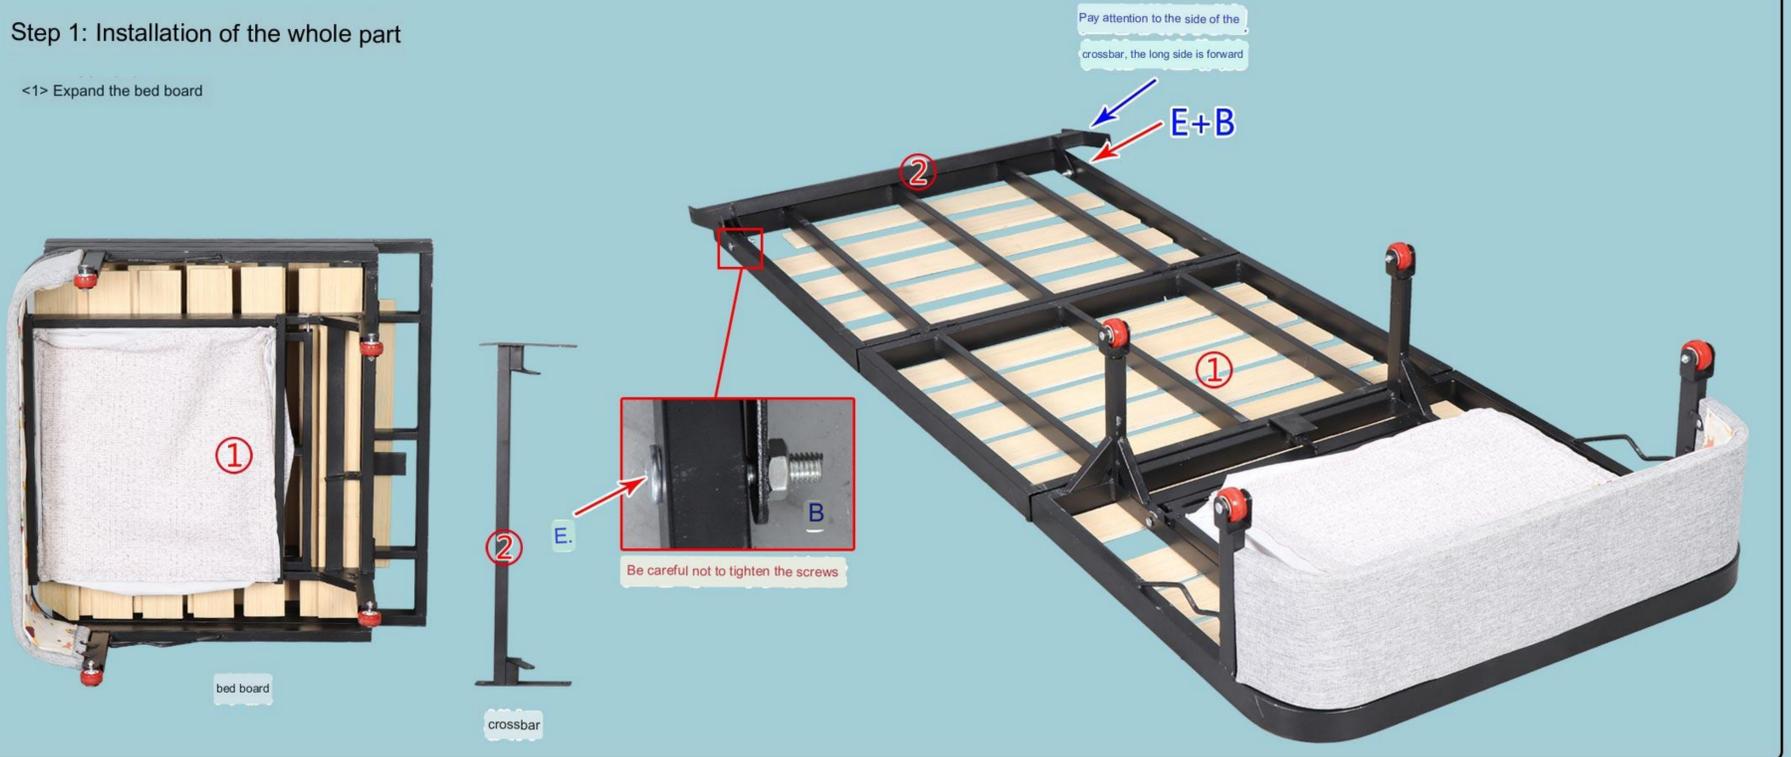

<2> straighten the whole



<3>



<4>



<5> Installation complete



Complete drawing!

Lift up from the tail and push in to complete the fold