
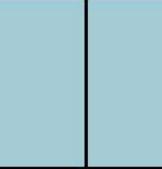




BS009 3 Tiers Installation Instruction

								
Eccentric screw	Eccentric Bolt	metal pin	handle	handle screw	hook up	supporting item	1.1CM self-tapping screw	1.4CM self-tapping screw
A*36	B*36	C*6	D*3	E*3	F*6	G*6	H*12	I*18

Kind tips: When installing, tighten the screws seven times,

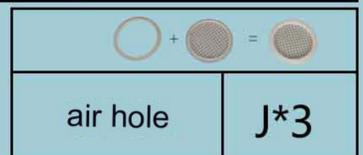


Eccentric installation principle : Wait until everything is done before tightening!

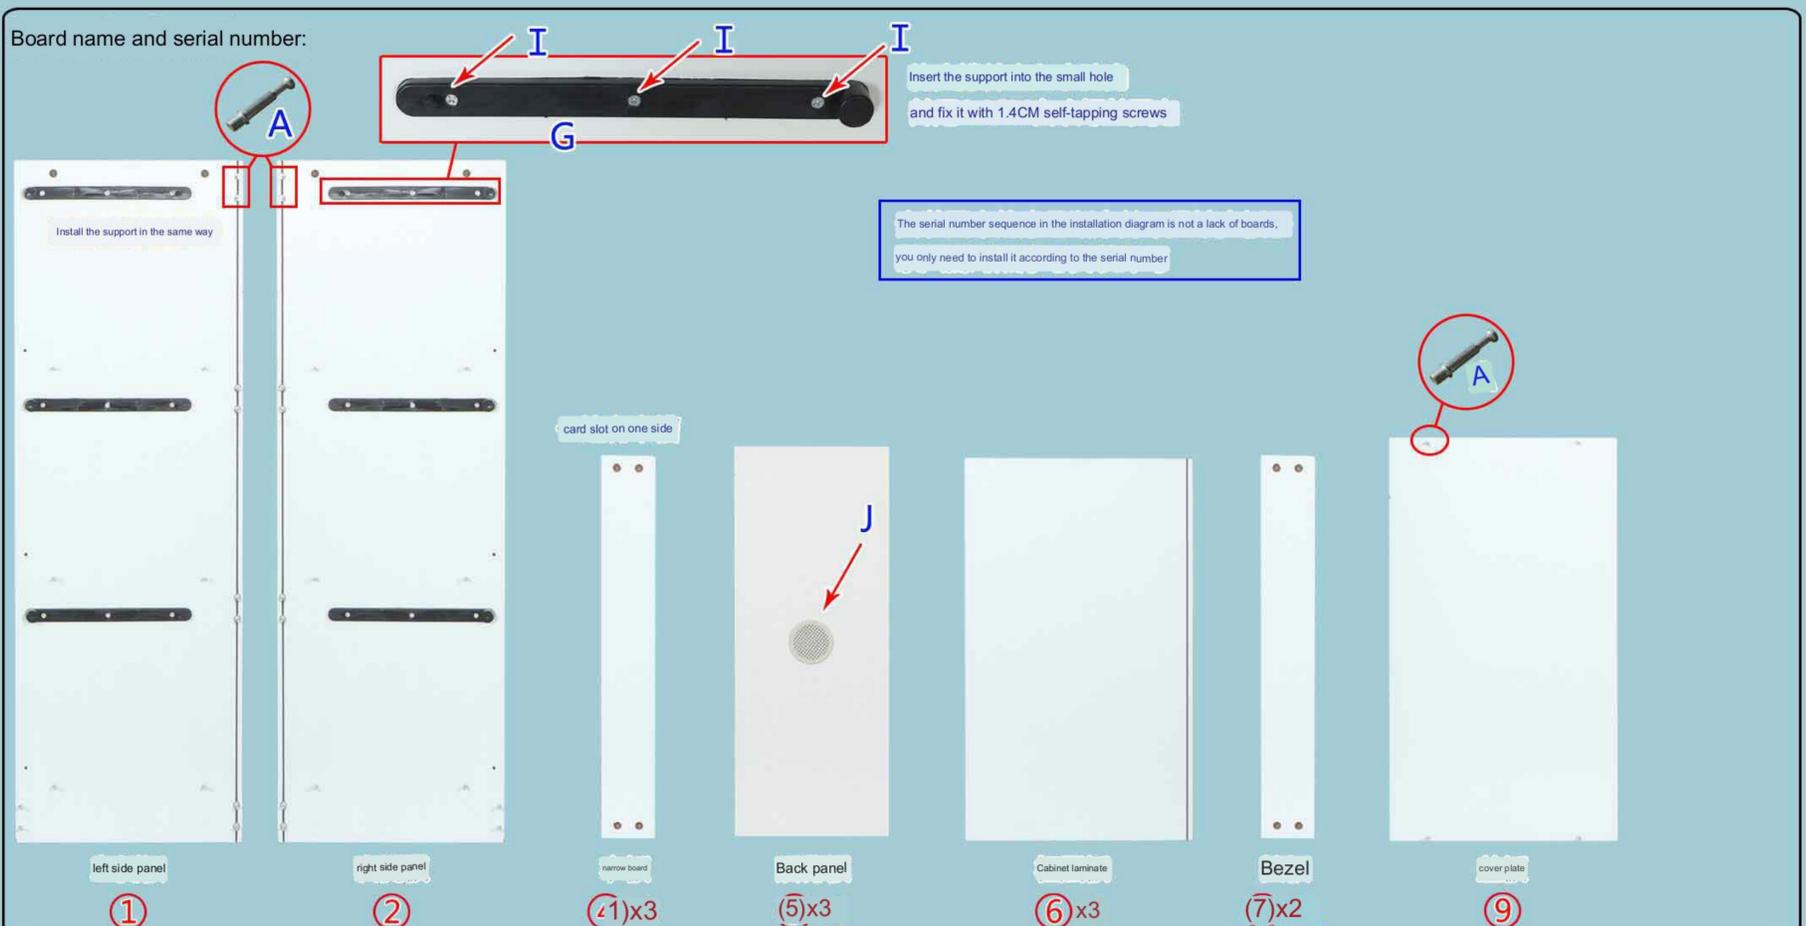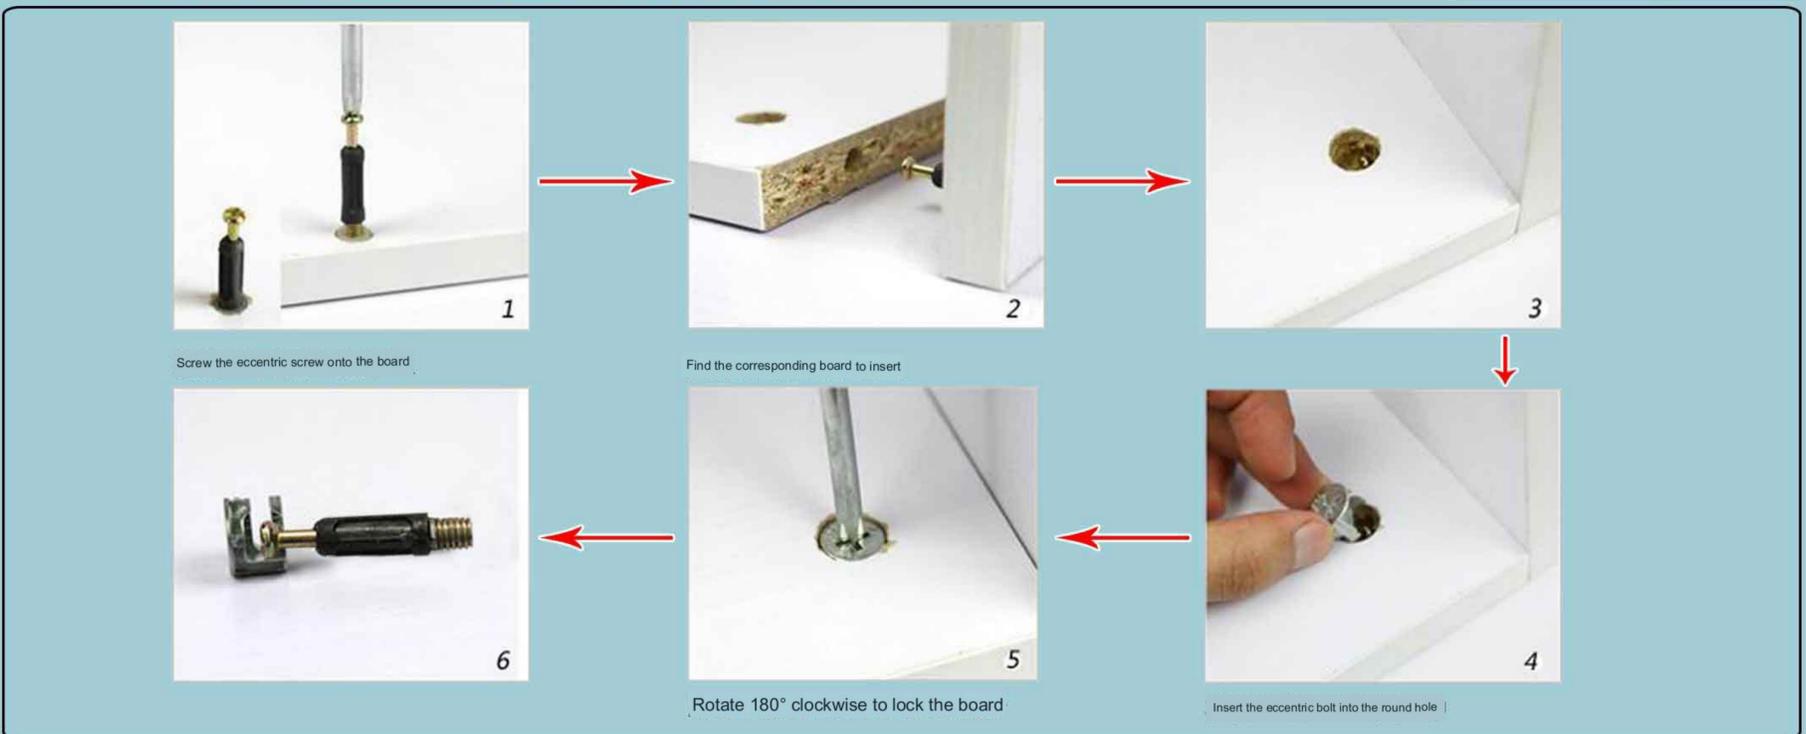



Handles and handle screws are subject to what you actually received. Drawings

are for reference only. Installation method

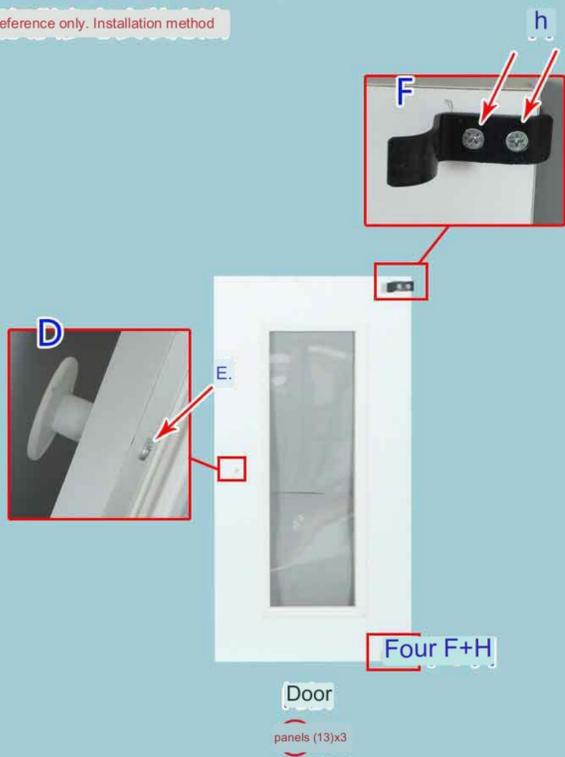


step 1 :Installation of the whole part

<1>

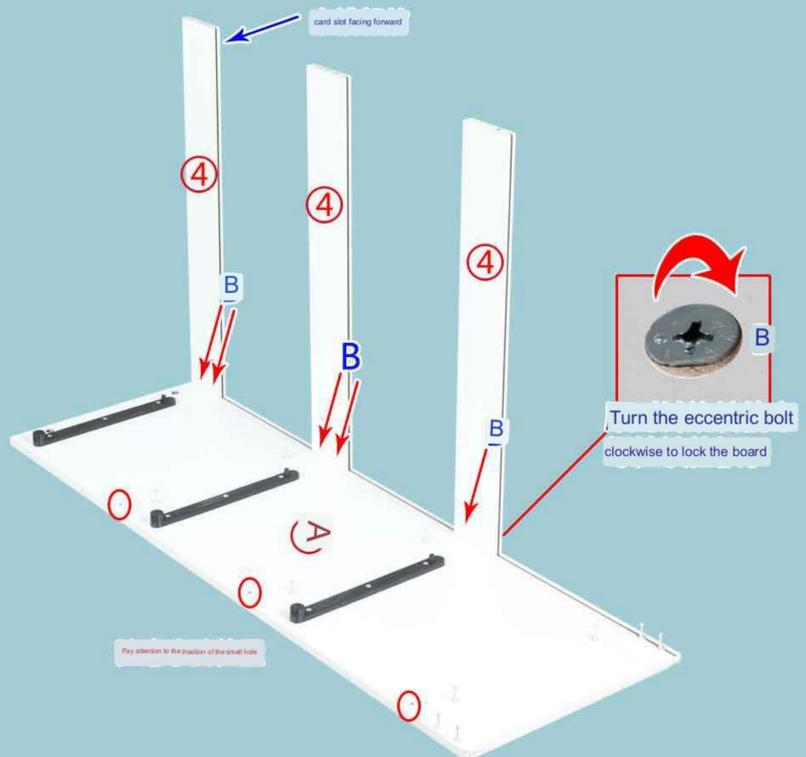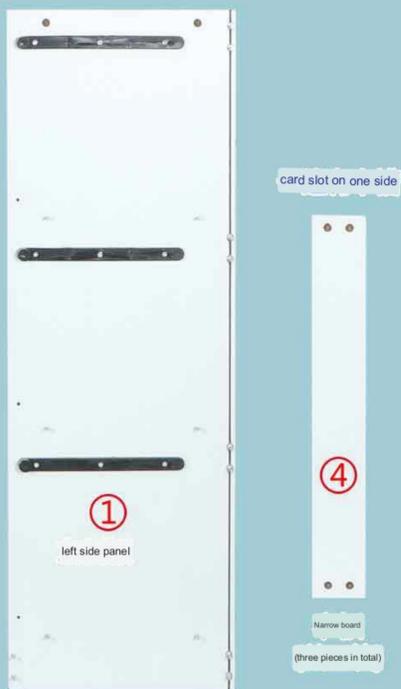

<2>

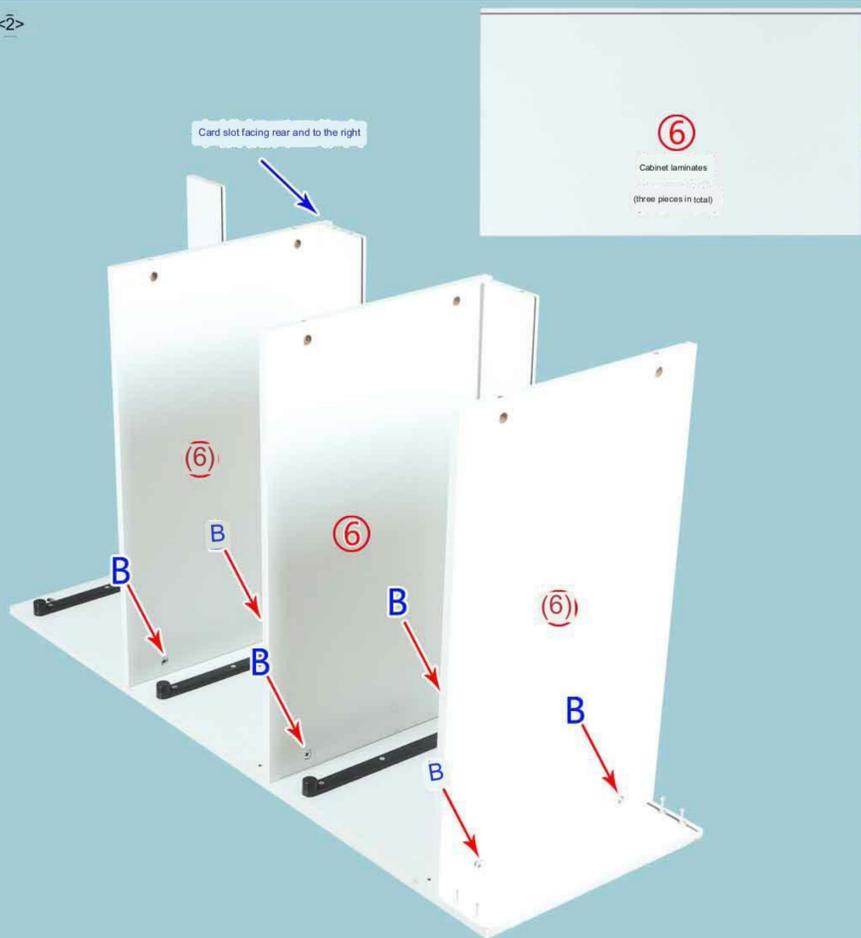

<3>



