

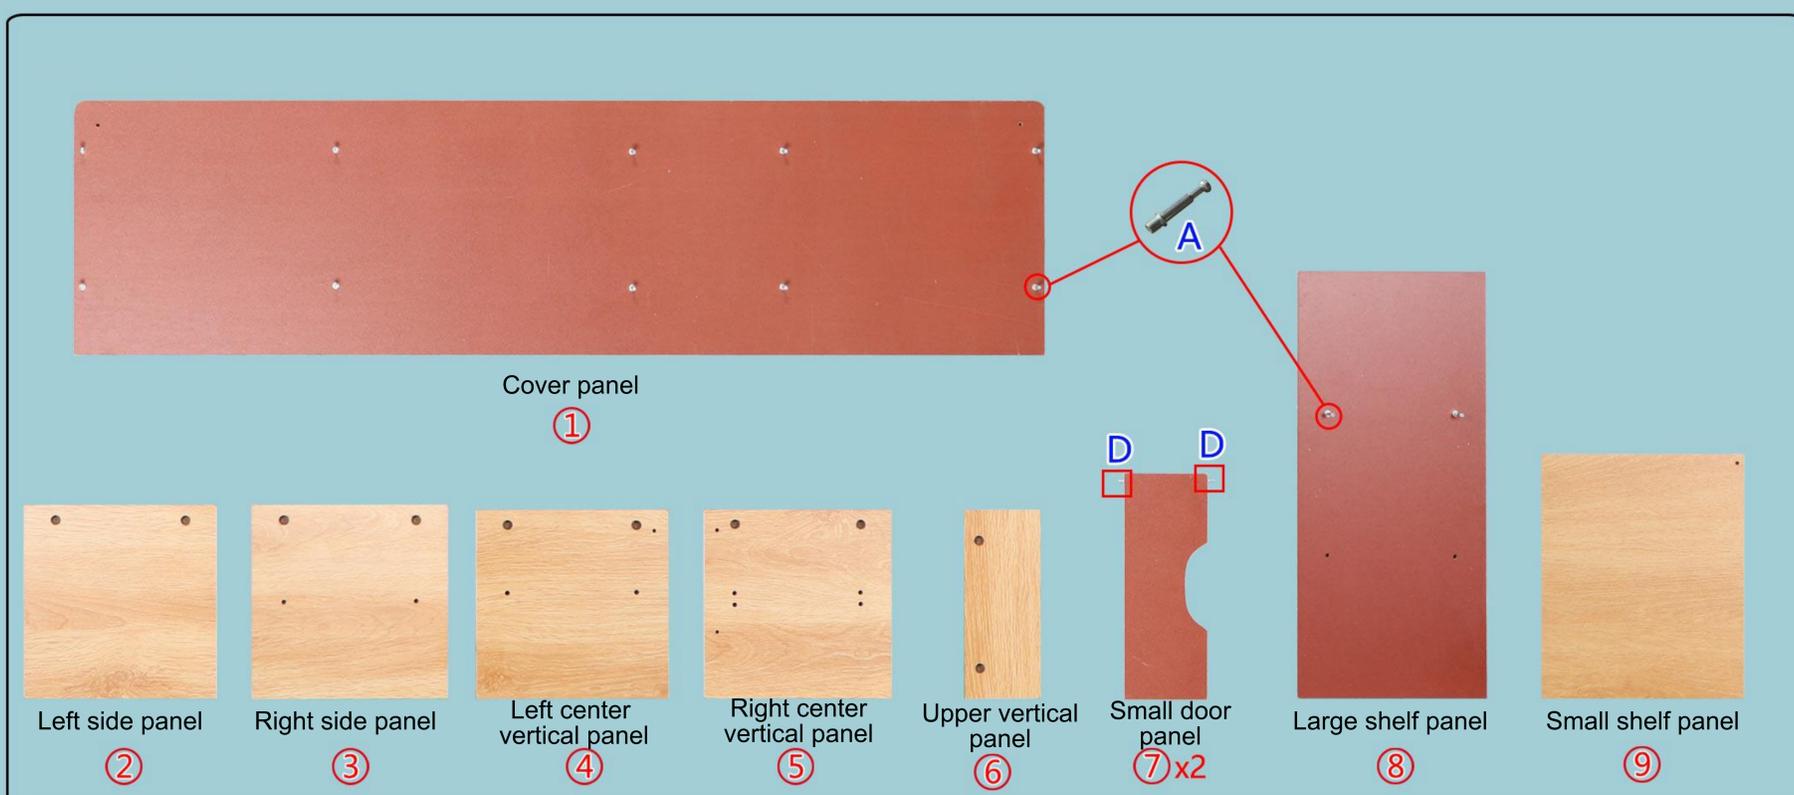
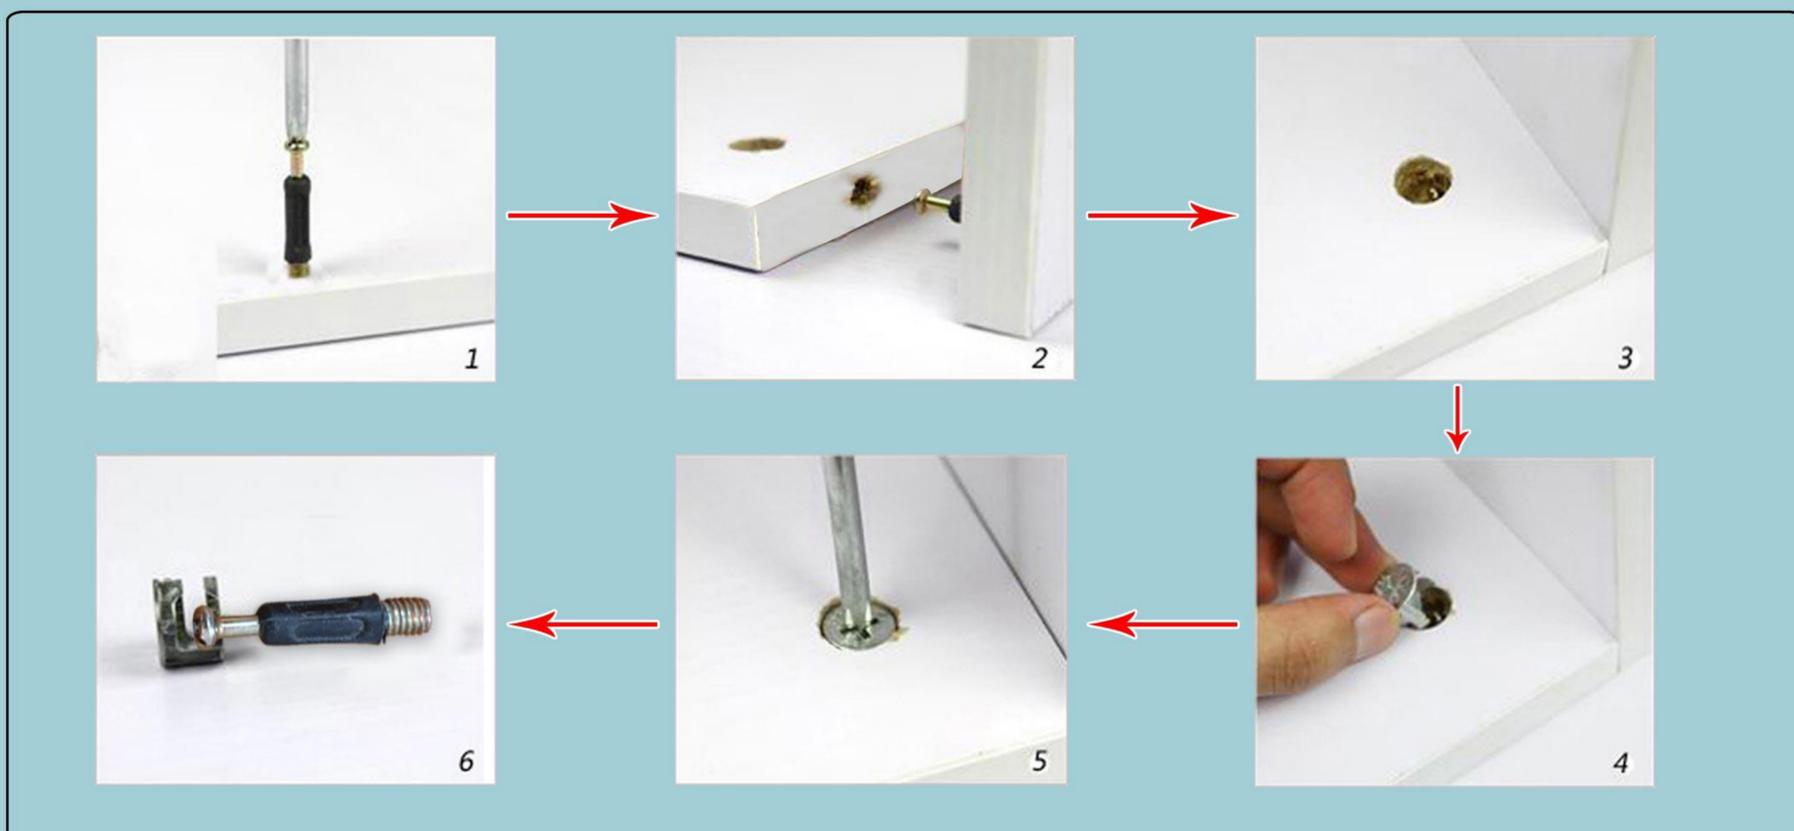
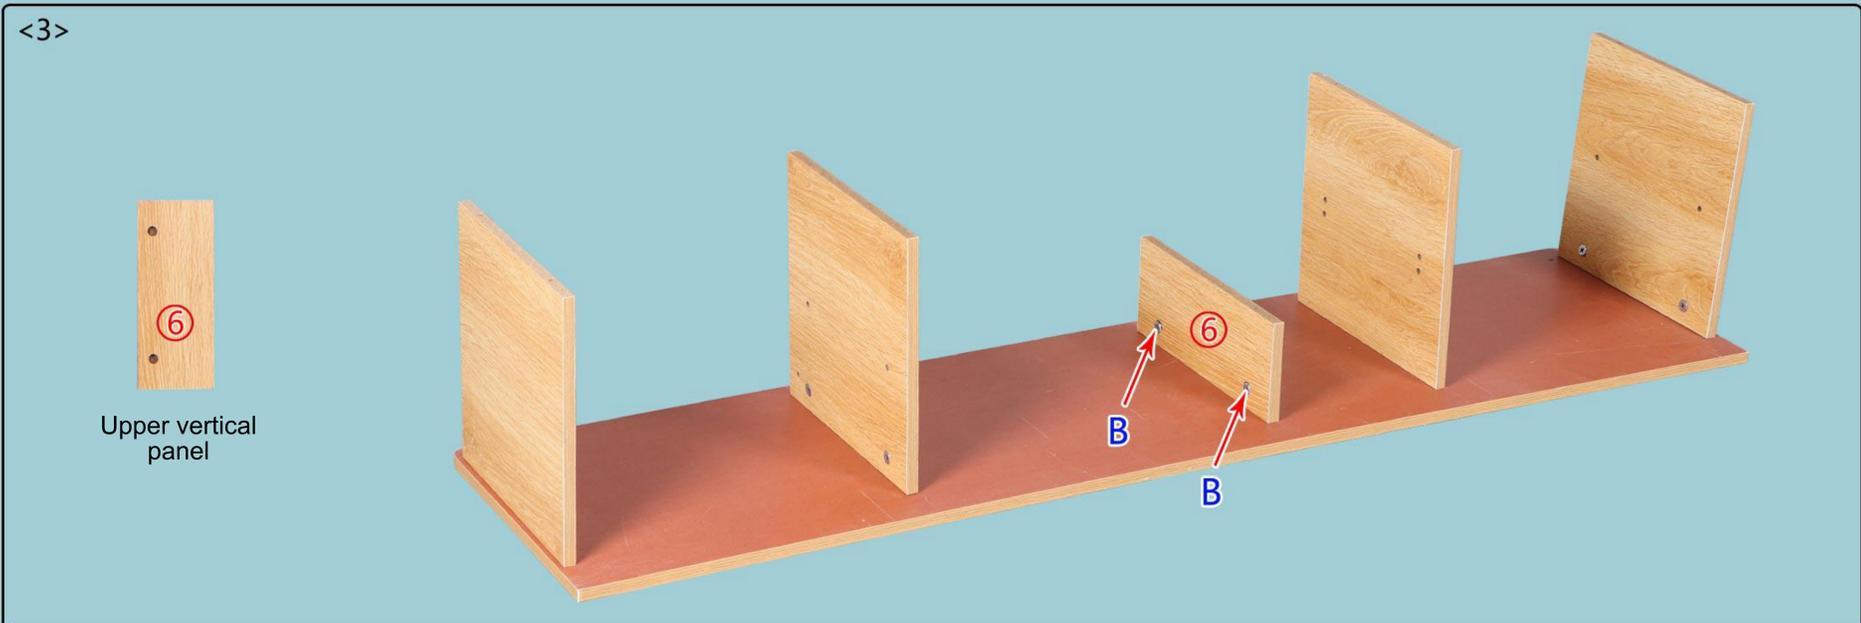


TV002-120CM Installation Instruction

					
Eccentric Screw	Eccentric Bolt	3.5cm Selftapping Screw	Metal Pin	3cm Flat Head Screw	Small Nail
A*12	B*12	C*20	D*9	E*5	F*20

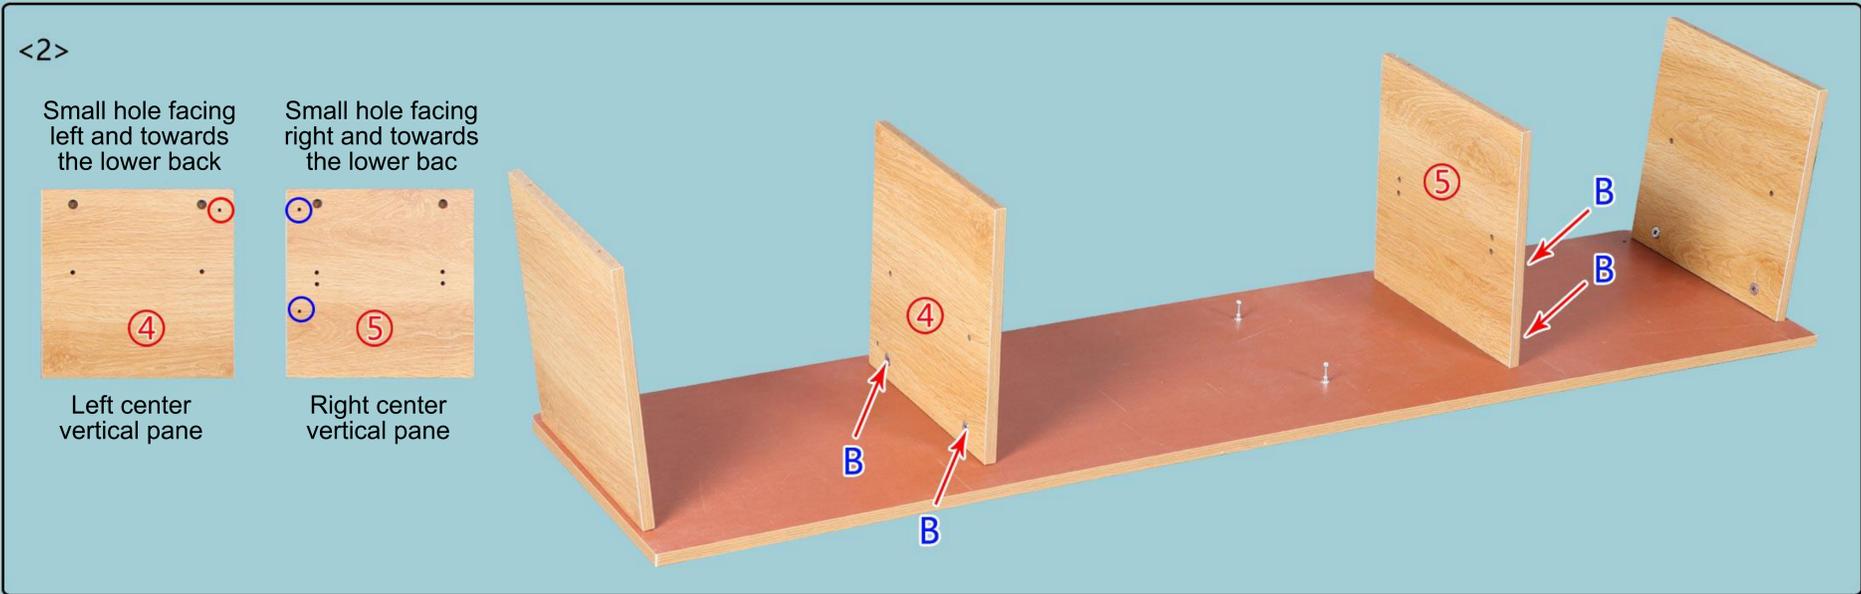


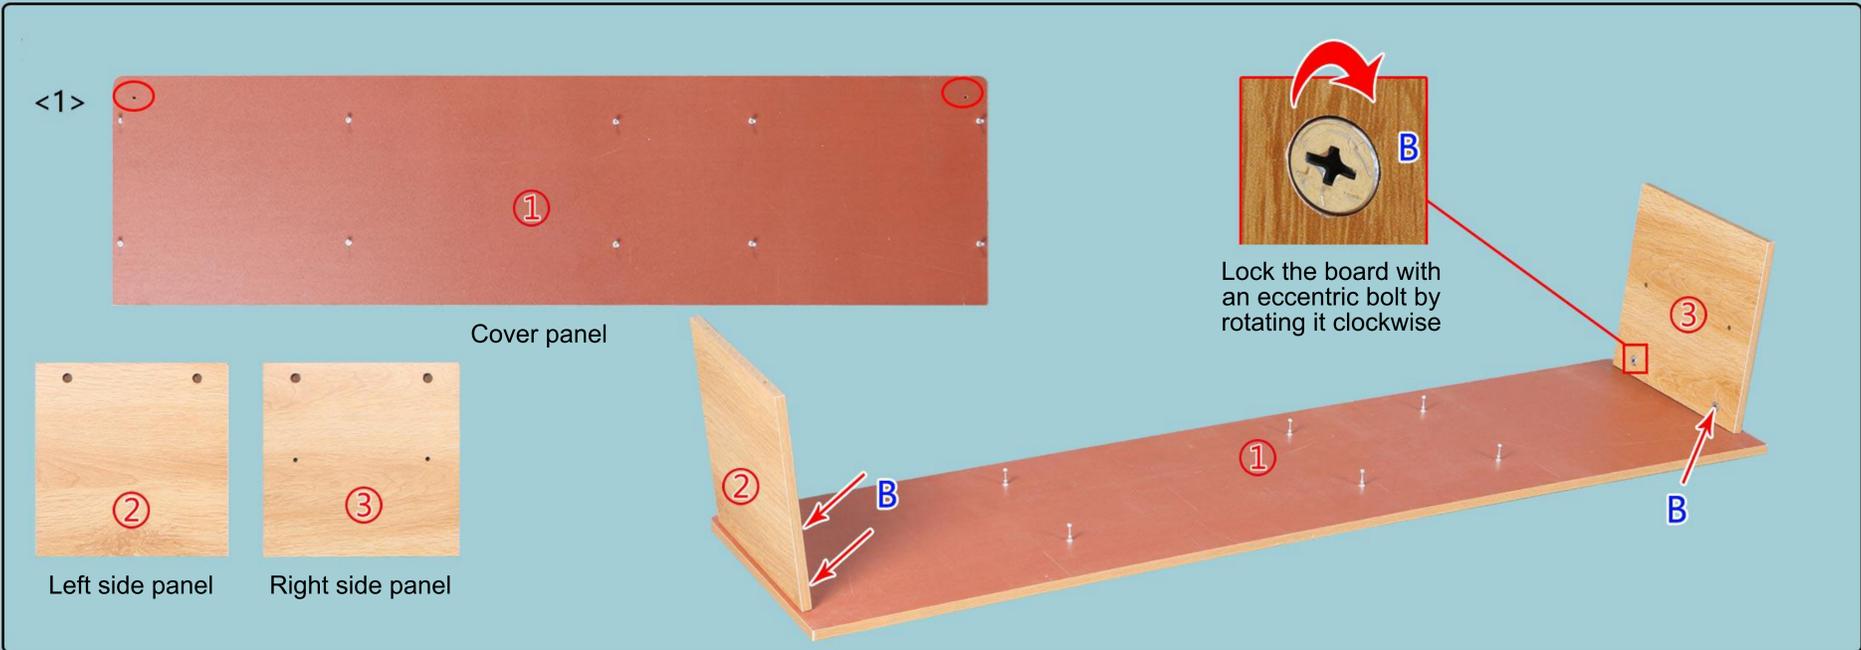

<4>



Large shelf panel

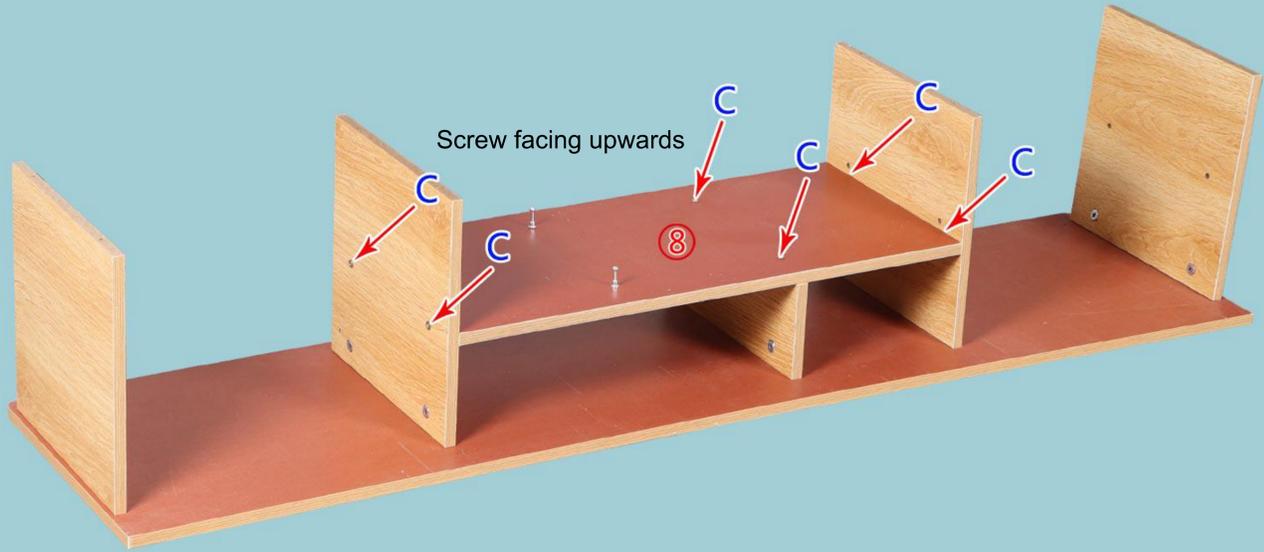

<5>




Arc facing downwards

Small door panel


X 2



<6>

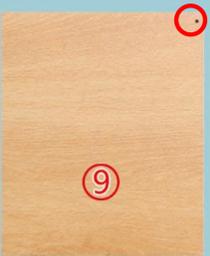

Small shelf panel

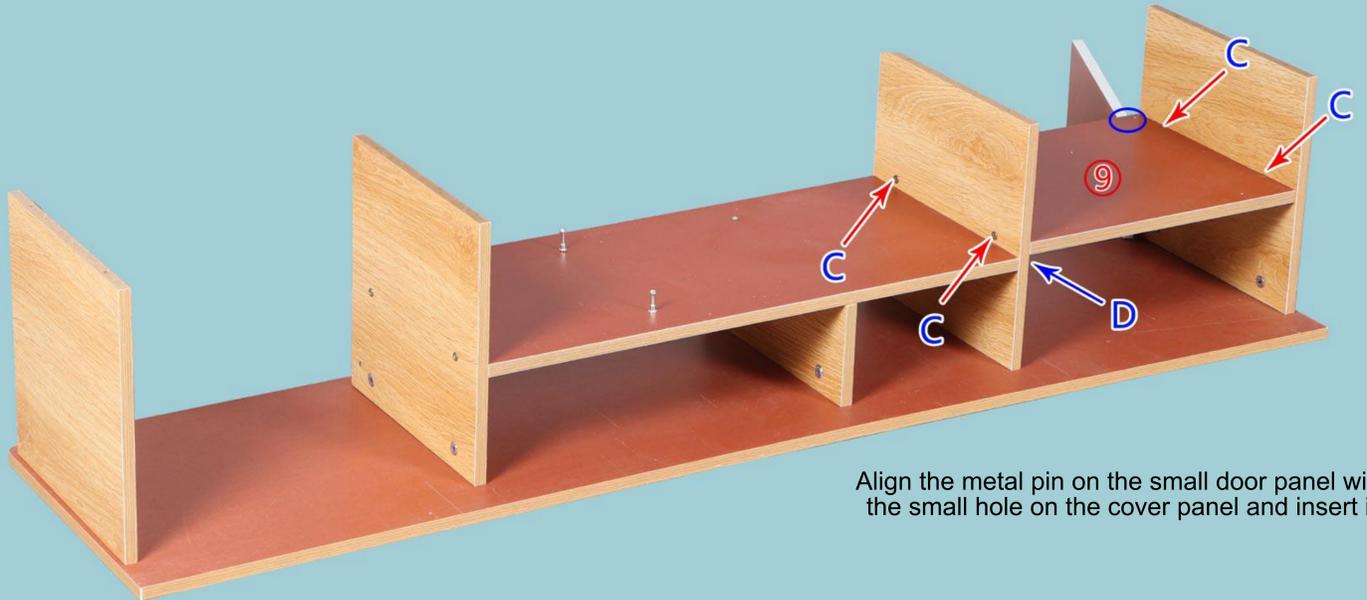


Align the metal pin on the small door panel with the small hole on the cover panel and insert it

<7>




Lower vertical panel

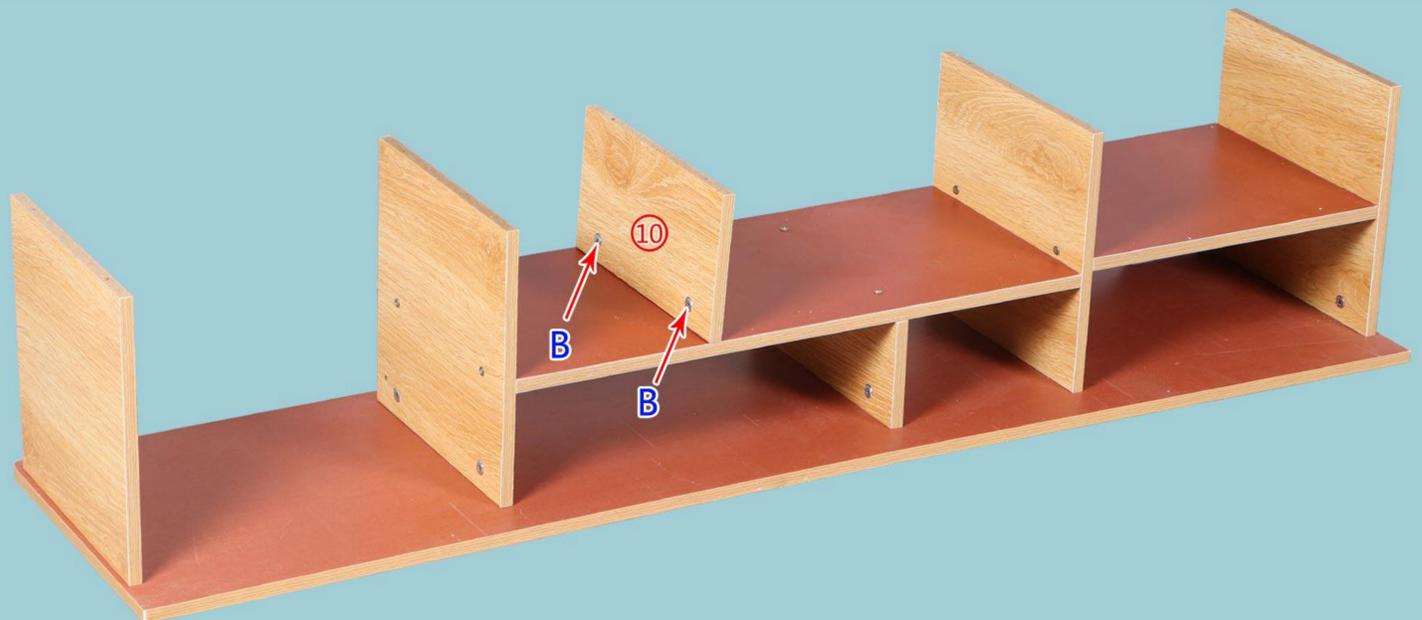

<8>

Arc facing downwards

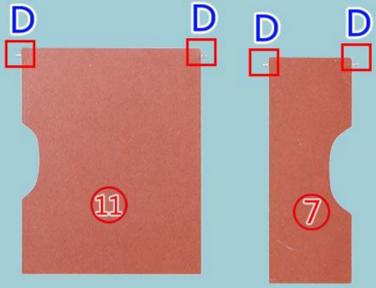

Large door panel

X 2




<9>




Base Board



Foot
X 5

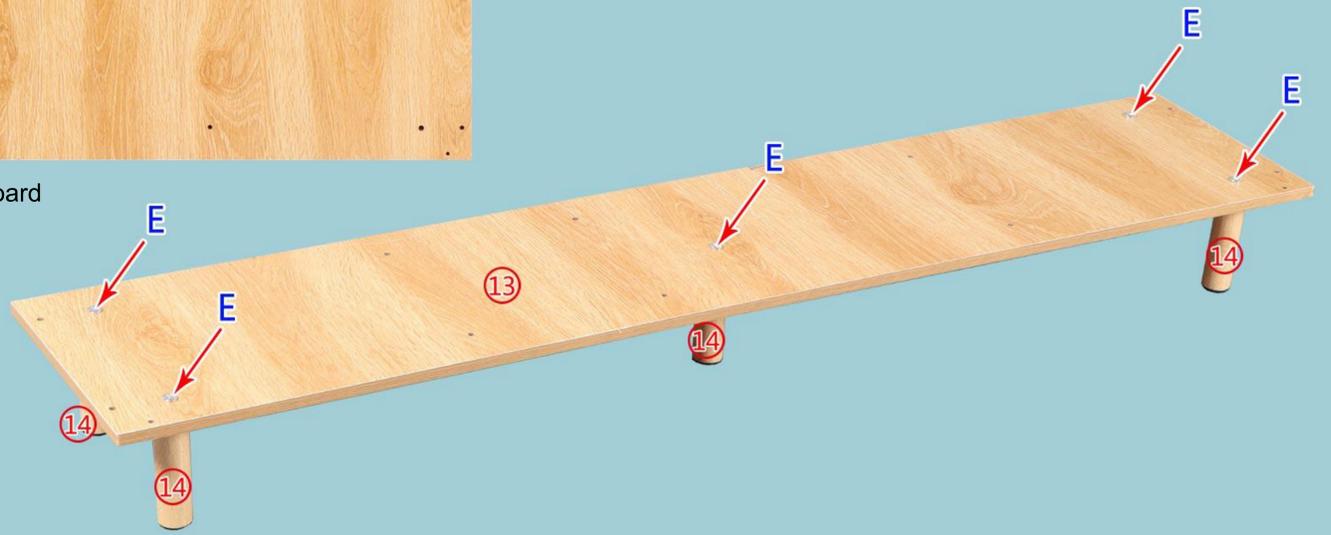

<10>

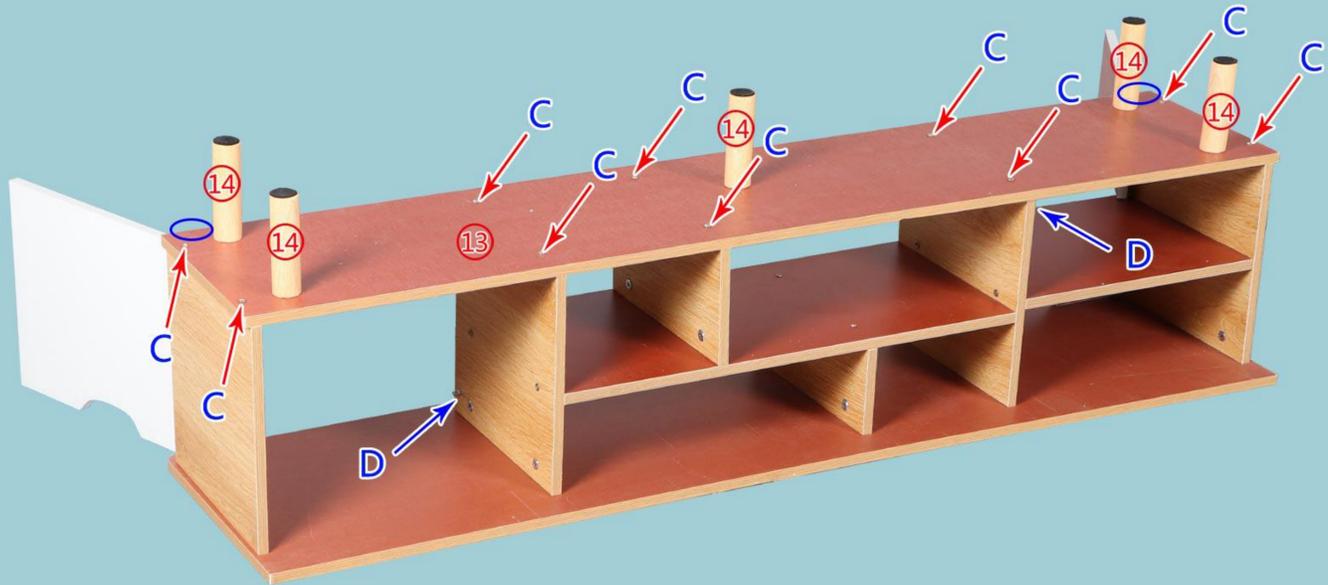


<11>



Back panel

X 2

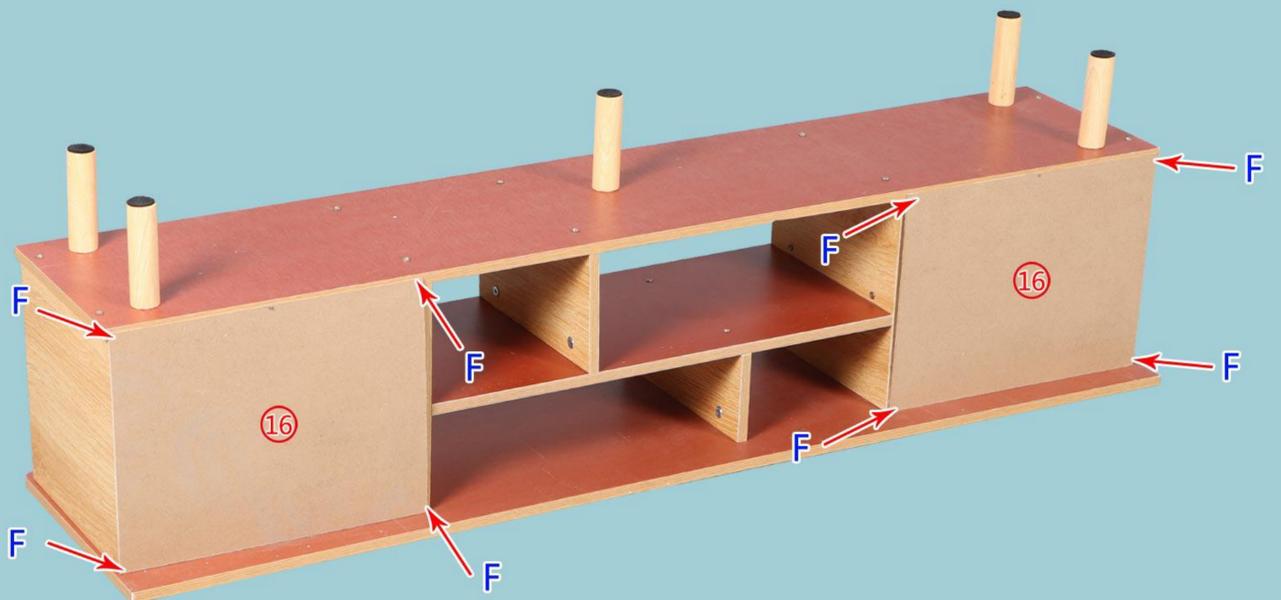

<12>

