

# GAR001 Installation Instructions

	
connector	Corner protector
A*4	B*8

**Kind tips :** Tighten the screws seven times when installing, Tighten it when you're all done!

installation steps:

Board name and serial number:




## Step 1: Whole Parts Installation


<1>



Installation of vertical pole part:

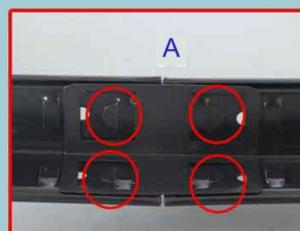

Align the connecting piece with the upper opening of the vertical rod and insert it to connect the two vertical rods

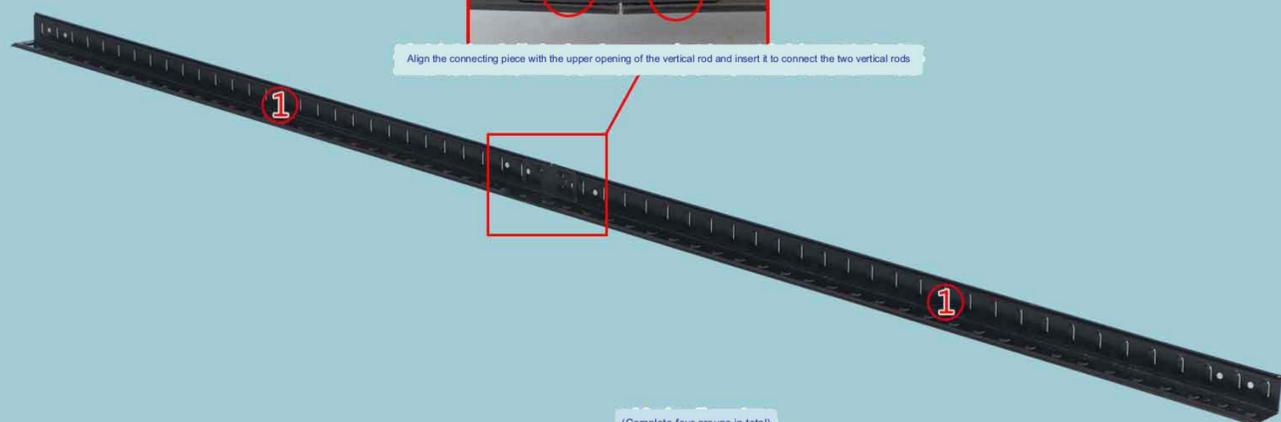

<2>

Combined part installation:

Align the short horizontal bar with the upper opening of the vertical bar and insert it. You can choose the installation position according to your needs. Be careful not to install it in the first opening at the top (a total of ten)

short bar

(A total of two groups are completed)

The installation positions of the two groups of short crossbars must be consistent

<3> straighten the whole

Insert the long bar into the upper opening of the vertical bar and pay attention to the installation position of the short bar

Long bars  
(ten in total)

combination part

combination part

<4>

1. Fold the iron sheets at both ends of the cross bar to 90 degrees

2. Align the iron piece with the middle opening of the long horizontal bar and insert it

Cross bars (five in total)

<5> put the upper layer

Laminates  
(five pieces in total)

<6>

<7> Installation complete

Complete drawing!