

EDB003 Installation Instruction

	
Iron sheets	Smallest self-tapping screw
A*4	B*8

The shape of the board is different, and the installation method is the same!

Reminder: Tighten the screws seven times during installation, and then tighten them after everything is completed!

installation steps:

Board name and serial number



Countertop ①

Wooden leg @x4 ②

laminate ③

Step 1: Overall part installation

<1>



Screw clockwise into wooden legs

Countertop ①

wooden legs (four in total) ②


<2>



laminate



Use the air bubbles in the spirit level to determine if the board is level
Centered bubbles indicate laminate levels

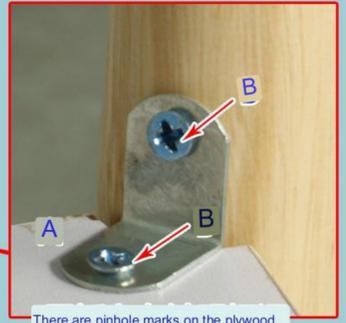

There are pinhole marks on the plywood.

Fix the plywood and wooden legs with iron sheets and minimal self-tapping screws

<3> straighten the whole



Step 2: Installation complete

Complete diagram!

