


BS007 8 Tiers No Drawers Installation Instruction

					
Eccentric screw	Eccentric Bolt	4CM self-tapping screw	Smallest self-tapping screw	angle iron	No trace nail
A*2	B*2	C*35	D*3	E*1	F*1

Reminder: The

Tighten it when you're all done!

installation principle of eccentric parts:


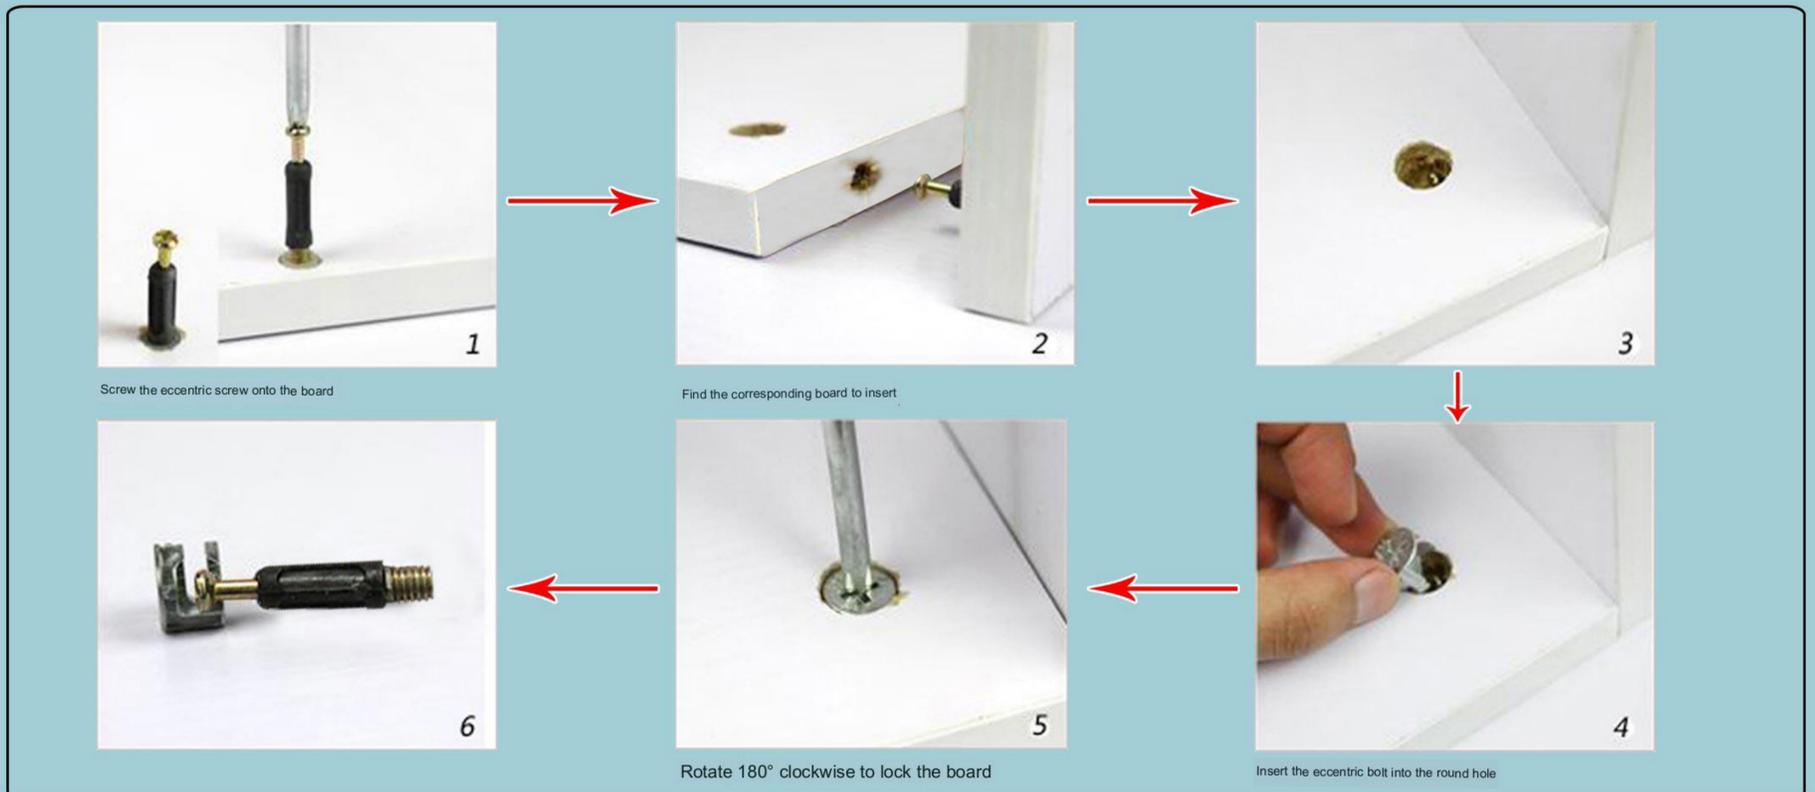


installation steps:




Step 1: Whole Parts Installation


<1>

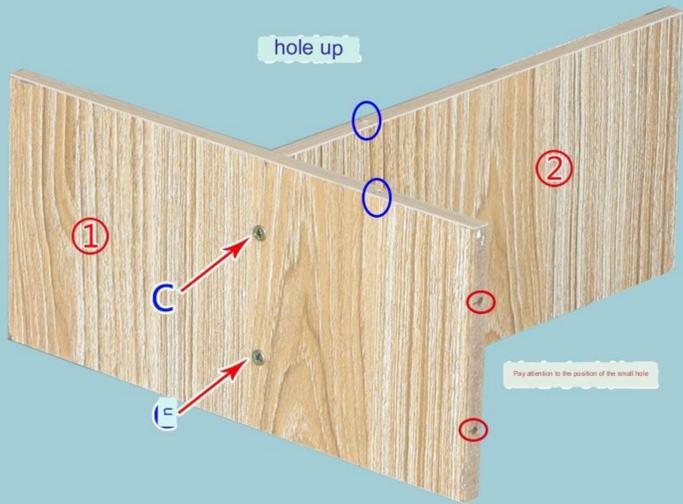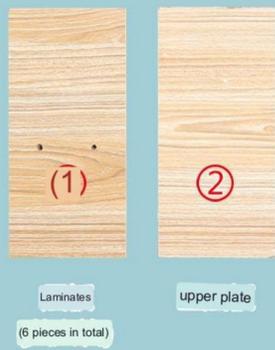


<2>

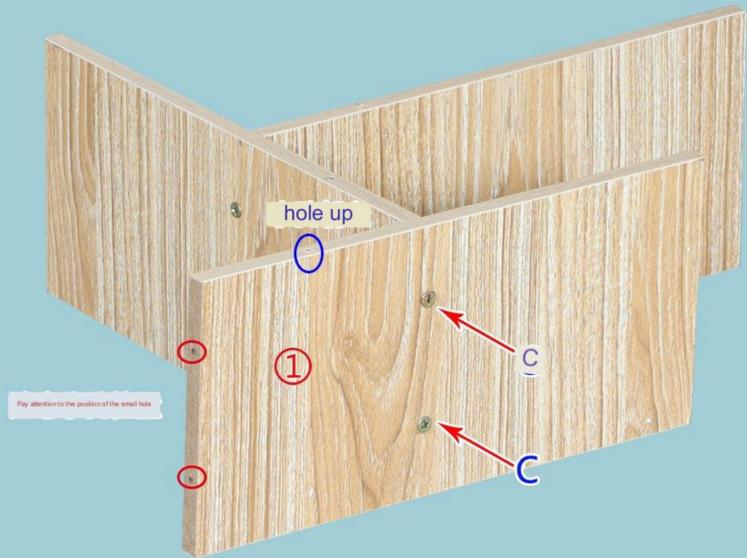


<3>

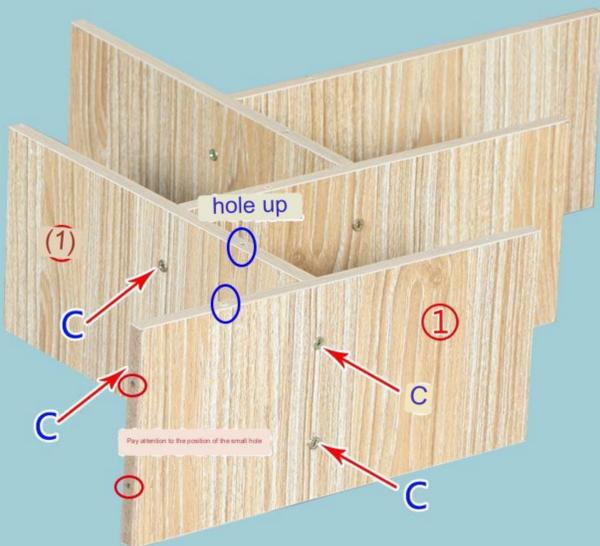


<4>

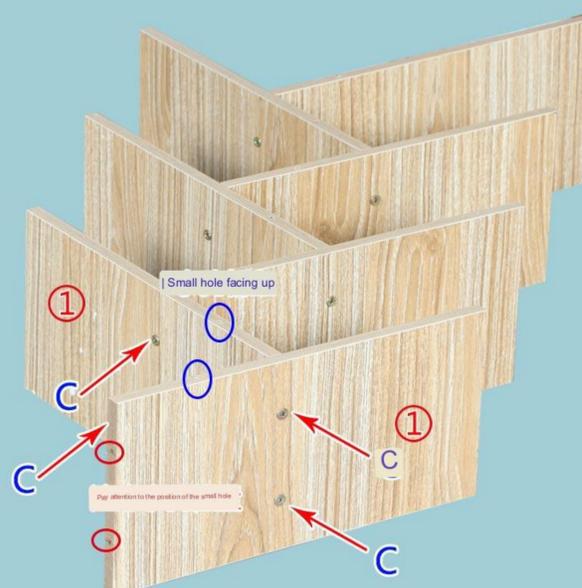


<5>

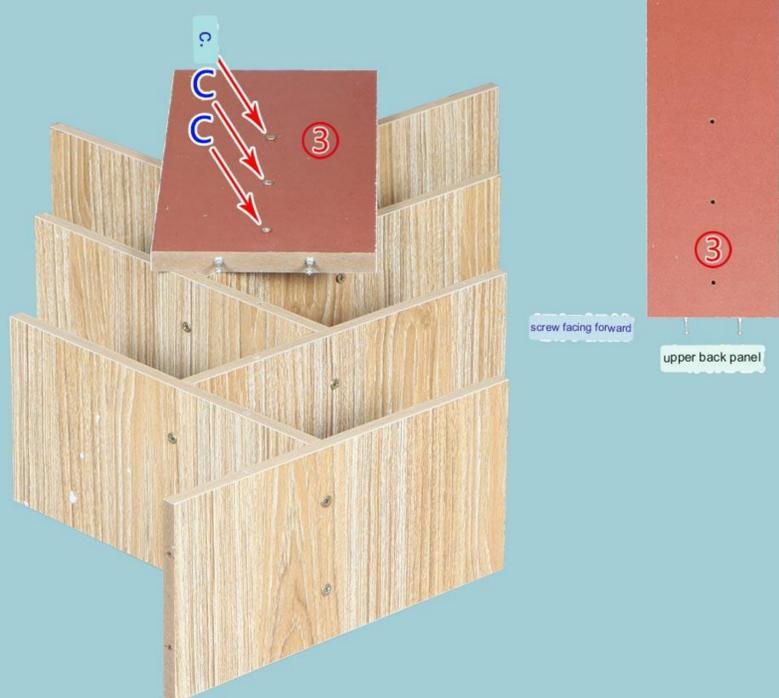


<6> Pay attention to fix the screw first, and then fix the eccentric bolt

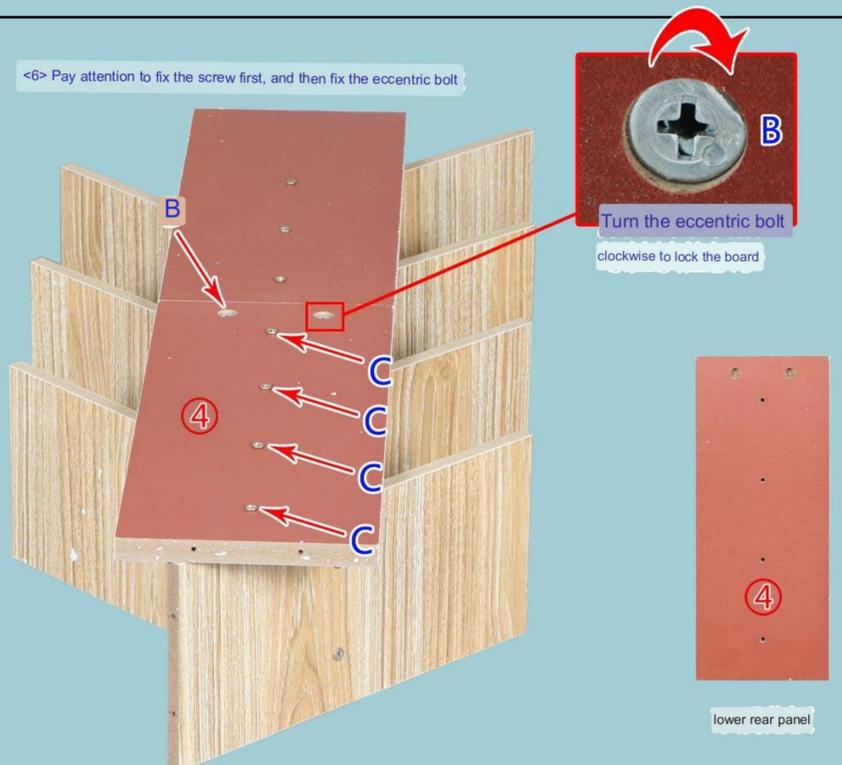


<7> Turn the whole over, face up

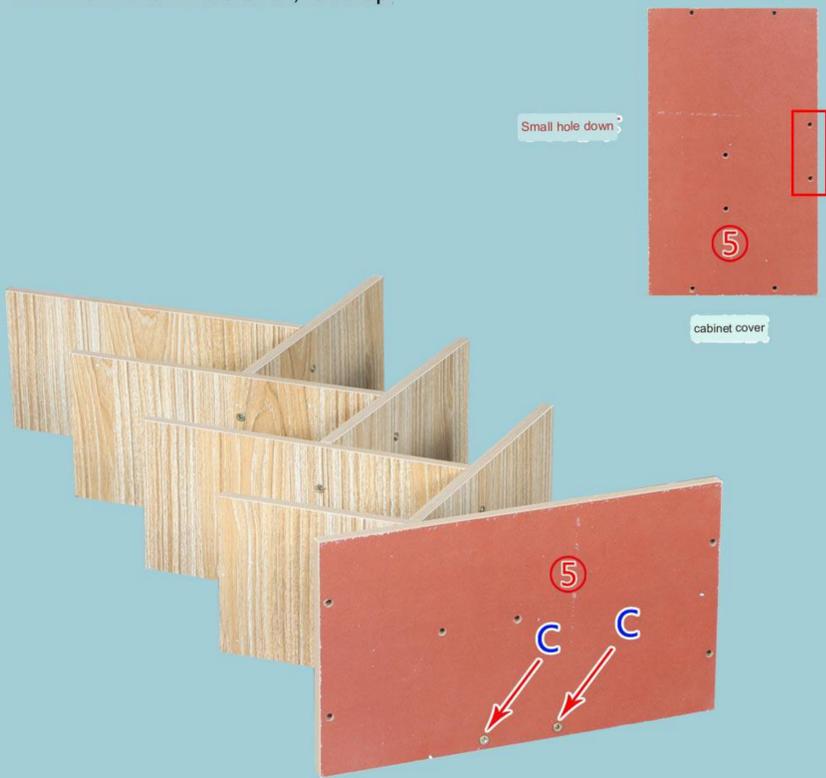


<8>

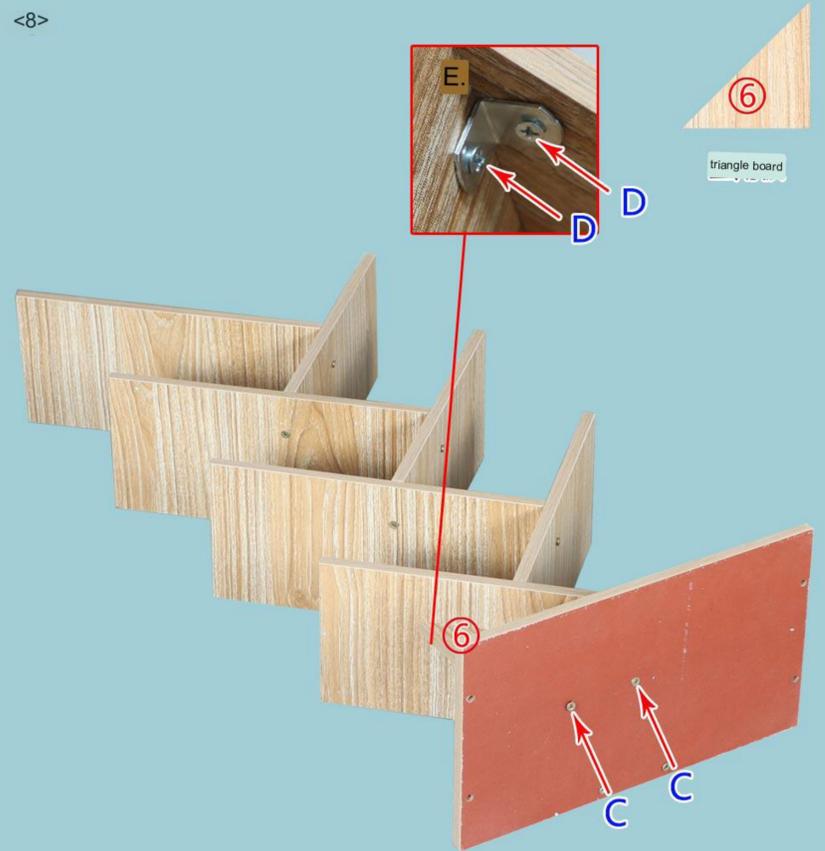


<9>

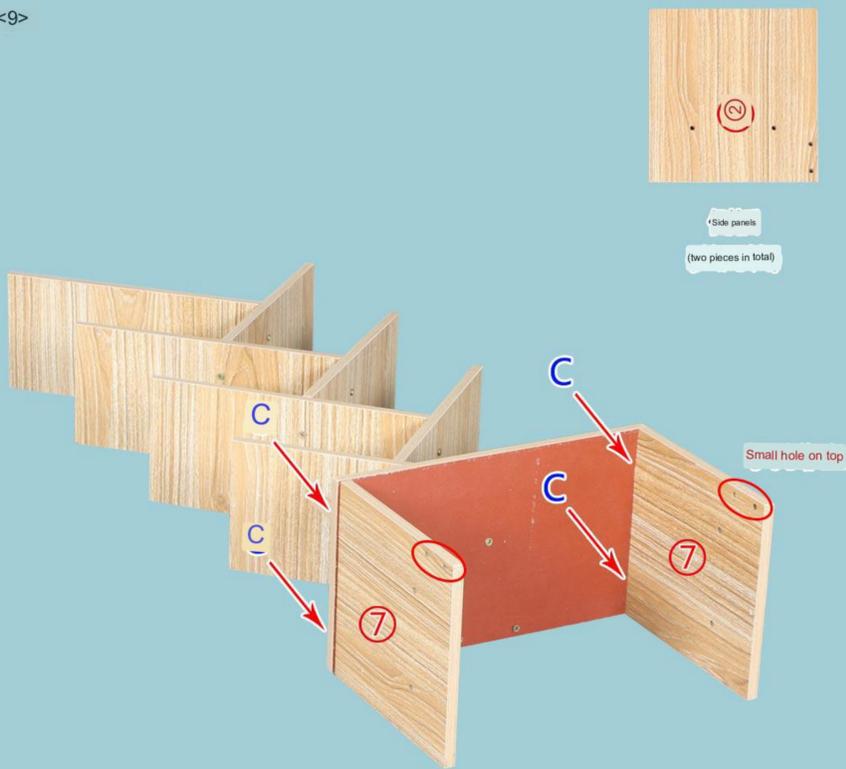

<10>

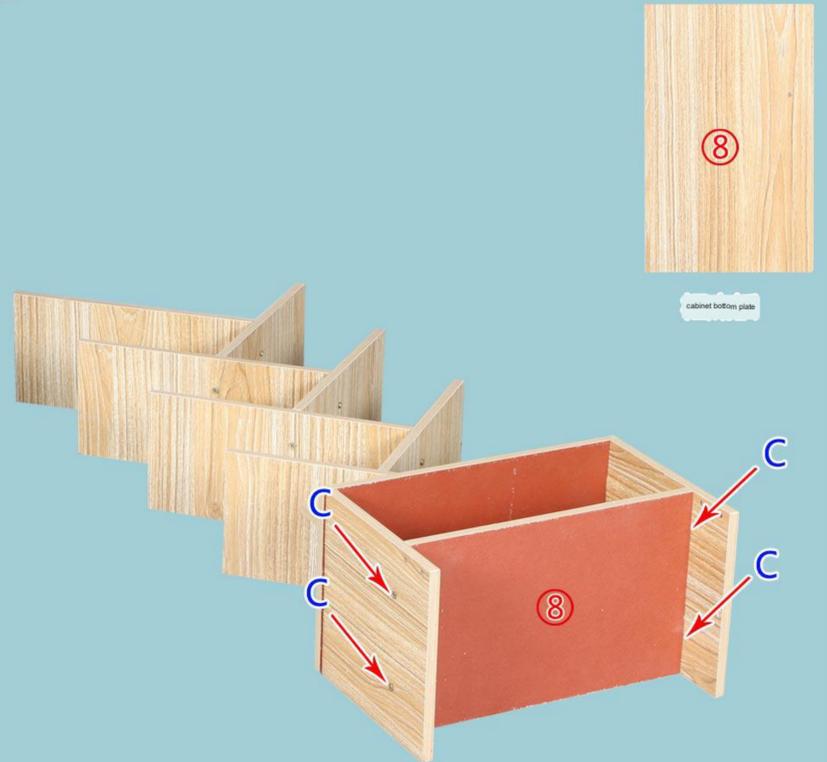

<11>

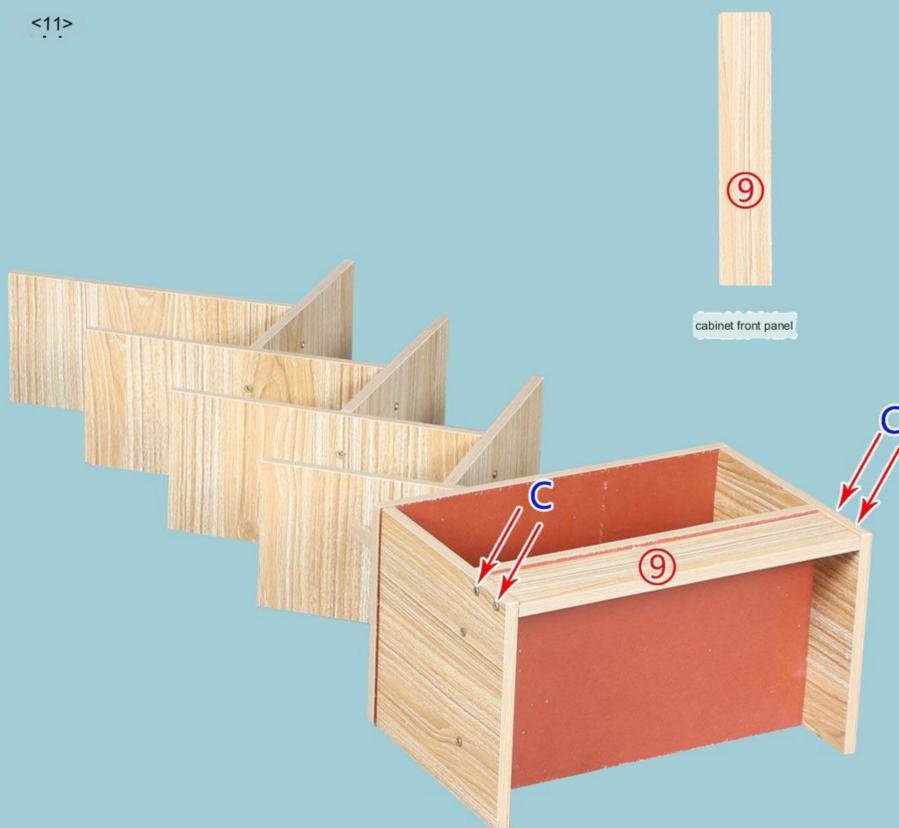

<12> overall alignment

