


ST006 Installation Instruction

	
3CM flat head screw	floor mat
A*8	B*4

Kind tips: Tighten the screw seven minutes during installation Tighten it, and then tighten it when everything is done!


Board name and serial number:

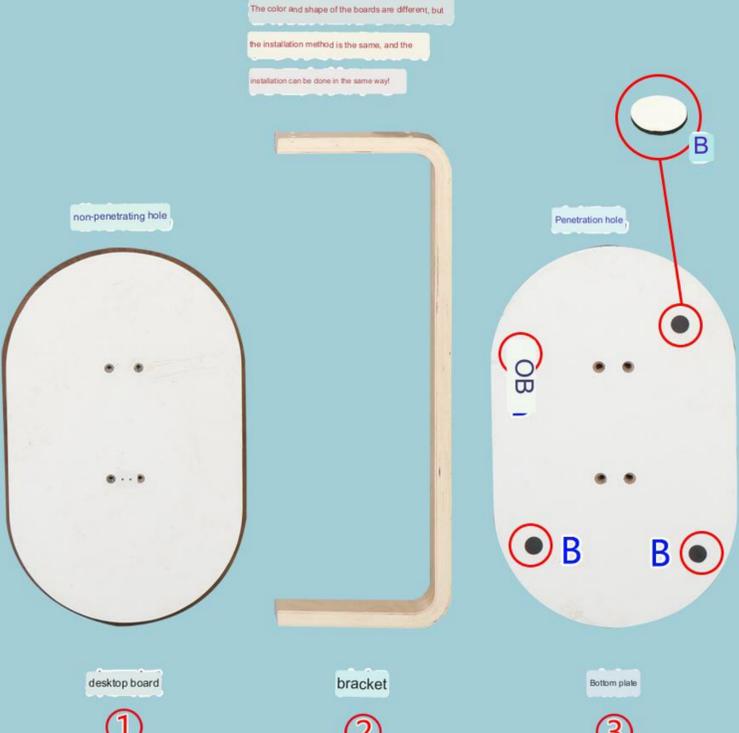

① desktop board ② bracket ③ Bottom plate


Step 1: Whole Parts Installation

<1>

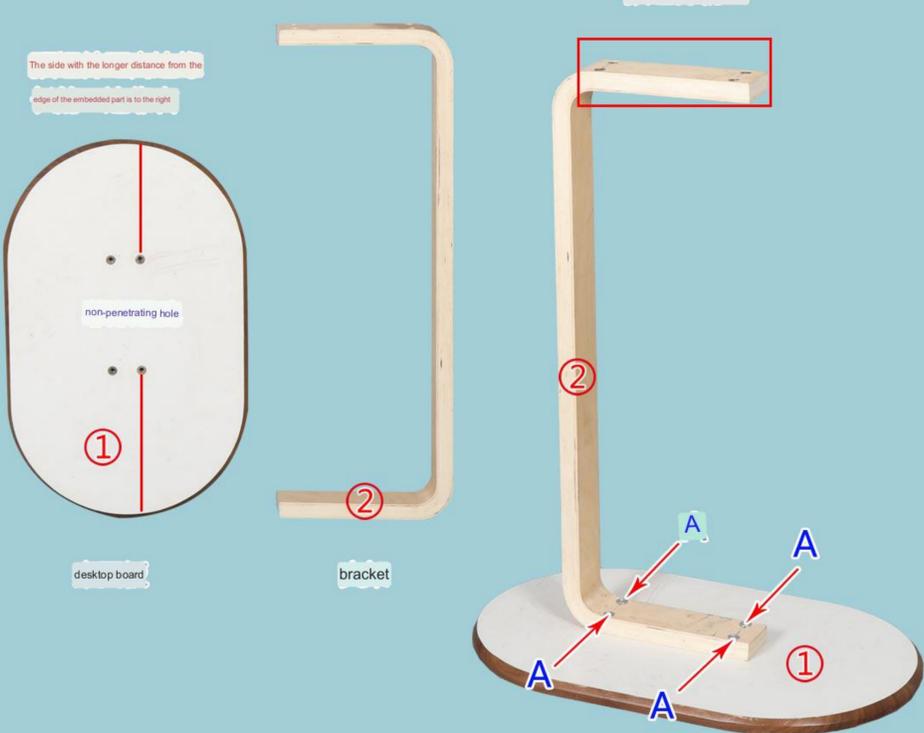

① desktop board ② bracket

<2>

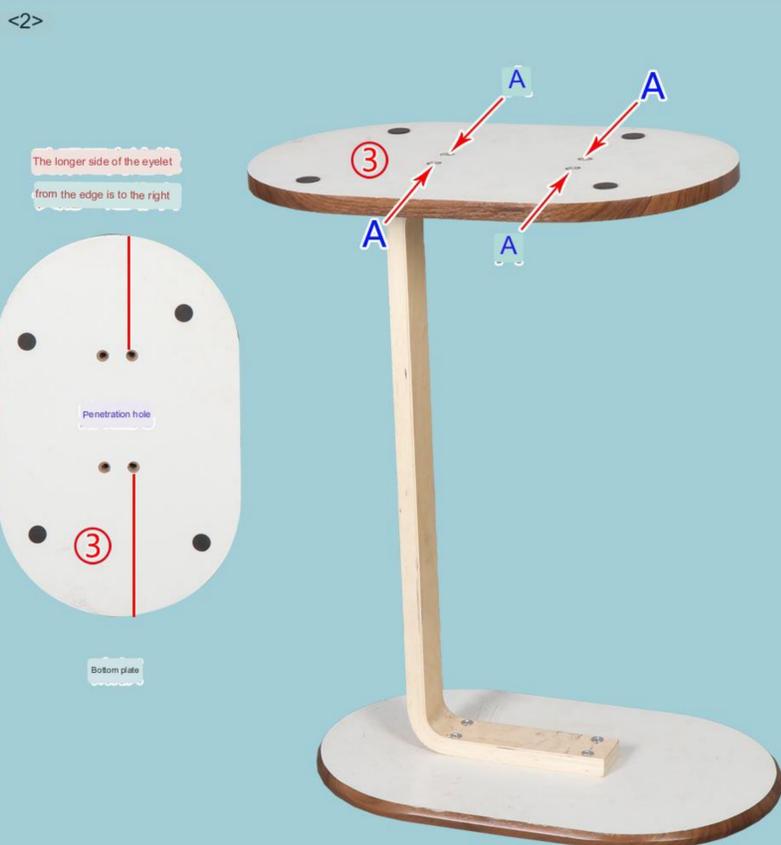

③ Bottom plate

<3> The overall alignment, the installation is complete



Complete drawing!